



- To be installed by an electrician to an electrical box
- Use appropriate screws and anchors where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site
- Should be used exclusively as a lamp and not as a shelving, display or hanging unit

lamp weights

4-9 lbs.




PLEASE NOTE


THIS IS AN EXAMPLE OF THE MILE 01.

HOWEVER, THE MILE 02 AND 03 FOLLOW

THE SAME INSTALLATION PROCESS.

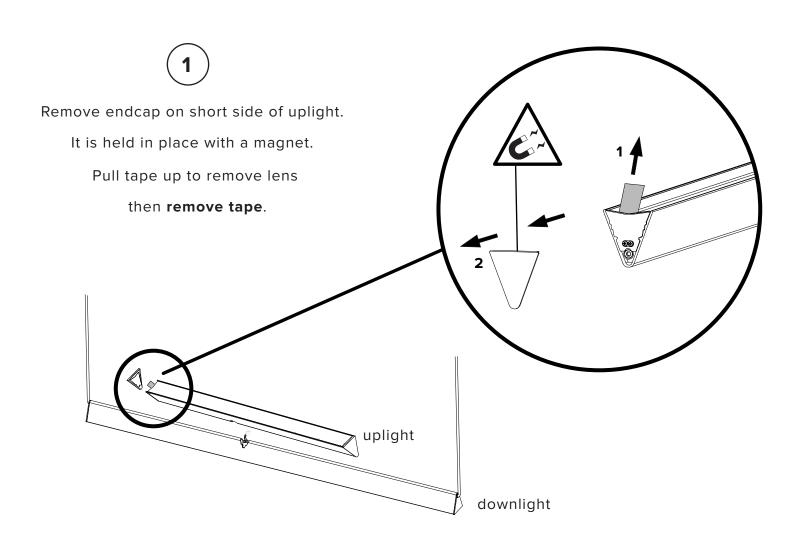



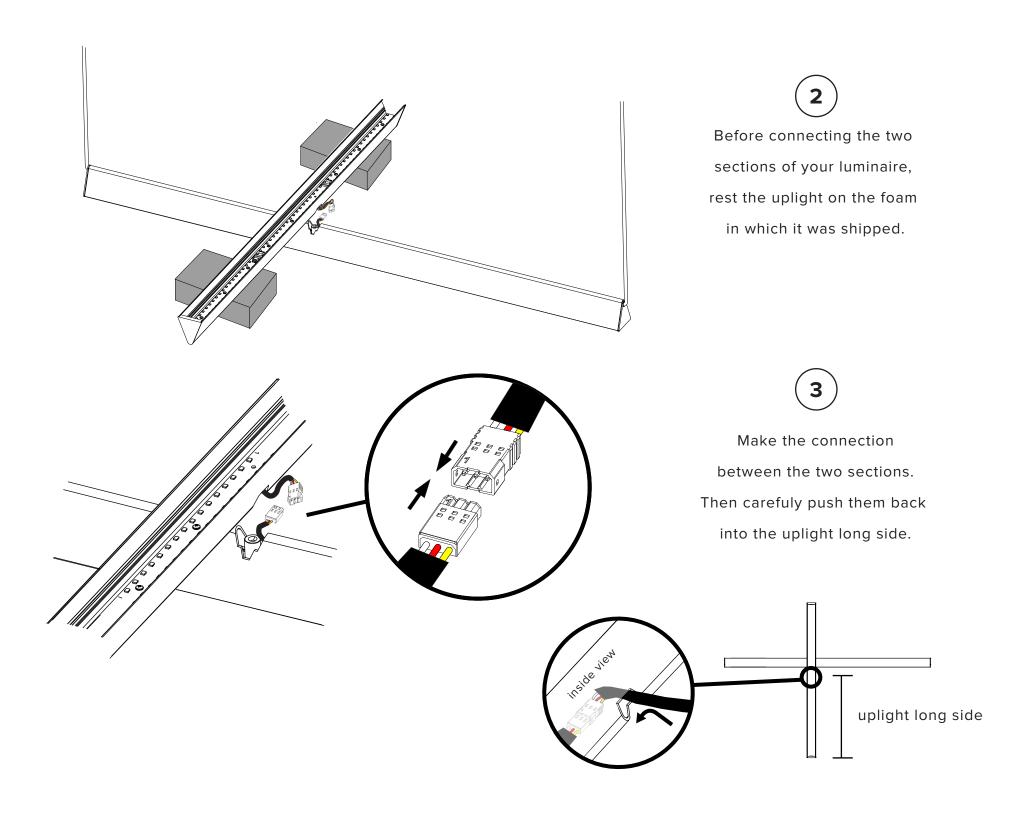




Reorientate uplight into the slot of the downlight.

Screw it into place with provided allen key.



While you bring the two extrusions together ensure to place the downlight wires next to the anchor. Make sure the wire does not sit on top of the anchor and that it does not get pinched or scuffed.

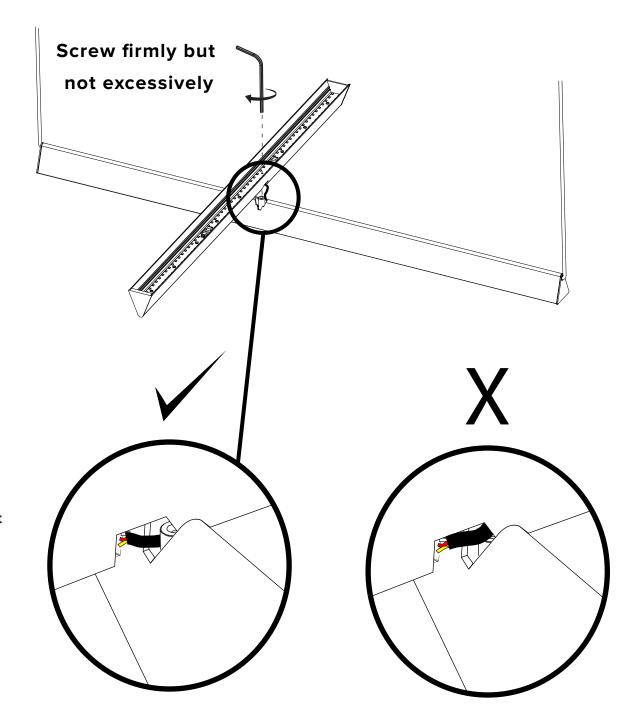





Slide lens into opposite endcap (1)

then snap lens back into slots (2).

Replace endcap (3).

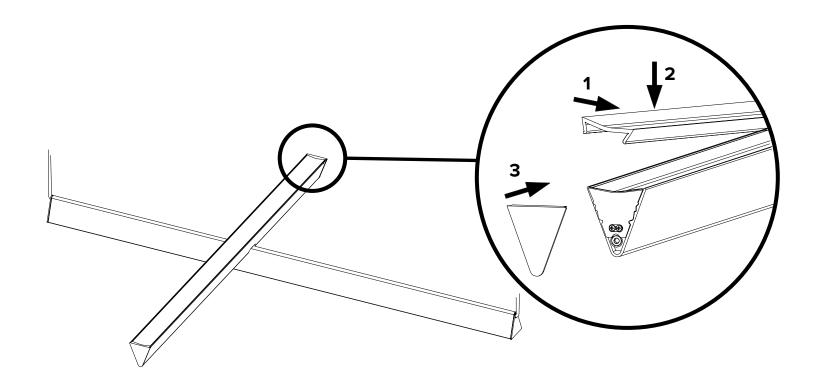


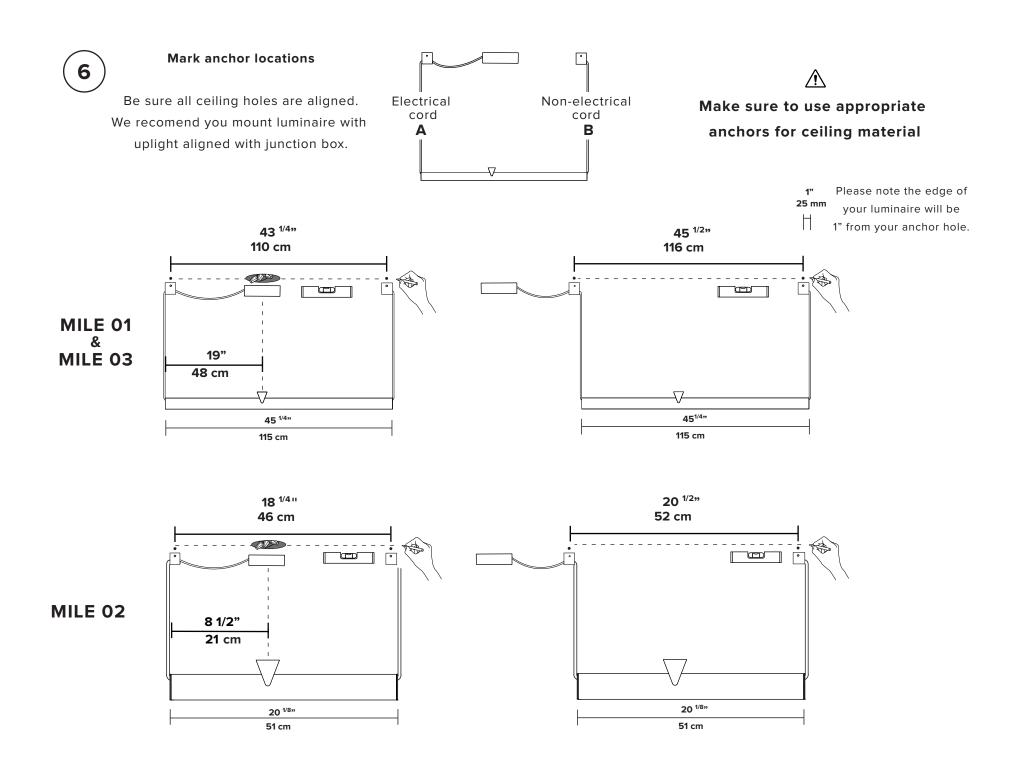




Mount double hole anchor with electrical cord.

Pull wires to straighten them before mounting them.

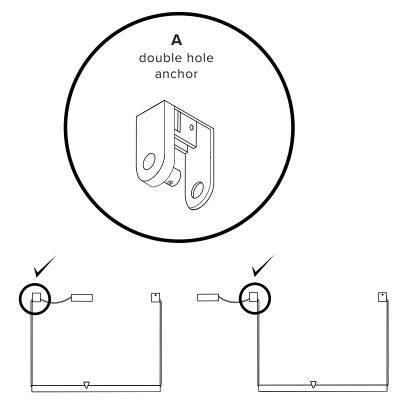


\triangle


Make sure to use appropriate anchors for ceiling material

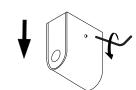



Remove or install cover by screwing and unscrewing set screw.

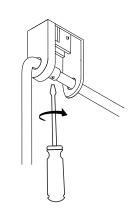


Screw gently, but firmly

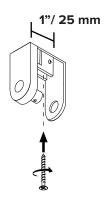

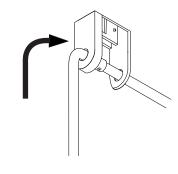

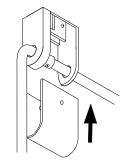


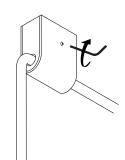




Mount single hole anchor with non-electrical cord.

Pull wires to straighten them before mounting them.

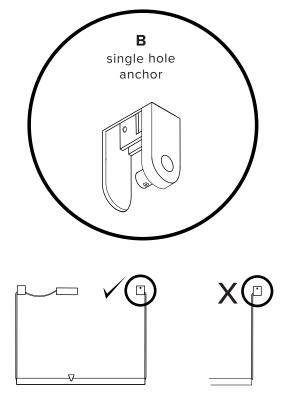





Make sure to use appropriate anchors for ceiling material

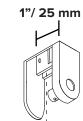







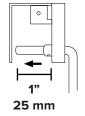


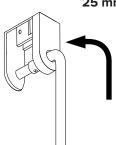

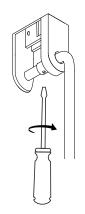

Remove or install cover by screwing and unscrewing set screw.

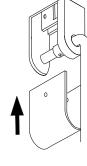

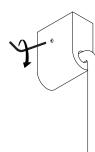

Screw gently, but firmly

INSTALL EXTENSION HARNESS TO LINE/MAIN VOLTAGE



Open canopy cover.
It is held in place with
2 screws.





Unscrew provided driver housing. It is held in place by two screws. Place the housing aside.




Connect the extension harness to the junction box if necessary.

The harness is shipped with the canopy.

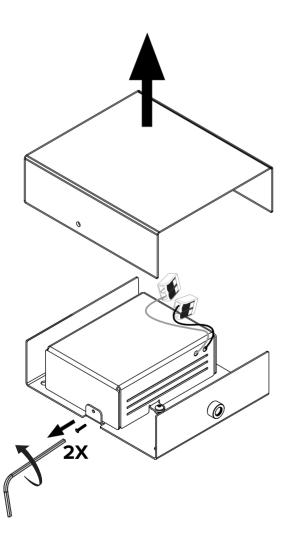

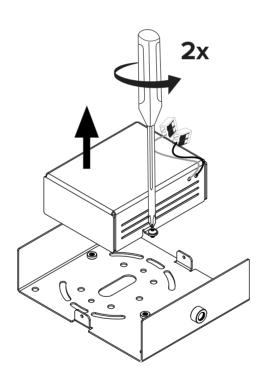

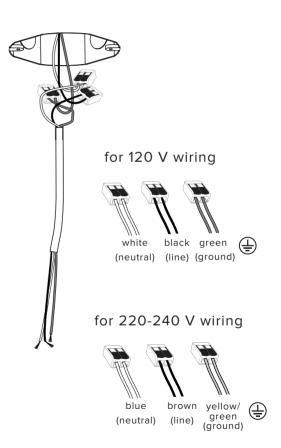


MOUNT CANOPY BRACKET




The canopy can either be mounted to the junction box or directly to the ceilling using appropriate holes.

To junction box

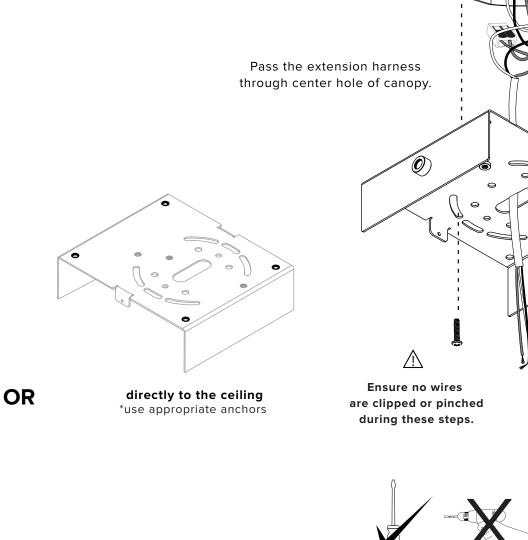


CONNECT EXTENSION HARNESS (ELECTRICAL BOX) TO DRIVER'S AC INPUT WIRES

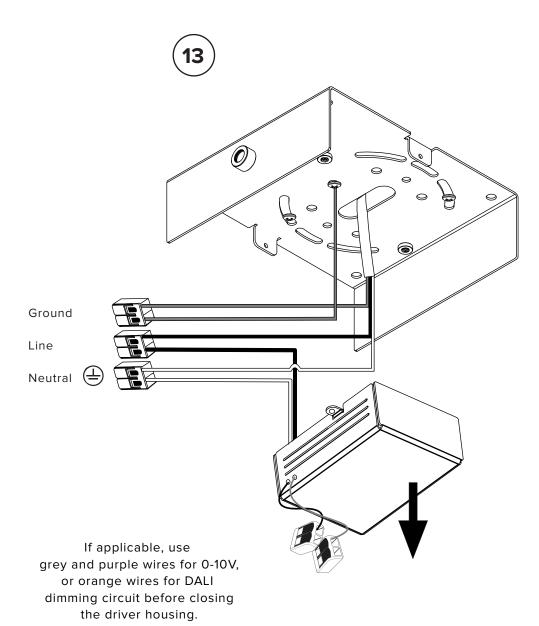




for 120 V wiring

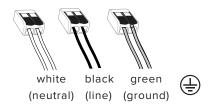


for 220-240 V wiring

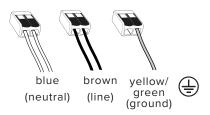



Carefully close driver enclosure. It is held by two screws.

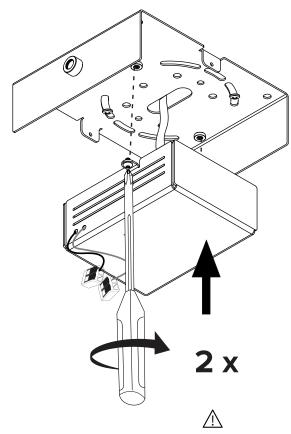



Ensure no wires are clipped or pinched during these steps.



Feed luminaire cord into the canopy strain relief.


Tighten strain relief set screw when desired cord lenght is reached.

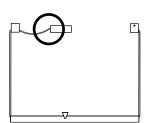

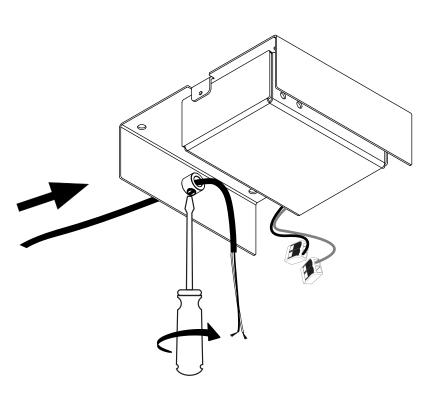

*screw gently but firmly

CONNECT LUMINAIRE CORD TO DRIVER DC WIRES

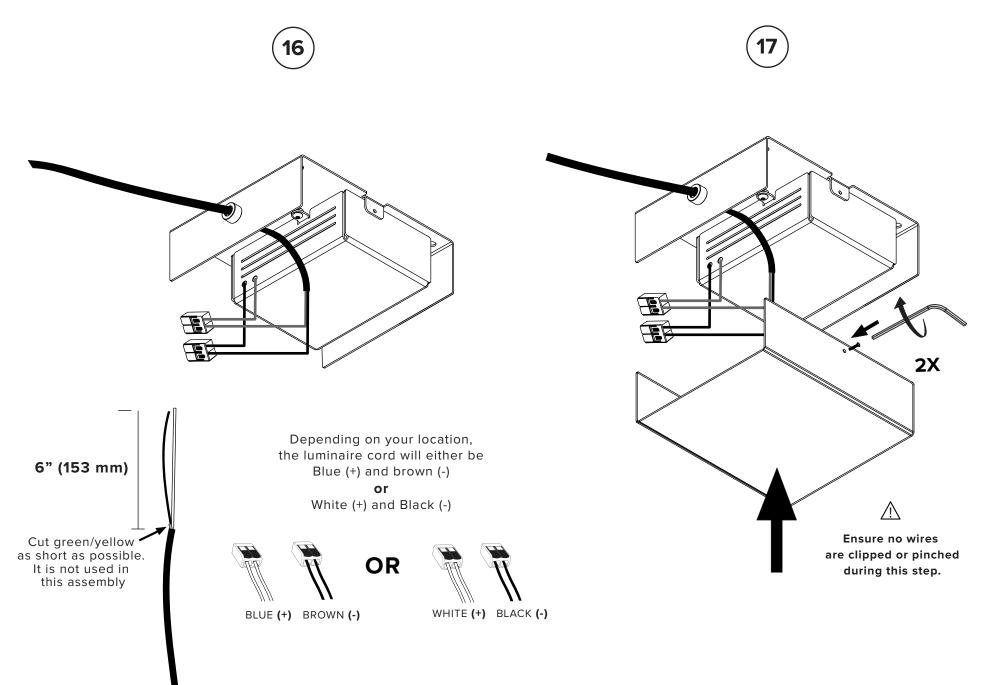

LEVELING THE LUMINAIRE





Before adjusting wire length or interior weight, carefully attempt to balance the luminaire by hand. The wire's flex can allow micro adjustments of their own.

Endcap is held in place with a magnet.



if necessary level downlight by adjusting length of wires.

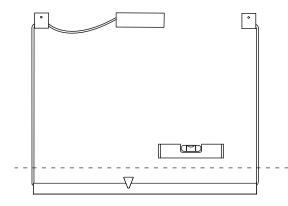

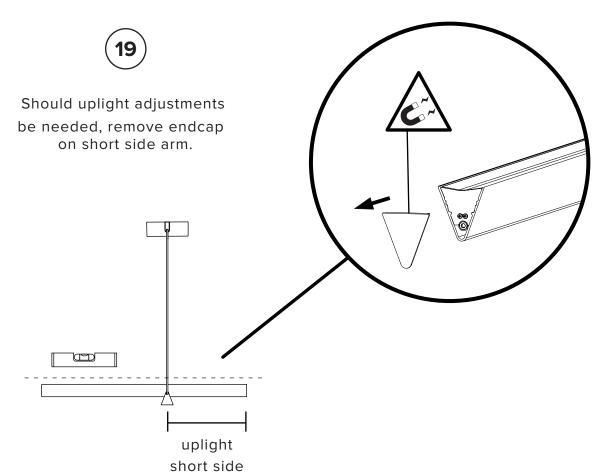




The adjustment screw holding the balance weight is now visible.


Use supplied allen key to screw weight in or out depending on balance.



Note that the endcap affects final balance of luminaire!

Luminaire will not appear balanced until the cap is in place.

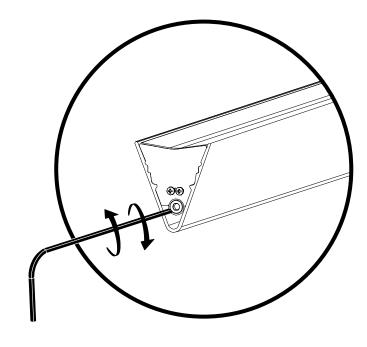

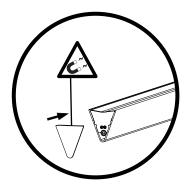

Replace endcap when adjustments are complete

