
MILE 04 A,B,C 120V

(phase and 0+10V dimming)
Plenum or remote installation

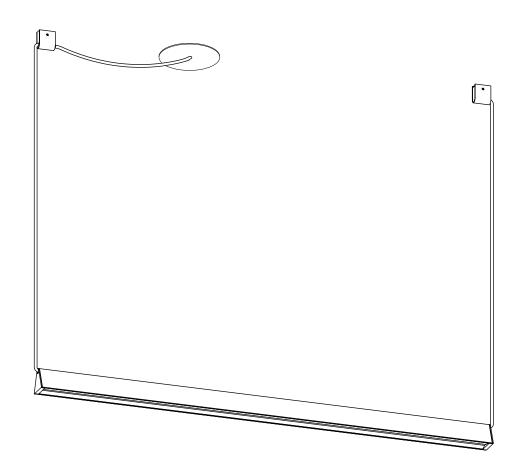



- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws and anchors where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site







Never turn on power supply until installation is completed



Remove Octobox cover plate and strain relief plate. It is held in place by two screws.

Refer to: Annexe A (phase dimming) - page 8 Annexe B (0-10V) - page 14

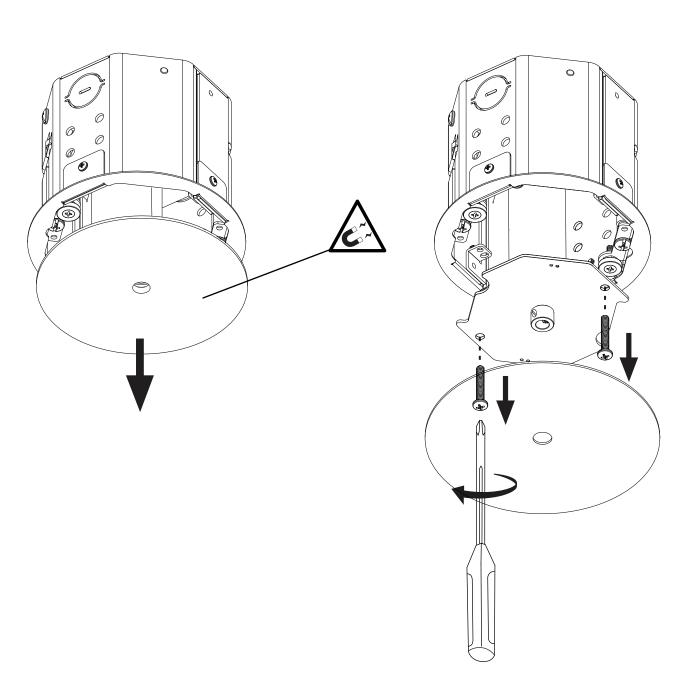


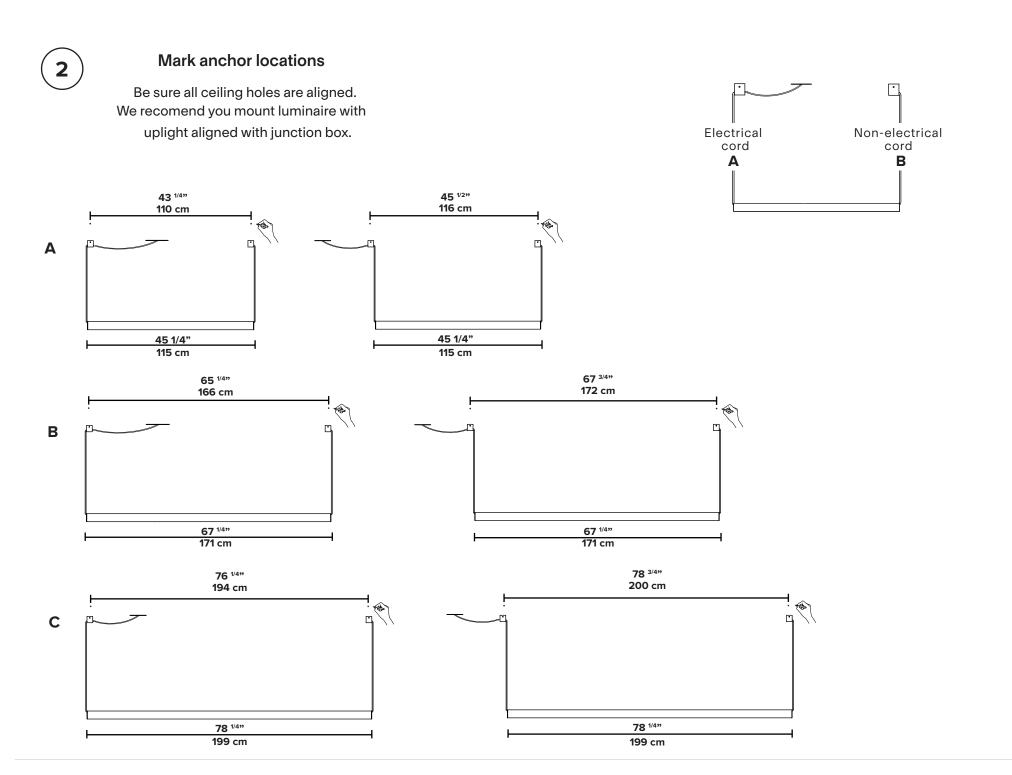




Mount double hole anchor with electrical cord

Pull wires to straighten them before mounting them.

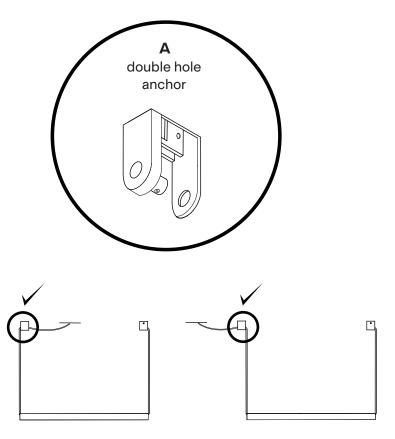

\triangle

Make sure to use appropriate anchors for ceiling material

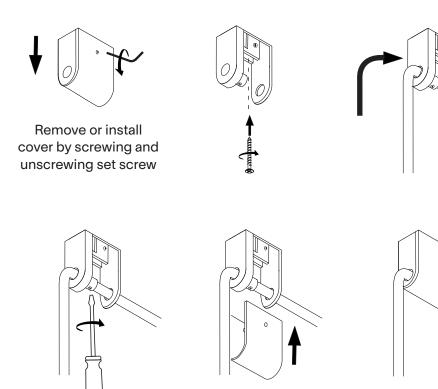


Screw gently, but firmly




Mount single hole anchor with non-electrical cord


Pull wires to straighten them before mounting them.

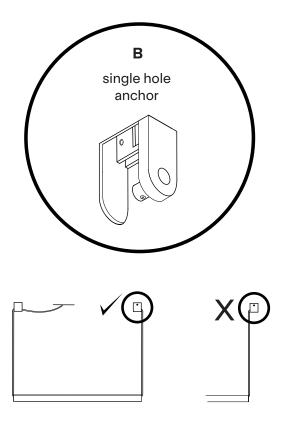




  
Make sure to use appropriate anchors for ceiling material






  
Remove or install cover by screwing and unscrewing set screw



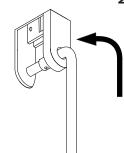





Screw gently, but firmly

 

Steps to be completed AFTER steps in recessed canopy annex

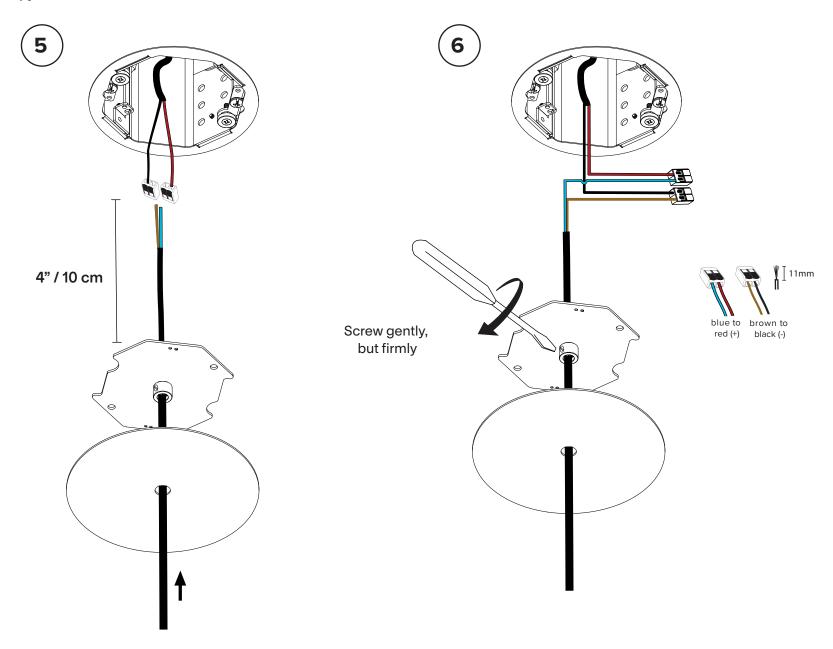

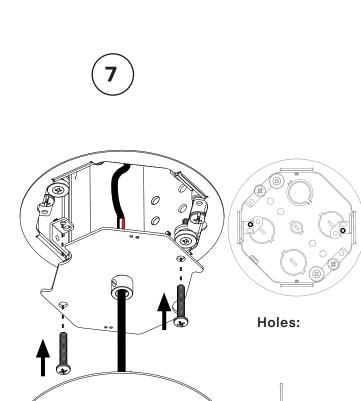









Levelling the luminaire



Before adjusting wire length or interior weight, carefully attempt to balance the luminaire by hand. The wire's flex can allow micro adjustments of their own.

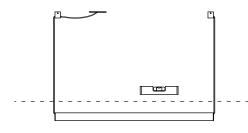


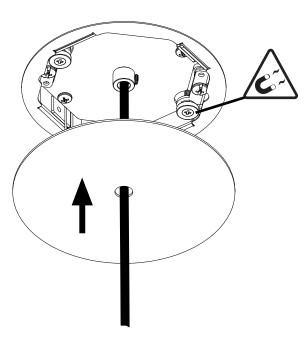

Make sure cover plate is centered on the junction box

RECESSED CANOPY ANNEX A


Octobox with auxiliary box (phase and 0+10V dimming)
Plenum installation

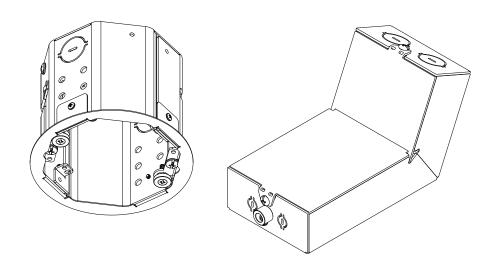





- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws where necessary
- For non-insulated hollow ceiling
- Wires for plenum not provided




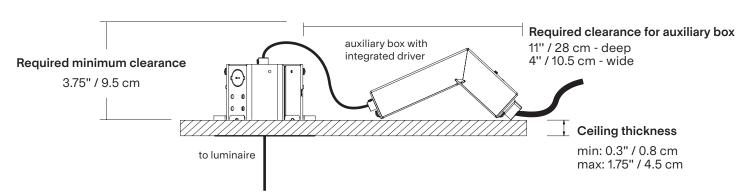


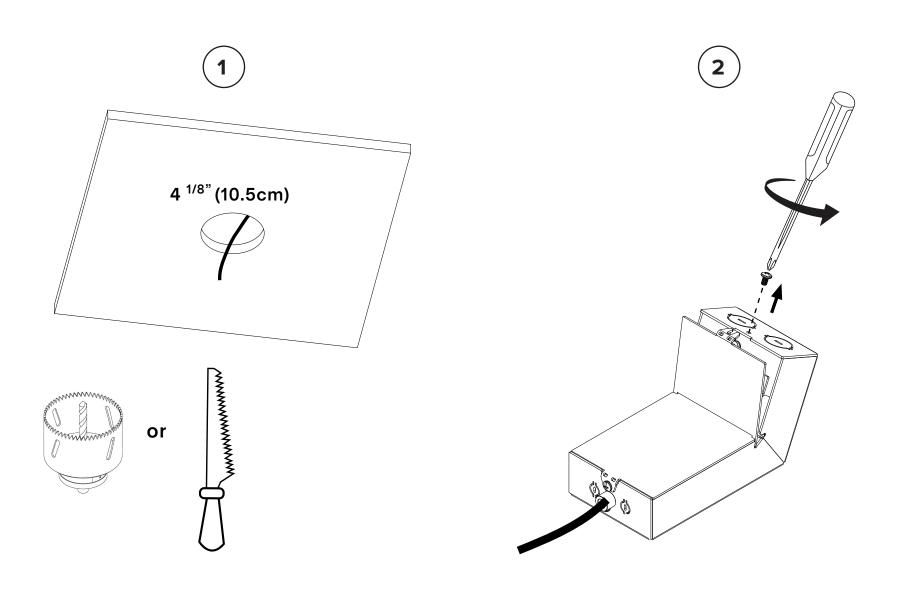


PHASE DIMMING REPRESENTATION

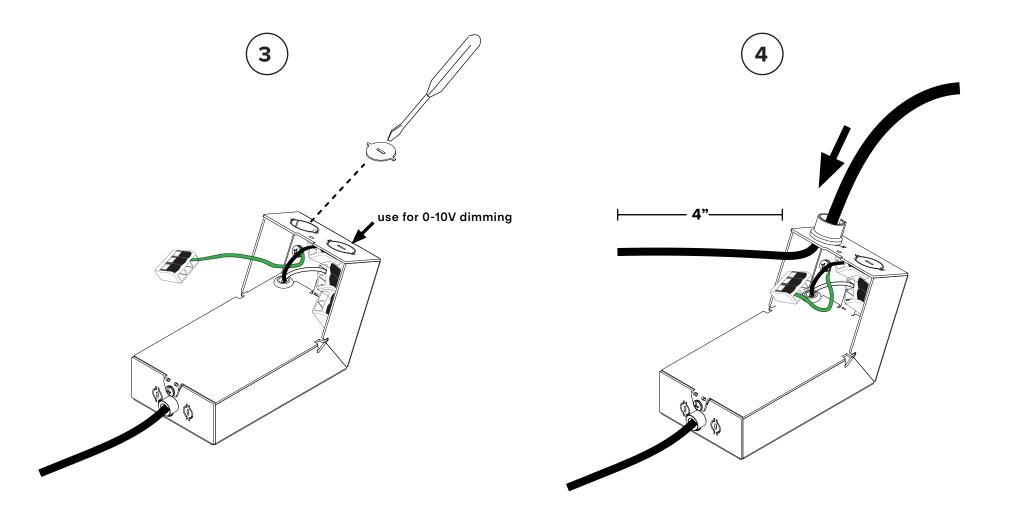


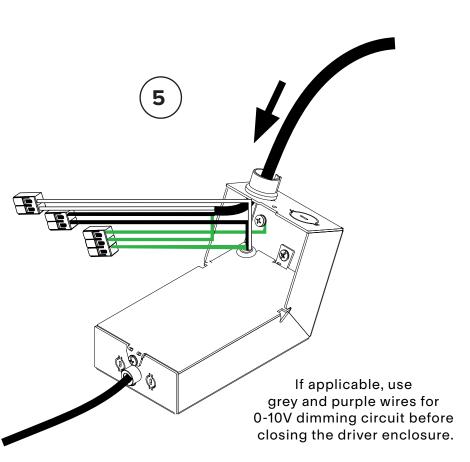


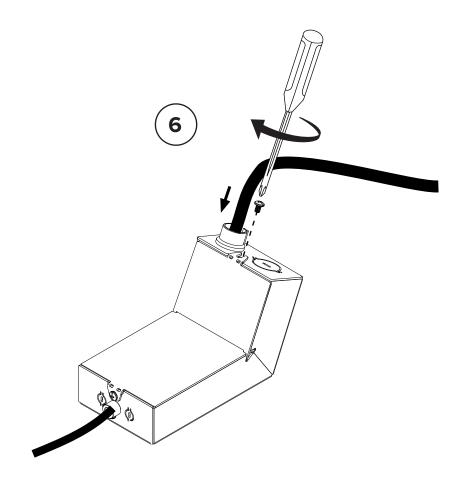

Cap wires individually if not used.

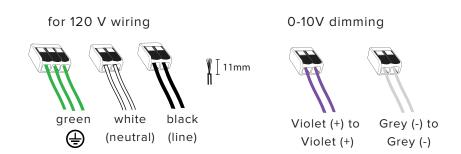

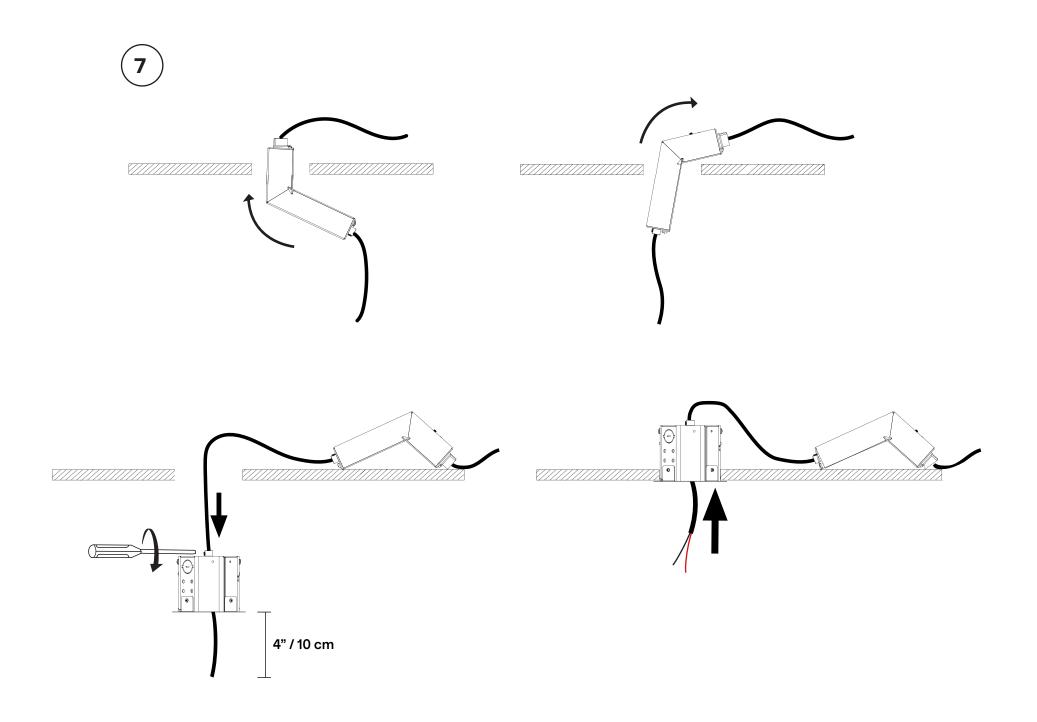


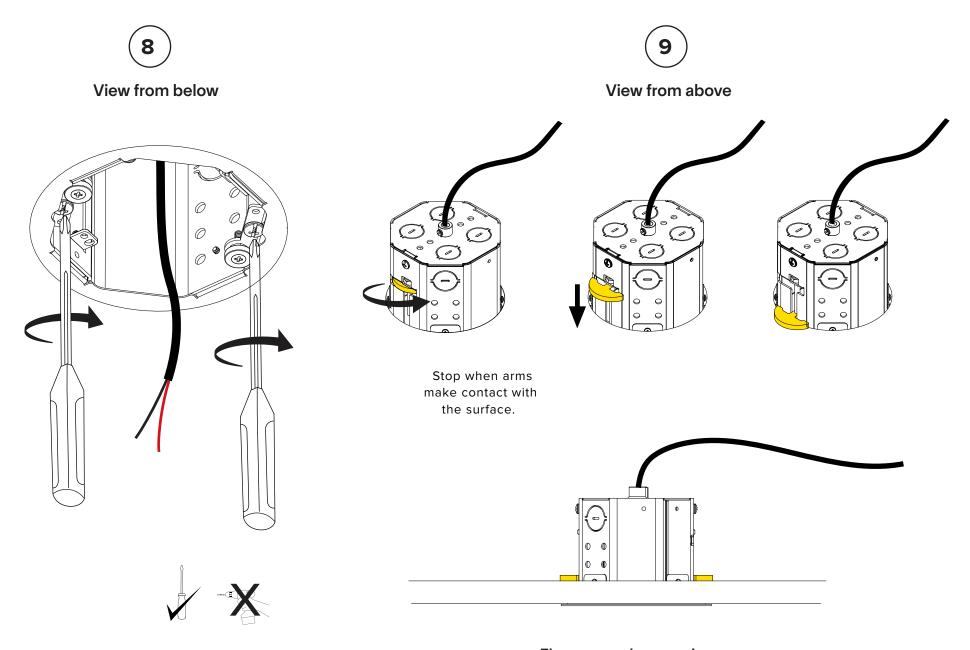

The recessed canopy is now installed, return to luminaire installation steps and follow the instructions (page 3).

RECESSED CANOPY ANNEX B


Octobox with remote driver (phase and 0-10V dimming) Remote installation

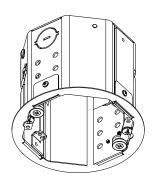





14

- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws where necessary
- For non-insulated hollow ceiling
- Wires for plenum not provided

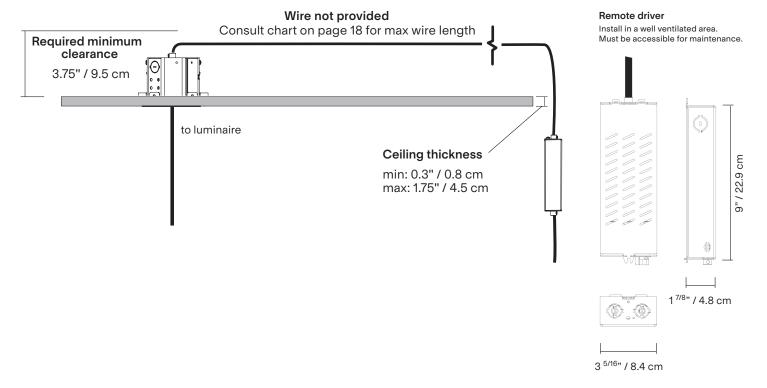



lambert&fils

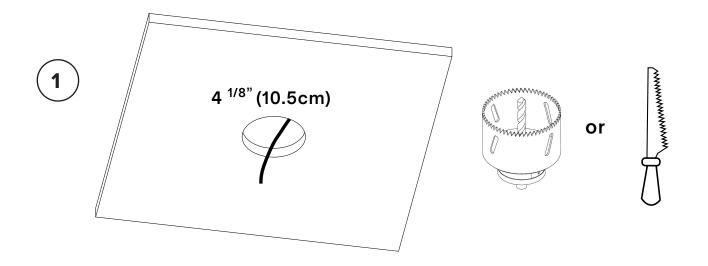


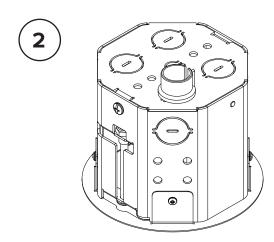

Install suitable connectors for your installation (not included)

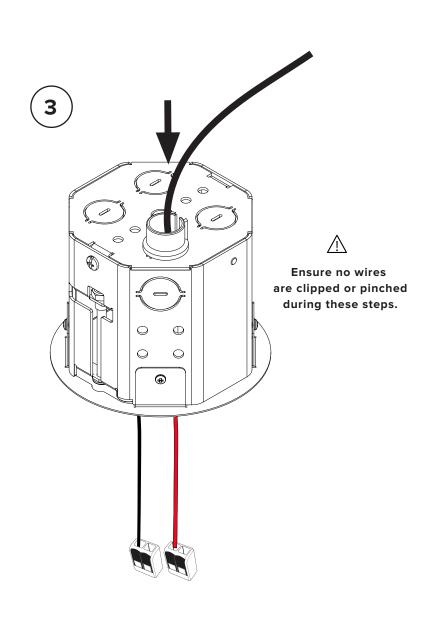

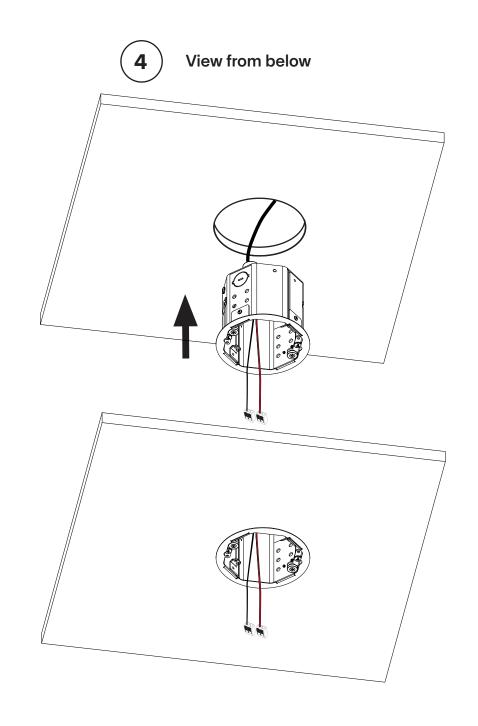

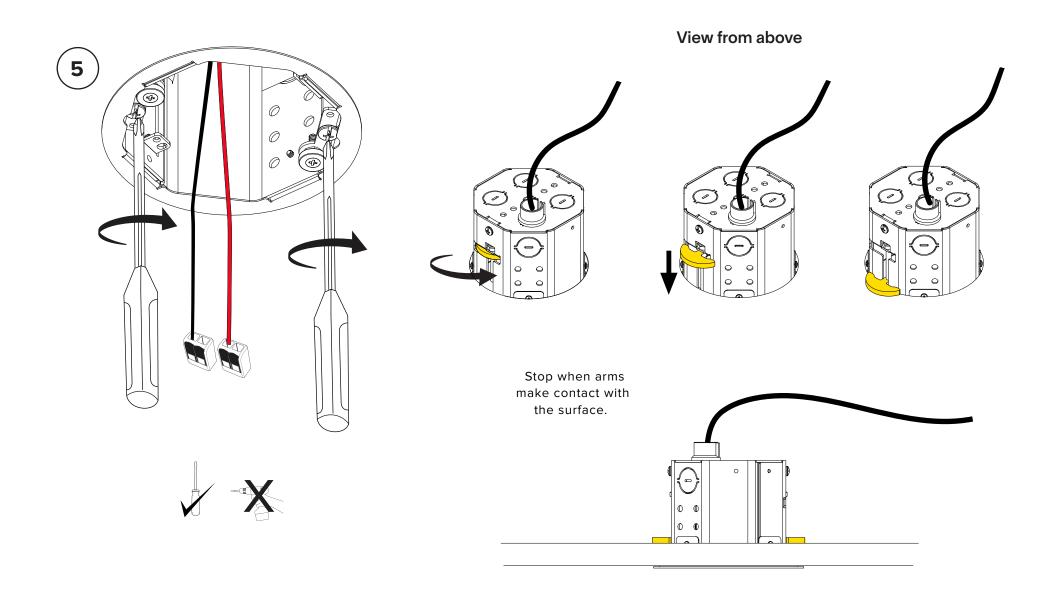



REMOTE DRIVER HOUSING

 Must be accessible for maintenance in a well aerated location for heat dissipation

Remote Wire Gauge and Length Allowance Maximum distance between suspended structure internal wiring and remote driver housing

Wire gauge	Max Distance
18AWG	64.6 ft / 19.7m
16AWG	102.7 ft / 31.3m
14AWG	163.3 ft / 49.8m
12AWG	259.7 ft / 79.1m

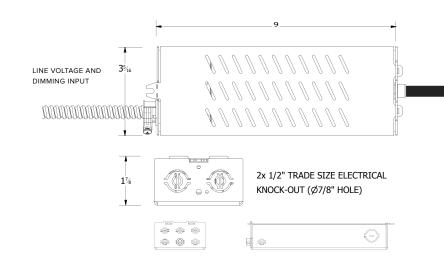


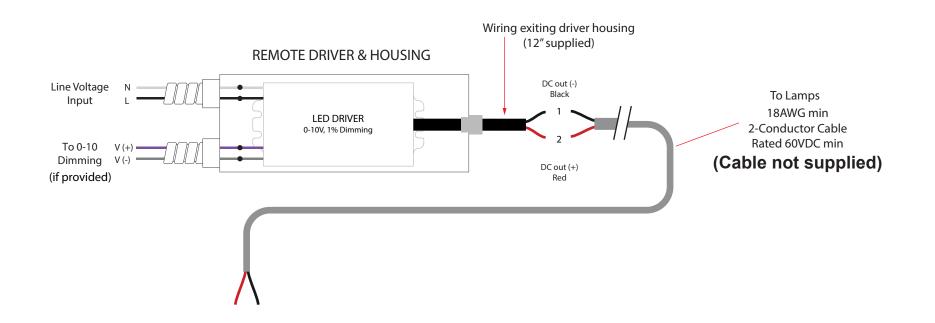




Remove cover and mount driver housing to wall.

Screws not provided.

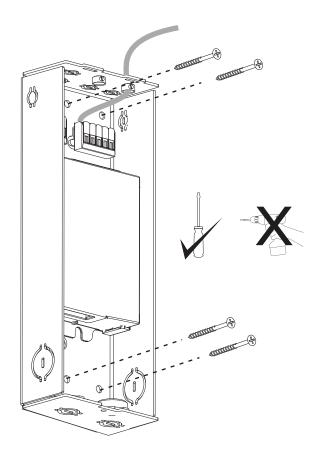




Make Line Voltage and dimming connections to driver wiring.

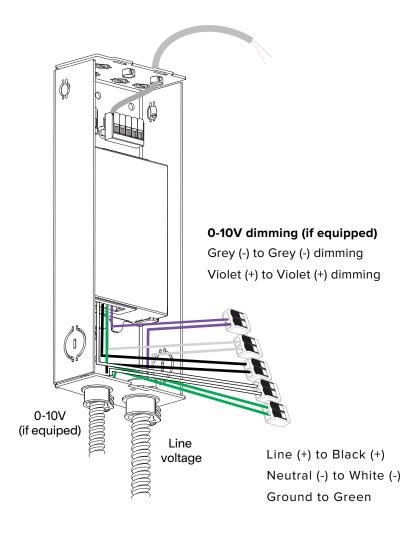

Use a screwdriver to knock out tab, then secure cables (not supplied)



Close driver housing and make low voltage connections.

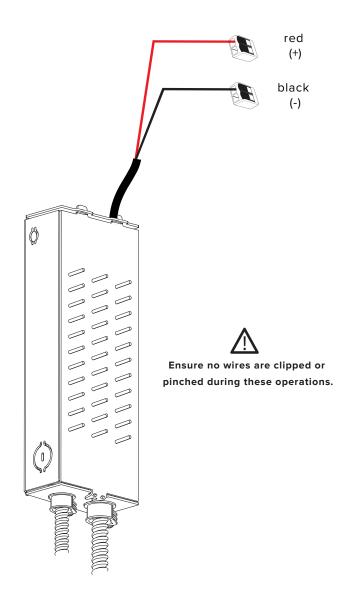



The recessed canopy is now installed, return to luminaire installation steps and follow the instructions (page 3).