



lambert&fils

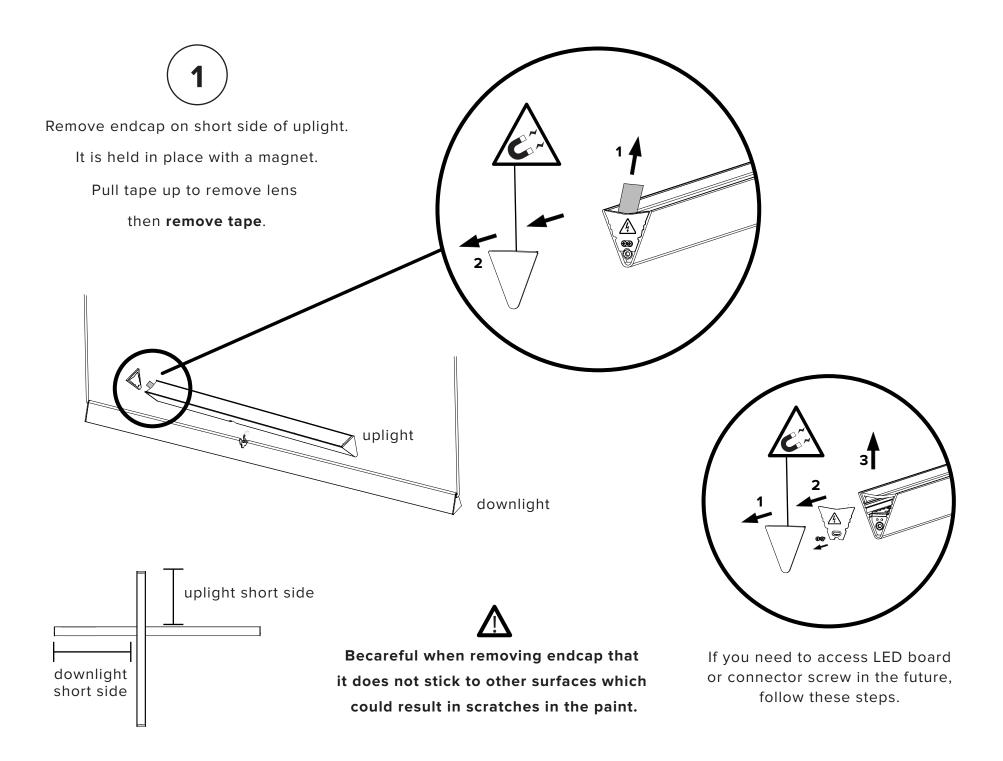

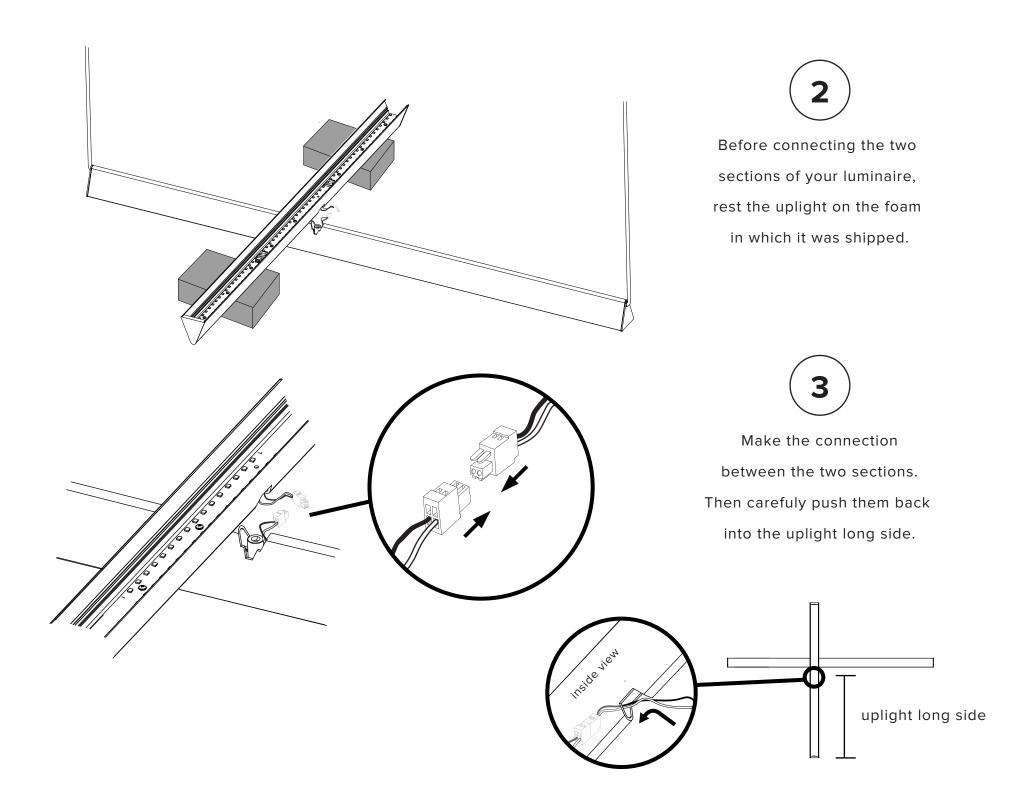



Reorientate uplight into the slot of the downlight. Screw it into place with provided screw and washer


$\overline{\mathbb{N}}$


Make sure the wire connection is not in the way of the screw. Do not pinch or scuff wires.




Slide lens into opposite endcap (1) then snap lens back into slots (2).

Replace endcap (3).

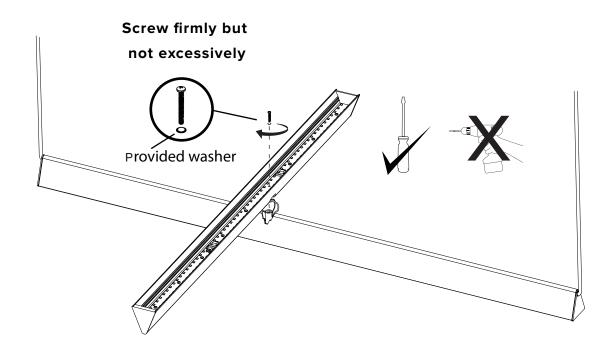


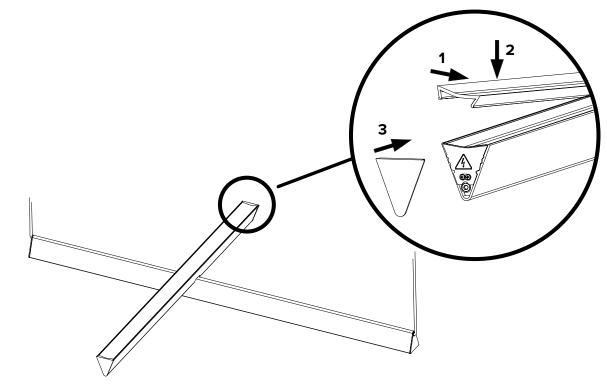

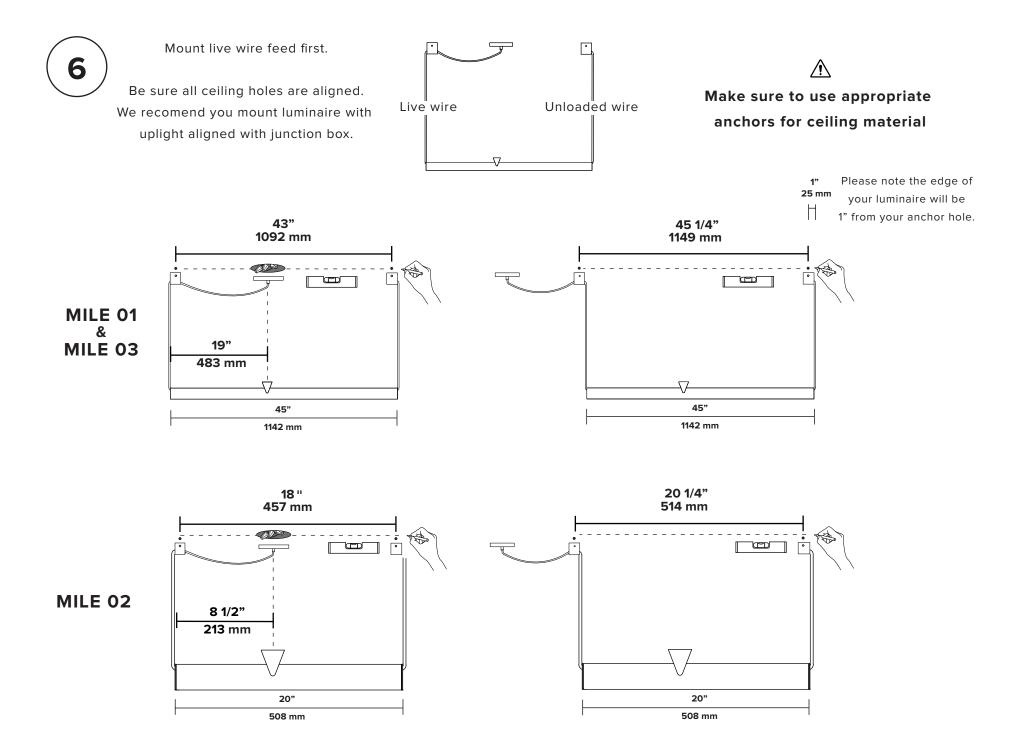


7


Mount live wire feed. Pull wires to straighten them before mounting them.

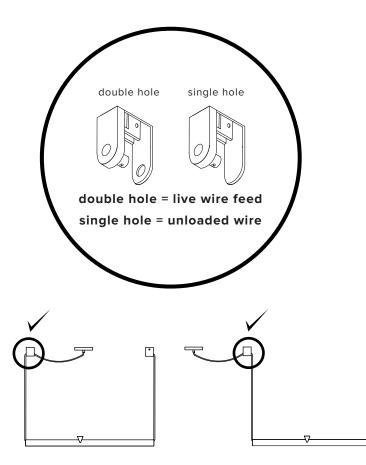


Remove or install cover by screwing and unscrewing set screw.

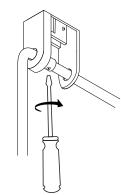

Screw gently, but firmly

 

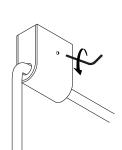


Screw gently, but firmly


\triangle

Make sure to use appropriate anchors for ceiling material

 
1"/ 25 mm



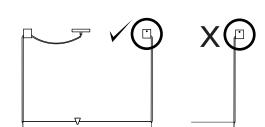






1"/ 25 mm

 


 Remove or install cover by screwing and unscrewing set screw.

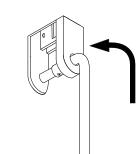

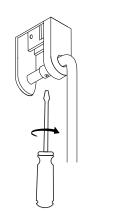


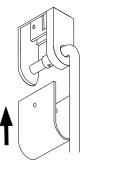




Screw gently, but firmly

Screw gently, but firmly

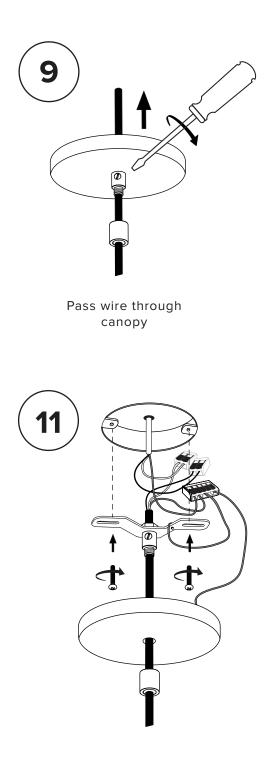

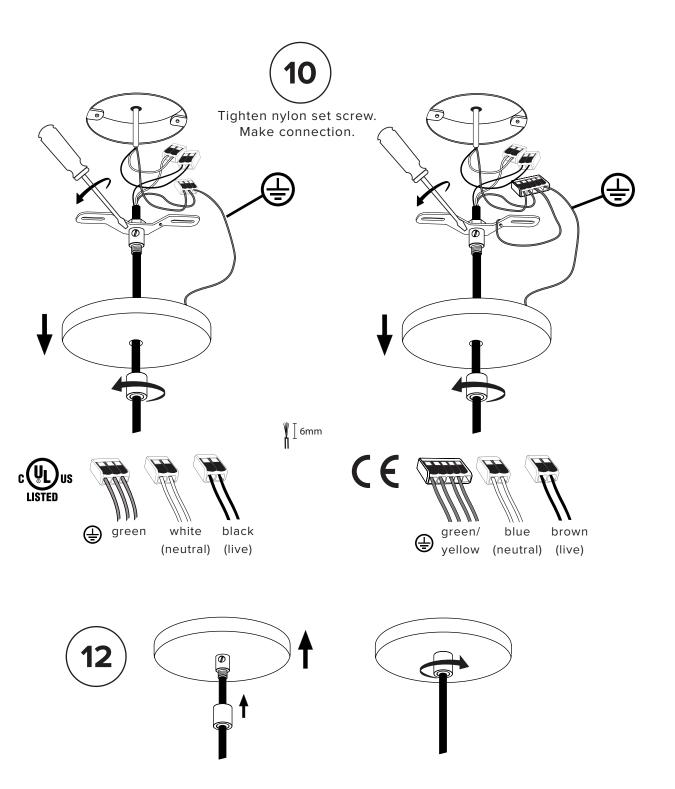





Adjust balance of downlight by adjusting length of wires if necessary.

Adjust balance of uplight by adjusting inner balance if necessary. Before adjusting wire length or interior weight, carefully attempt to balance the luminaire by hand. The wire's flex can allow micro adjustments of their own.

> Should uplight adjustments be needed, remove endcap on short side arm.

> > Endcap is held in place with a magnet.

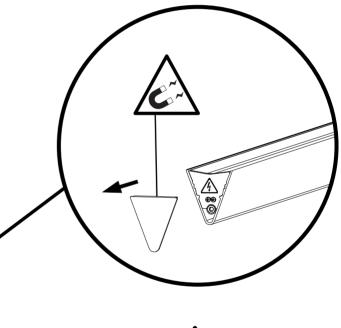

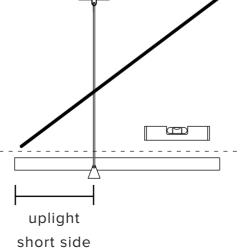


Becareful when removing endcap that it does not stick to other surfaces which could result in scratches in the paint. The adjustment screw holding the balance weight is now visible. Use supplied allen key to screw weight in or out depending on balance.




Note that the endcap affects


final balance of luminaire!

Luminaire will not appear balanced until the cap is in place.

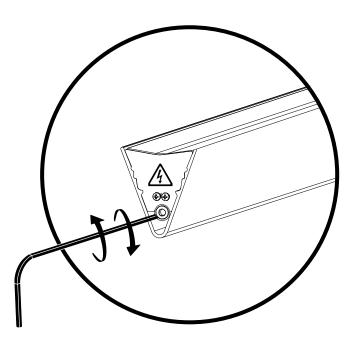

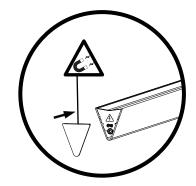

Replace endcap when adjustments are complete

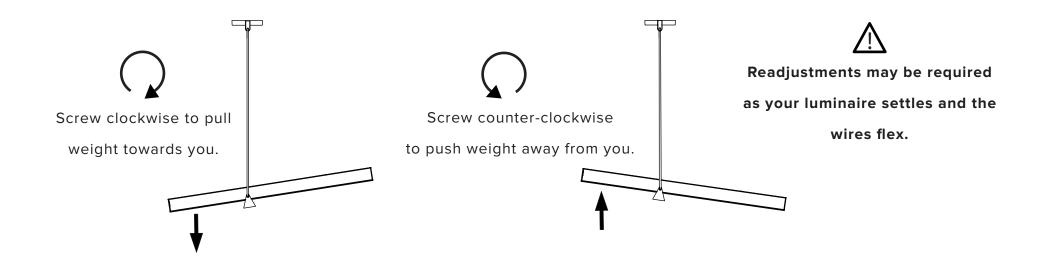


The adjustment screw holding the balance weight is now visible. Use supplied allen key to screw weight in or out depending on balance.




Note that the endcap affects

final balance of luminaire!

Luminaire will not appear balanced until the cap is in place.

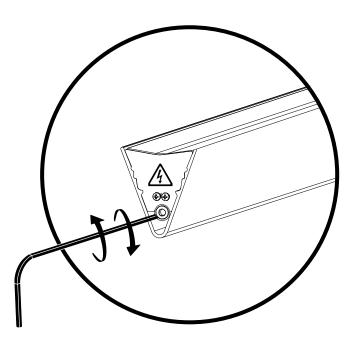

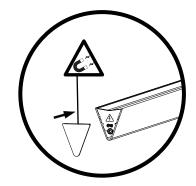

Replace endcap when adjustments are complete

