MILE ATELIER





- Please read entire manual before beginning install
- To be installed by an electrician to an electrical box
- Use appropriate screws where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site
- Should be used exclusively as a lamp and not as a shelving, display or hanging unit






NEVER TURN ON POWER SUPPLY UNTIL CONNECTIONS AND INSTALLATION ARE COMPLETED. DOING OTHERWISE COULD BE HARMFUL TO YOUR LUMINAIRE.

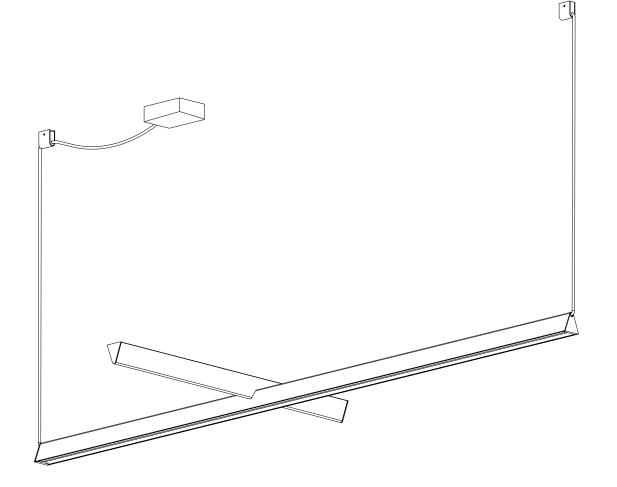

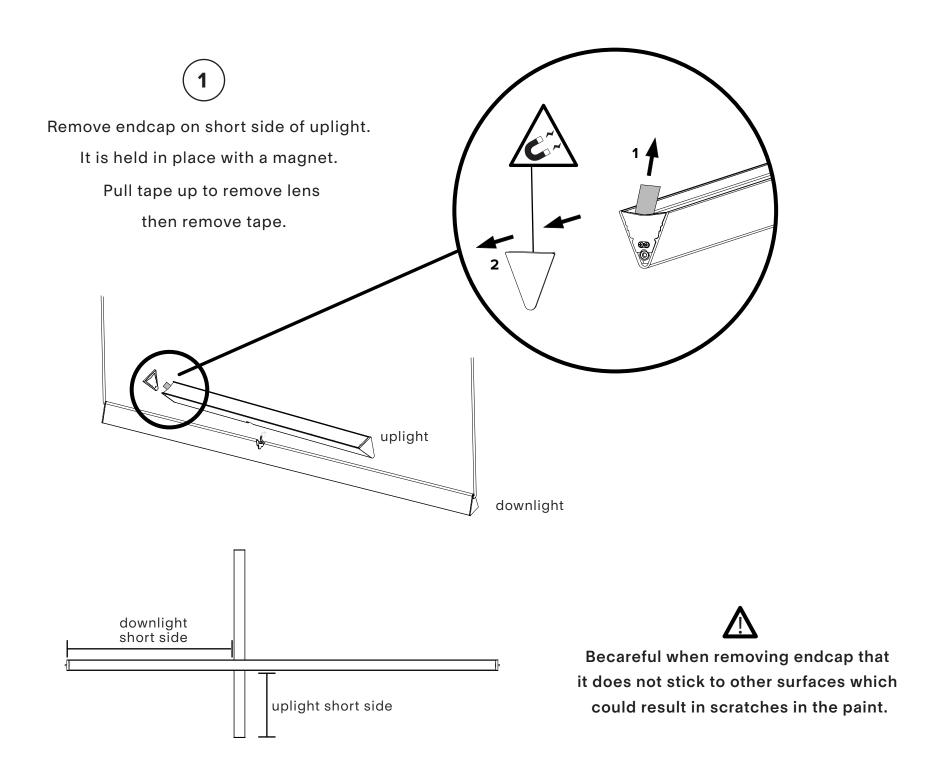

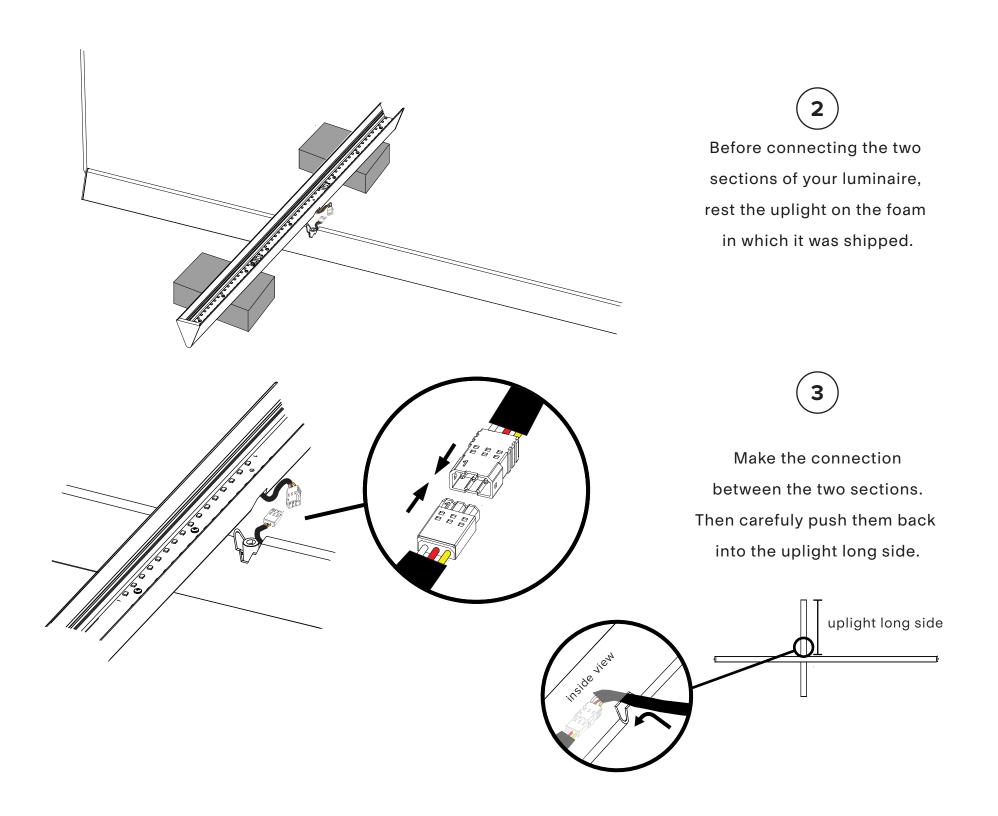




Reorientate uplight into the slot of the downlight.

Screw it into place with provided allen key.



While you bring the two extrusions together ensure to place the downlight wires next to the anchor. Make sure the wire does not sit on top of the anchor and that it does not get pinched or scuffed.

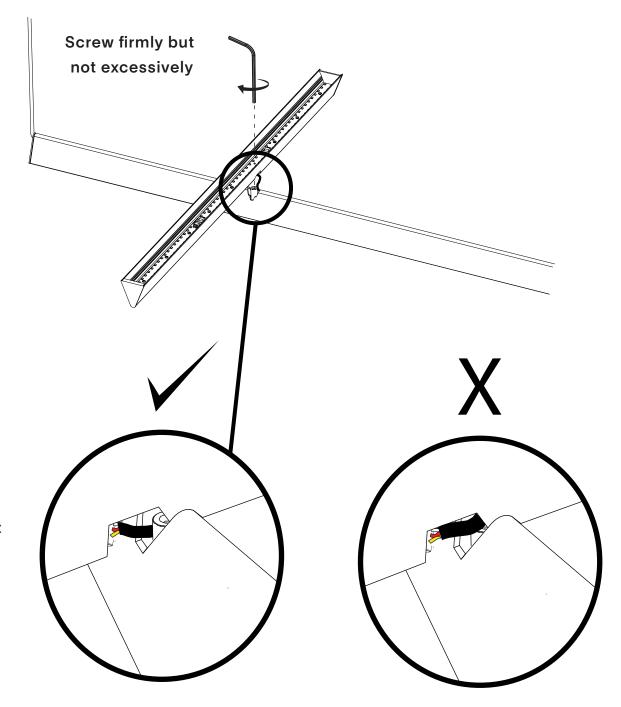




Slide lens into opposite endcap (1)

then snap lens back into slots (2).

Replace endcap (3).

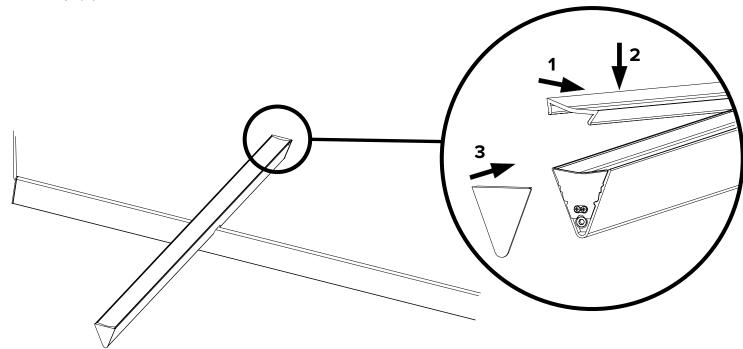


Mark anchor locations

6


Be sure all ceiling holes are aligned.

We recomend you mount luminaire with uplight aligned with junction box.

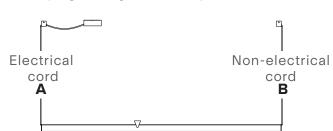

 \triangle


Make sure to use appropriate anchors for ceiling material

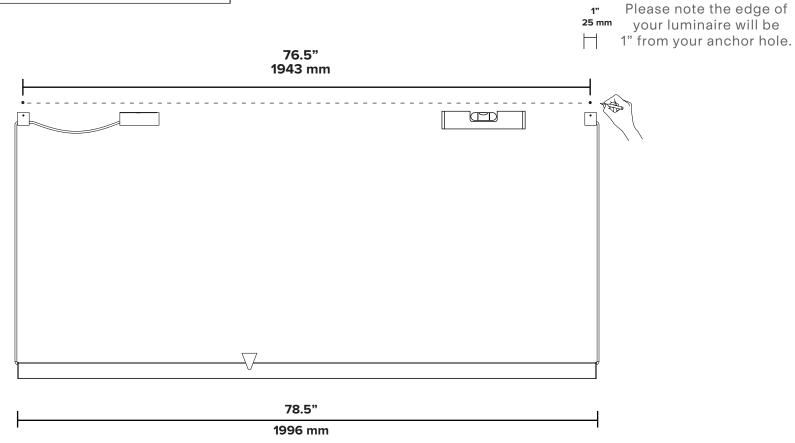





Mount double hole anchor with electrical cord.

Pull wires to straighten them before mounting them.

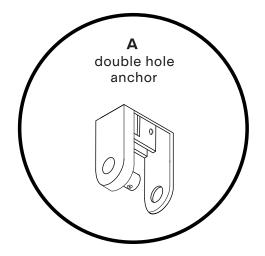


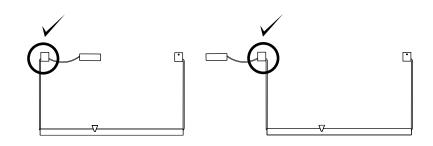


Make sure to use appropriate anchors for ceiling material

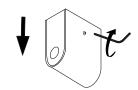



Remove or install cover by screwing and unscrewing set screw.

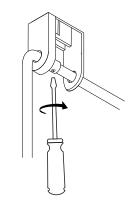


Screw gently, but firmly

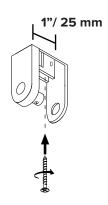

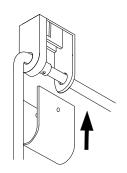

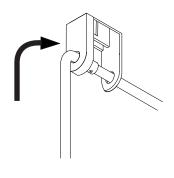

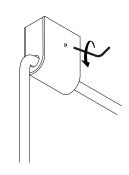


Screw gently, but firmly



Mount single anchor with non-electrical cord.


Pull wires to straighten them before mounting them.

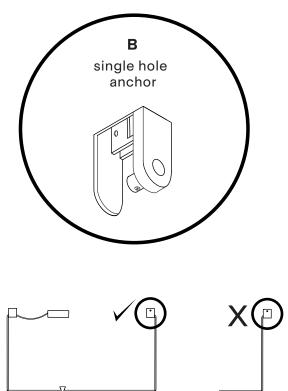




Make sure to use appropriate anchors for ceiling material




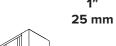


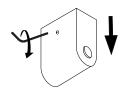



Remove or install cover by screwing and unscrewing set screw.



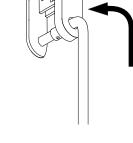

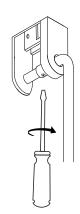

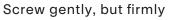


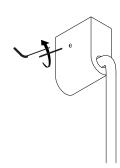

Screw gently, but firmly



Open canopy cover.
It is held in place with
2 screws.

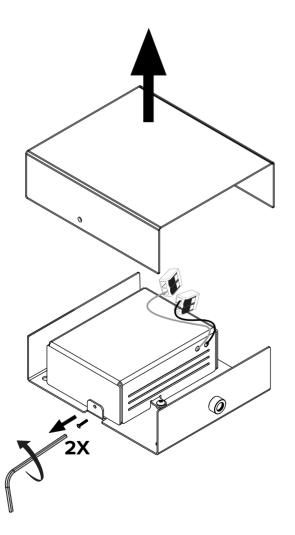




Unscrew driver housing.

It is held in place by two screws.


Place the housing aside.

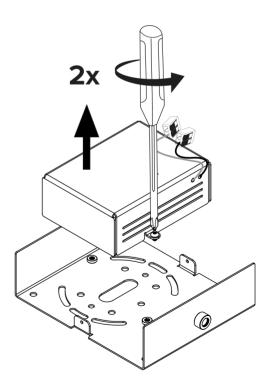

INSTALL EXTENSION HARNESS TO LINE/MAIN VOLTAGE




Connect the extension harness to the junction box. The harness is shipped with the canopy.

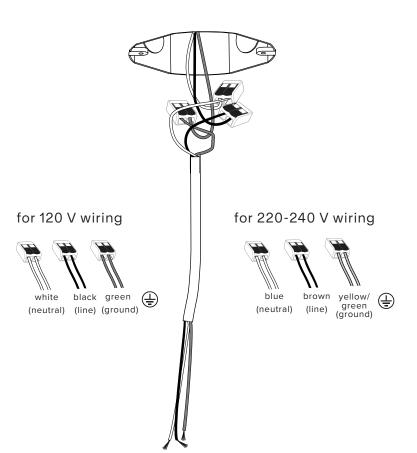




Pass the extension harness through center hole of canopy.

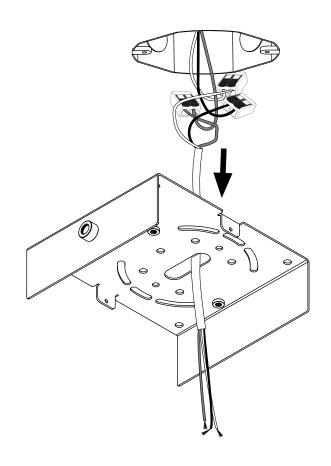

INSTALL EXTENSION HARNESS TO LINE/MAIN VOLTAGE




Connect the extension harness to the junction box. The harness is shipped with the canopy.

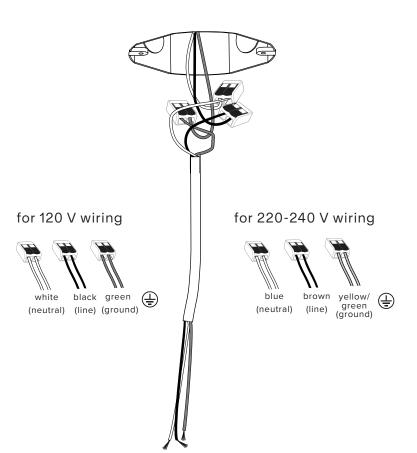




Pass the extension harness through center hole of canopy.

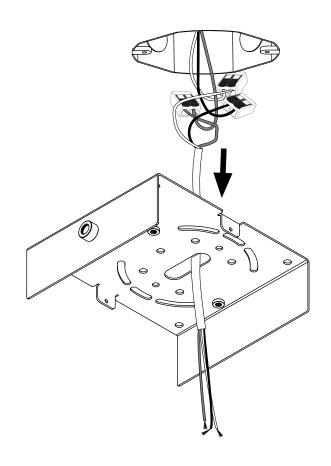


MOUNT CANOPY BRACKET




The canopy can either be mounted to the junction box or directly to the ceilling using appropriate holes.

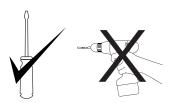


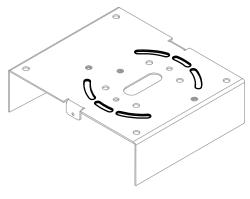




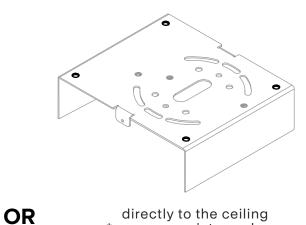


directly to the ceiling *use appropriate anchors

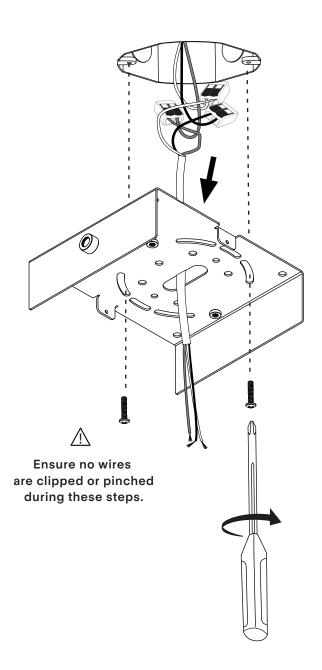


CONNECT EXTENSION HARNESS (ELECTRICAL BOX) TO DRIVER'S AC INPUT WIRES

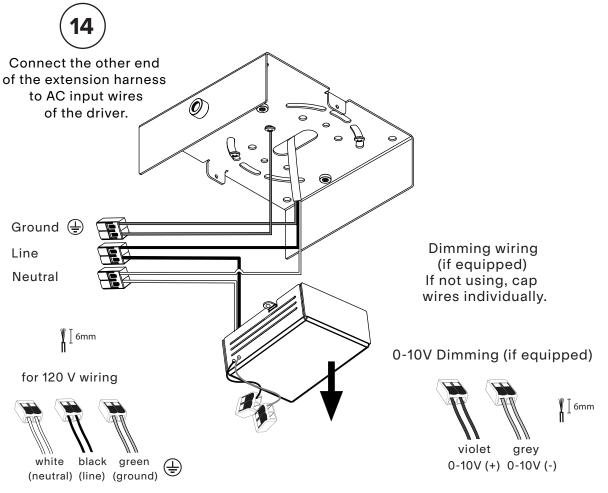

for 220-240 V wiring

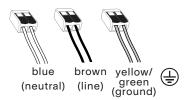


DALI Dimming (if equipped)

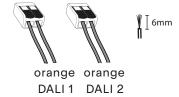




Carefully close driver enclosure. It is held by two screws.

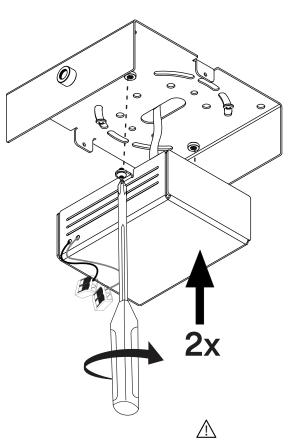

Ensure no wires are clipped or pinched during these steps.





Feed luminaire cord into the canopy strain relief.

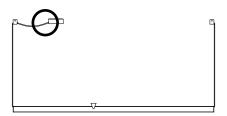




Tighten strain relief set screw when desired cord length is reached.

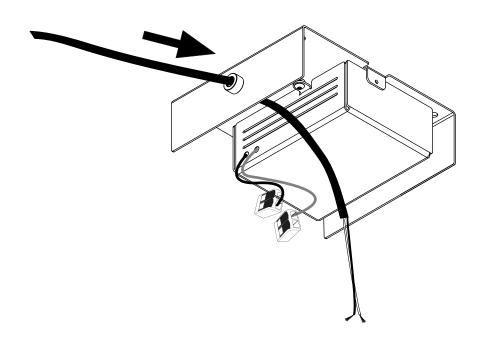

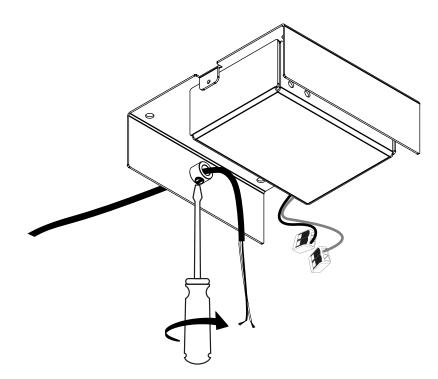


*screw gently but firmly

CONNECT LUMINAIRE CORD TO DRIVER DC WIRES

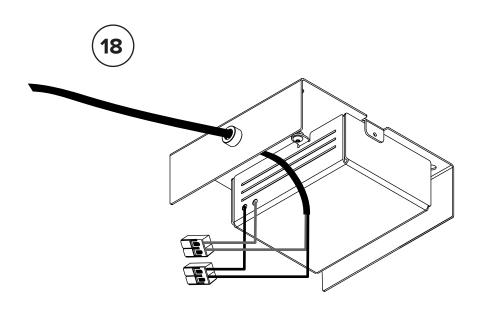



Carefully close canopy cover that is held in place with two screws.

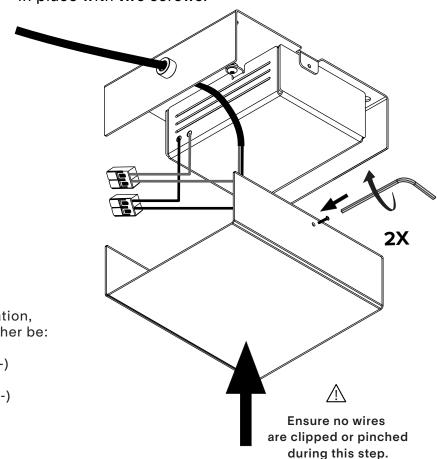

Trim end of cord to resemble this.

6" (153 mm)

Depending on your location, the luminaire cord will either be:

Blue (+) and Brown (-)

White (+) and Black (-)

Cut green/yellow as short as possible.

It is not used in this assembly



OR



WHITE (+) BLACK (-)

LEVELING THE LUMINAIRE




Before adjusting wire length or interior weight, carefully attempt to balance the luminaire by hand. The wire's flex can allow micro adjustments of their own.

Endcap is held in place with a magnet.




If necessary level downlight by adjusting length of wires.

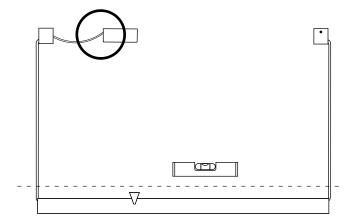

(21)

Should uplight adjustments be needed, remove endcap on short side arm.

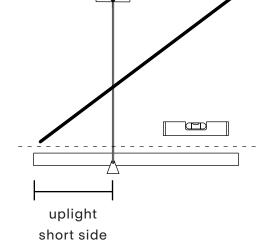



Becareful when removing endcap that it does not stick to other surfaces which could result in scratches in the paint.





The adjustment screw holding the balance weight is now visible.

Use supplied allen key to screw weight in or out depending on balance.



Note that the endcap affects
final balance of luminaire!
Luminaire will not appear balanced
until the cap is in place.

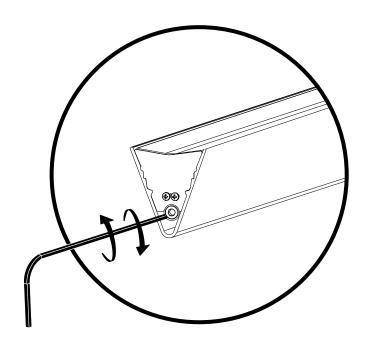

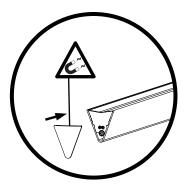

Replace endcap when adjustments are complete

