
MILE ATELIER 220-240V

Recessed canopy
Plenum (non insulated) or remote installation

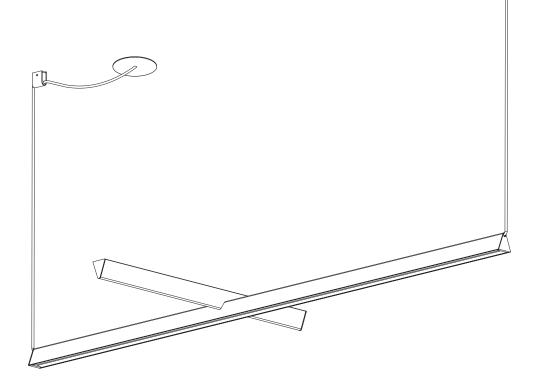



- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws and anchors where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site





Never turn on power supply until installation is completed




Remove Octobox cover plate and strain relief plate. It is held in place by two screws.

Refer to: Annex (independent driver) - page 14

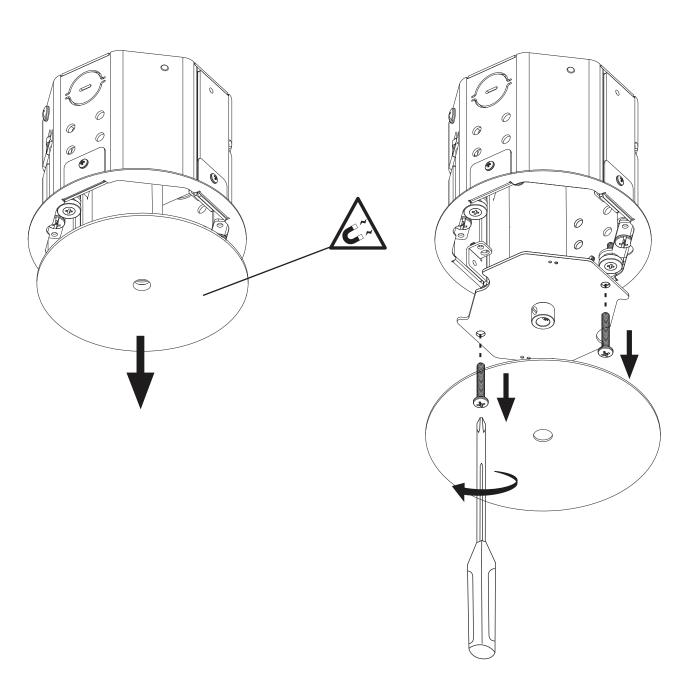

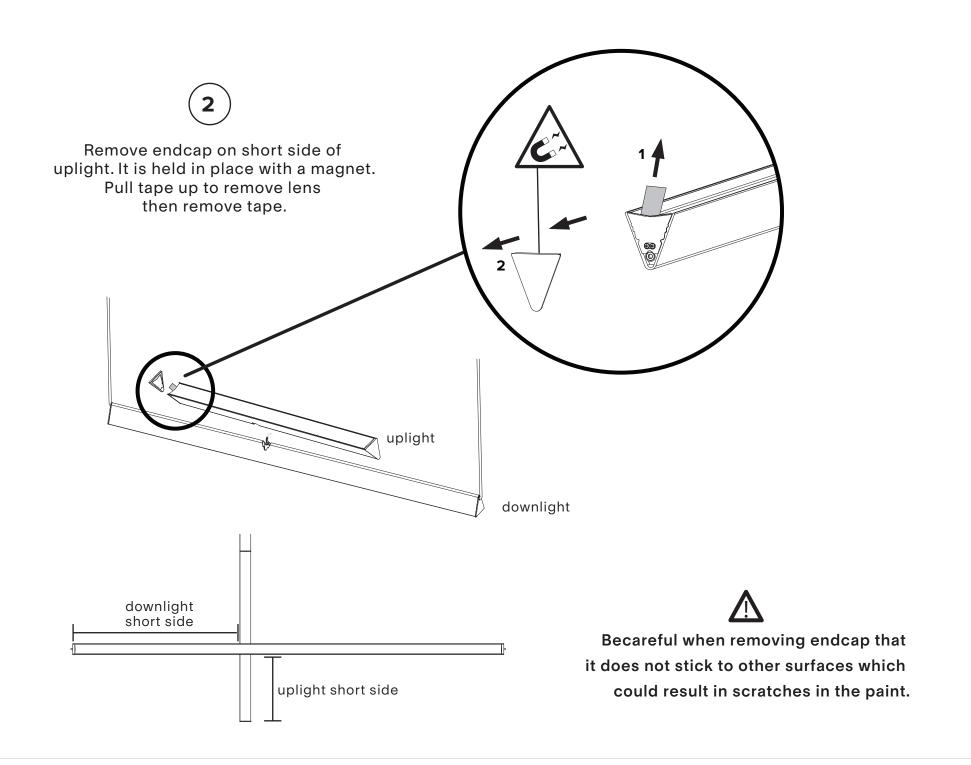

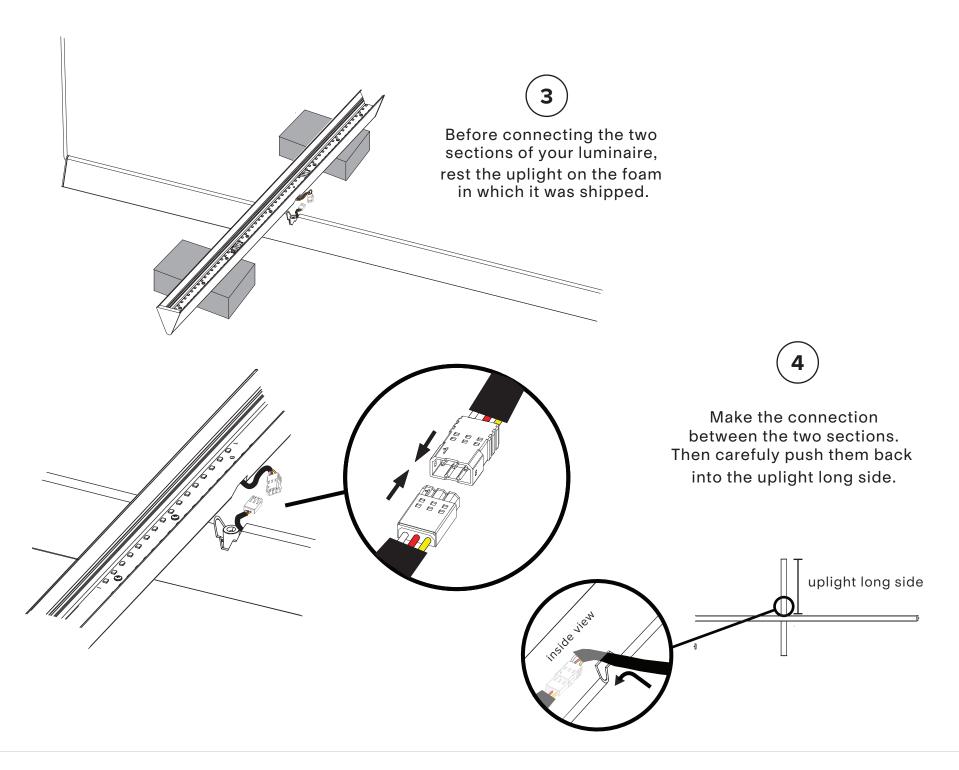




Reorientate uplight into the slot of the downlight.
Screw it into place with provided allen key.




While you bring the two extrusions together ensure to place the downlight wires next to the anchor. Make sure the wire does not sit on top of the anchor and that it does not get pinched or scuffed.

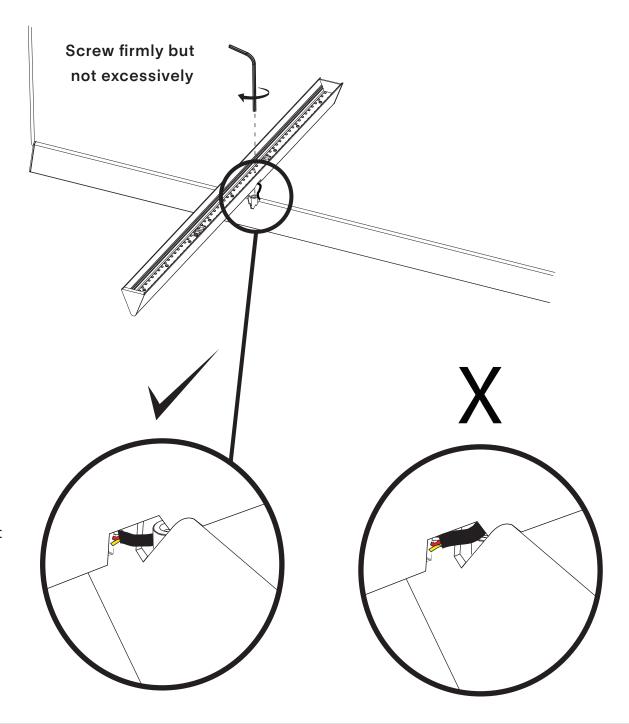



Slide lens into opposite endcap (1) then snap lens back into slots (2). Replace endcap (3).

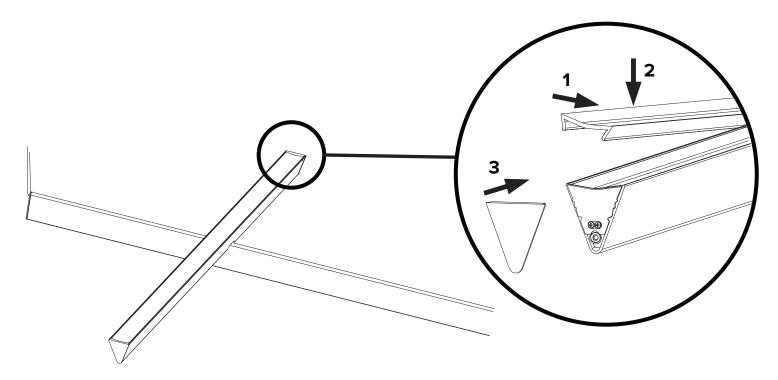




Mark anchor locations

Be sure all ceiling holes are aligned. We recomend you mount luminaire with uplight aligned with junction box.





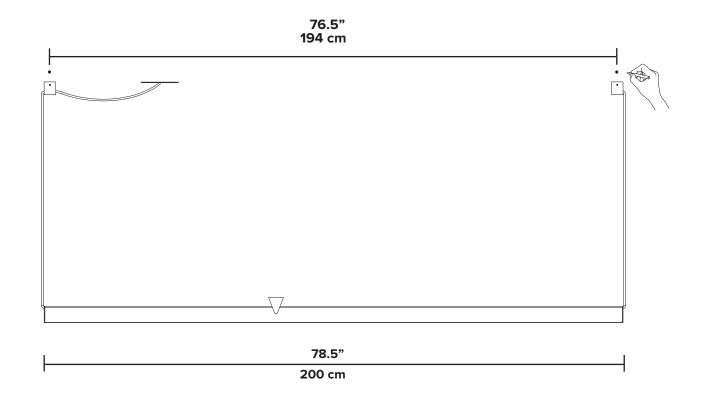





Mount double hole anchor with electrical cord

Pull wires to straighten them before mounting them.

double hole anchor

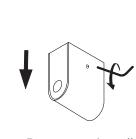


 
Remove or install cover by screwing and unscrewing set screw




Make sure to use appropriate


anchors for ceiling material

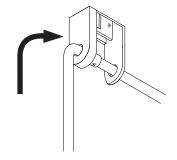


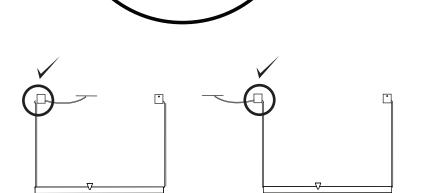

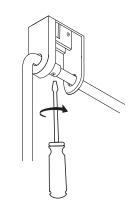

Screw gently, but firmly

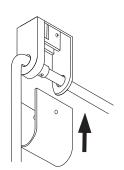


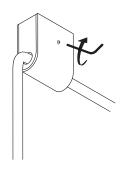




Mount single hole anchor with non-electrical cord


Pull wires to straighten them before mounting them.

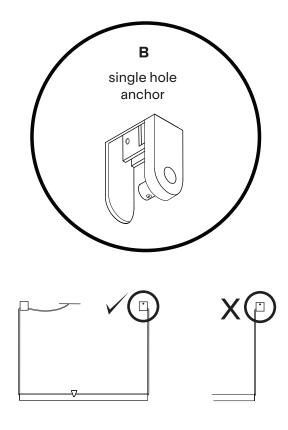




  
Make sure to use appropriate anchors for ceiling material







    
Remove or install cover by screwing and unscrewing set screw










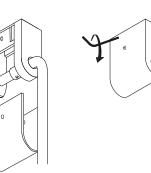


Steps to be completed AFTER steps in recessed canopy annex

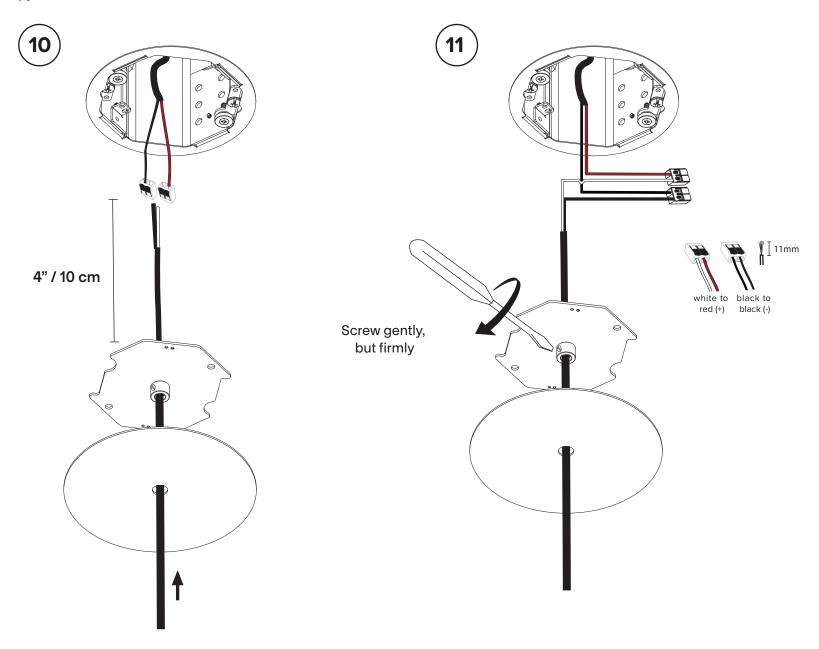


lambert&fils

10

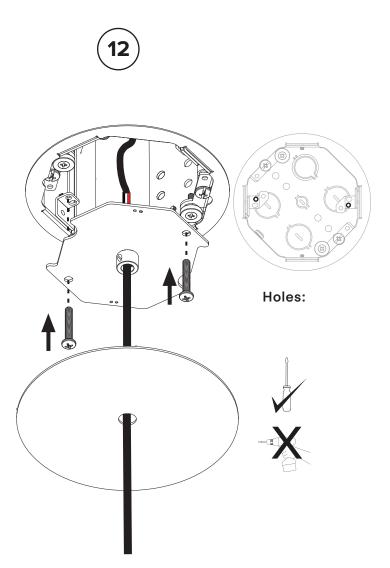



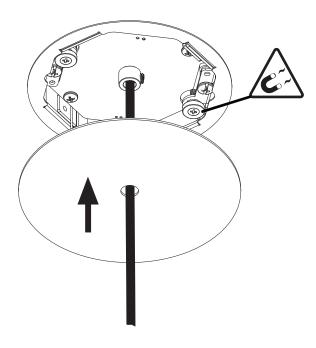

Make sure cover plate is centered on the junction box

Levelling the luminaire





Before adjusting wire length or interior weight, carefully attempt to balance the luminaire by hand. The wire's flex can allow micro adjustments of their own.

Encdap is held in place with a magnet



If necessary level downlight by adjusting length of wires

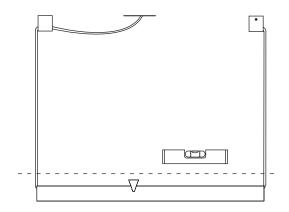

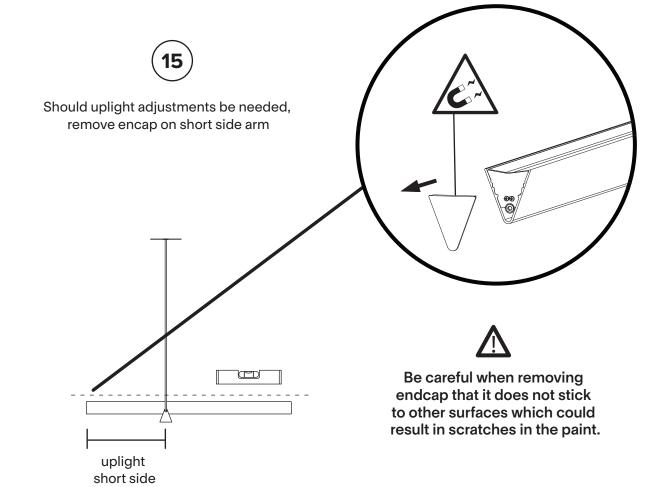





The adjustment screw holding the balance weight is now visible. Use provided allen key to screw weight in or out depending on balance.




Note that the endcap affects final balance of the luminaire!

Luminaire will not appear balanced until the cap is in place.

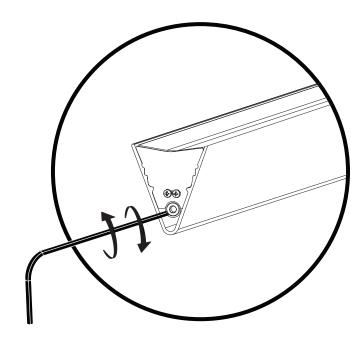

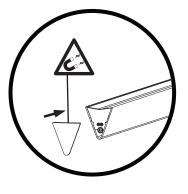



Replace endcap when adjustments are complete

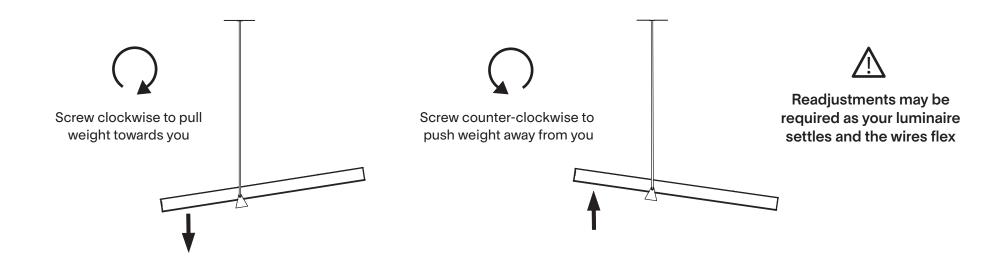

RECESSED CANOPY INSTALLATION

Octobox with independent driver

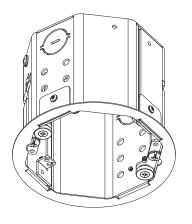

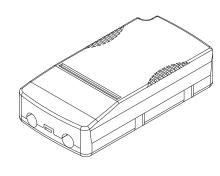




- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws where necessary
- For non-insulated hollow ceiling
- Wires for plenum not provided





For remote driver installation Consult chart below for max wire length.

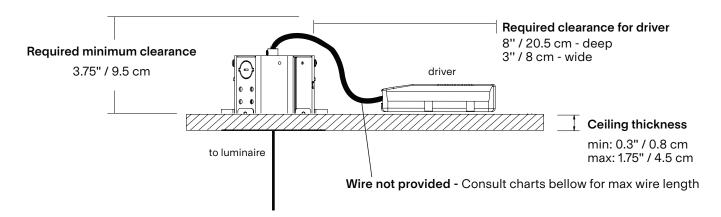



Distance between lamp and driver.


Wire gauge	Max Distance
18AWG	64.6 ft / 19.7m
16AWG	102.7 ft / 31.3m
14AWG	163.3 ft / 49.8m
12AWG	259.7 ft / 79.1m

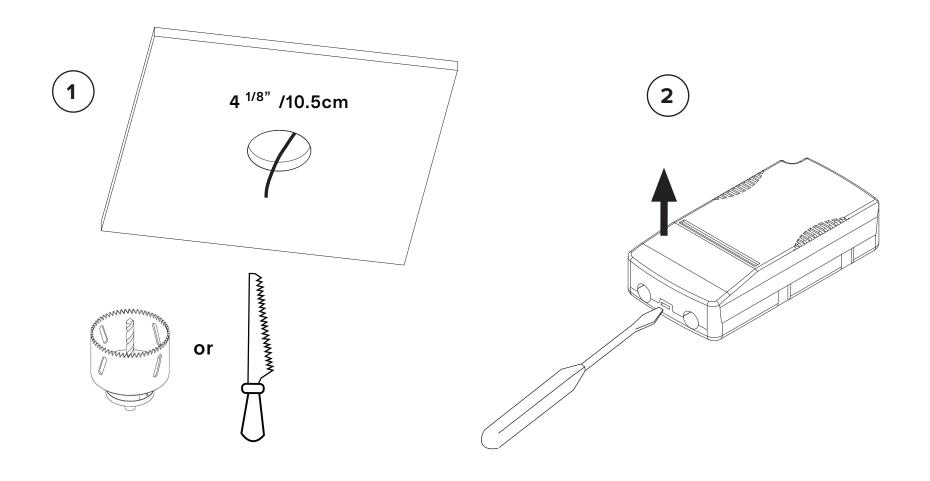


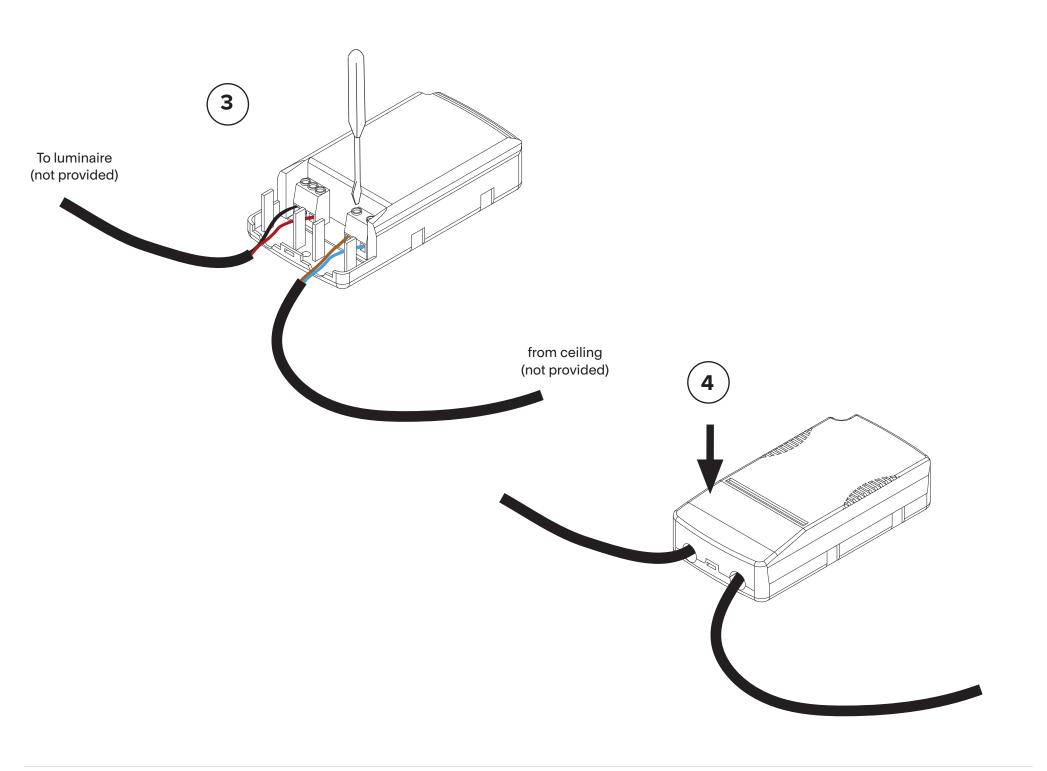

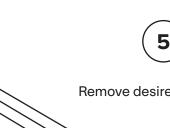


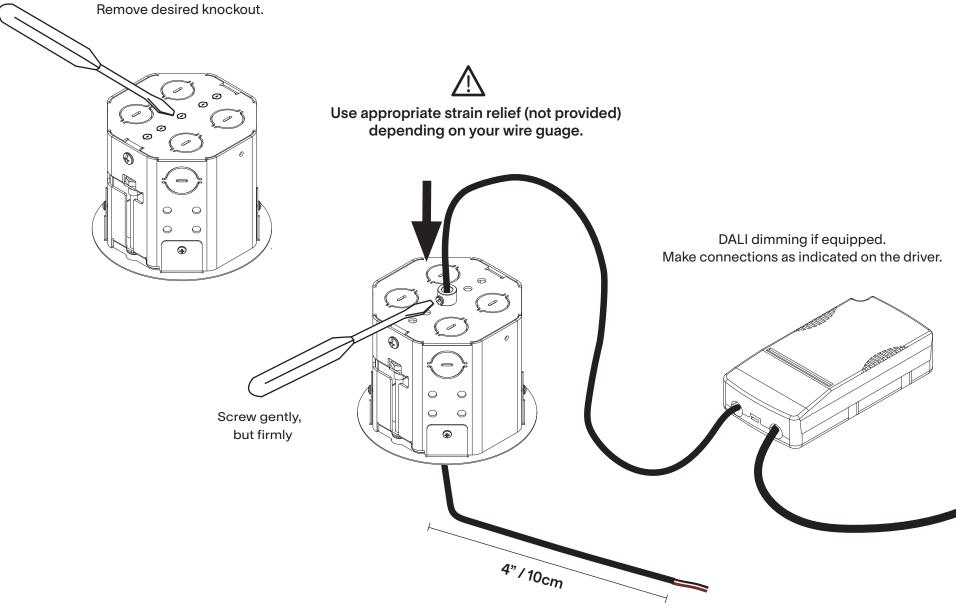


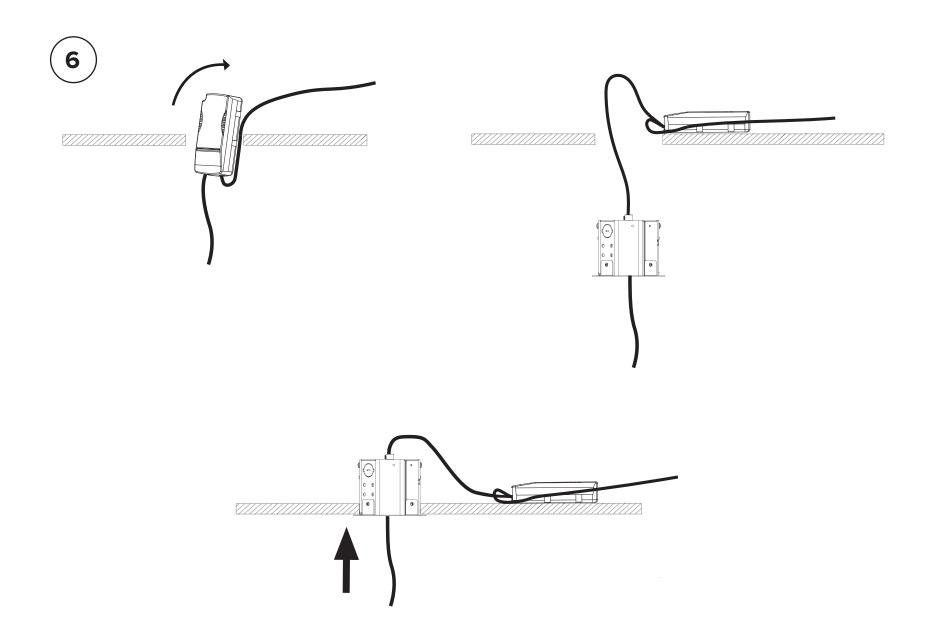


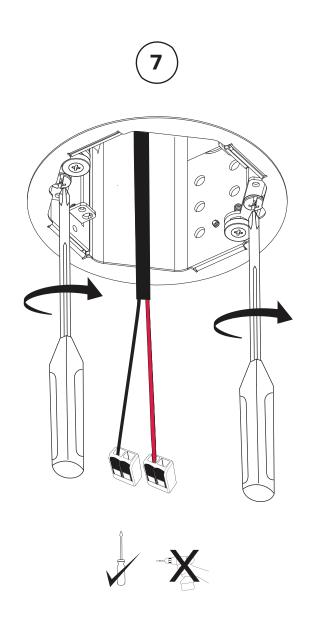


View from above

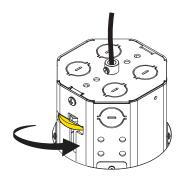

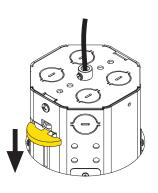

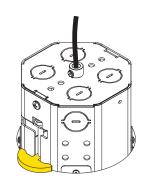

Stop when arms make contact with the surface

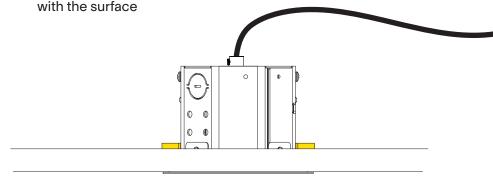

8

The recessed canopy is now installed, return to luminaire installation steps and follow the instructions (page 3).