
DORVAL 220-240V

Recessed canopy Plenum (non insulated) or remote installation

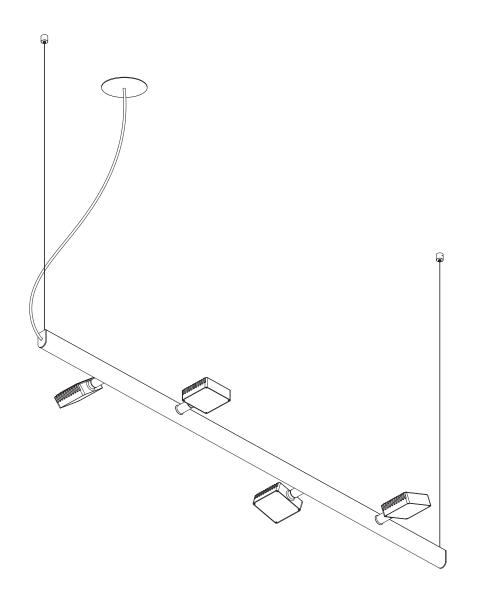



- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws and anchors where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site








Never turn on power supply until installation is completed

Remove Octobox cover plate and strain relief plate. It is held in place by two screws.


Refer to: Annex (independent driver) - page 8

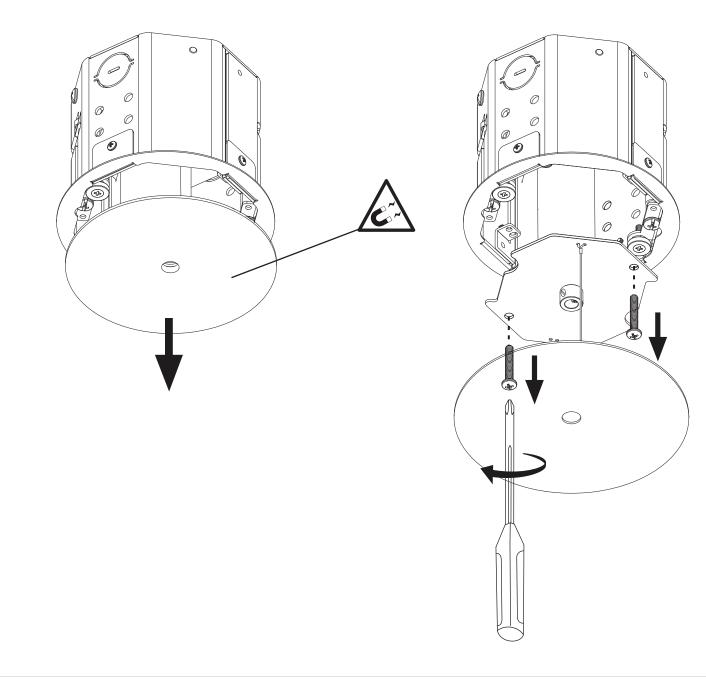


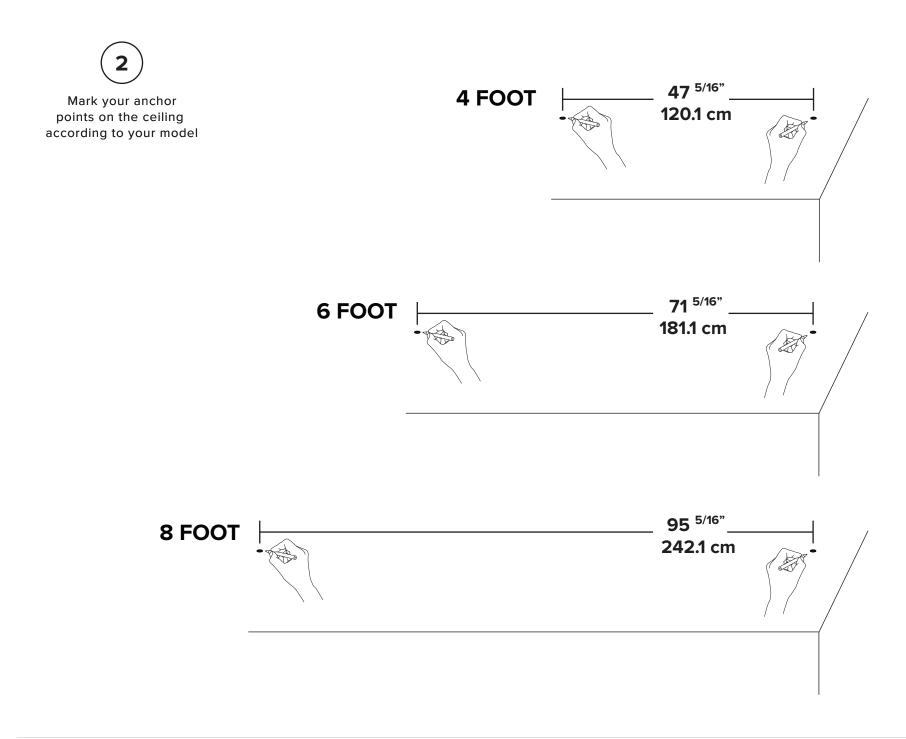


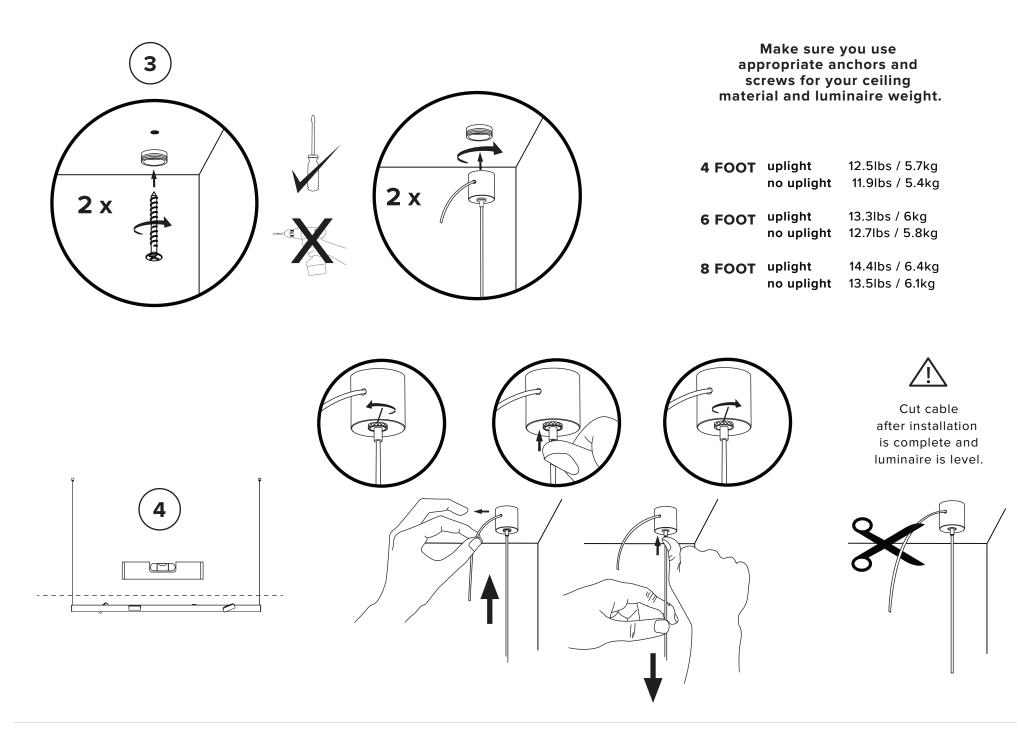

Steps to be completed AFTER steps in recessed canopy annex

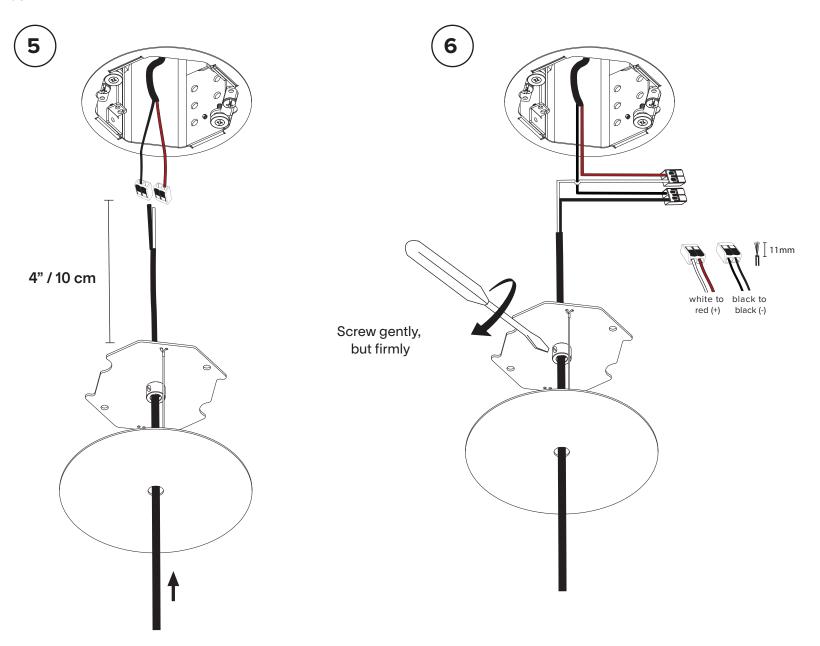

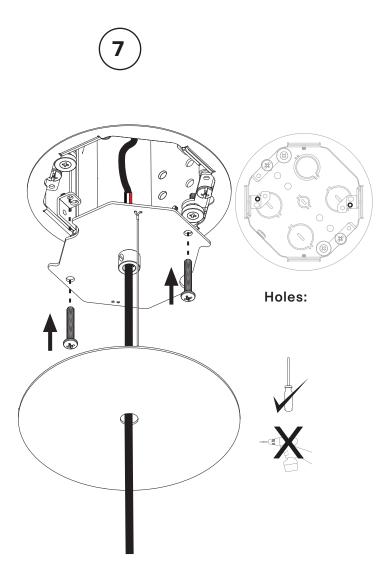

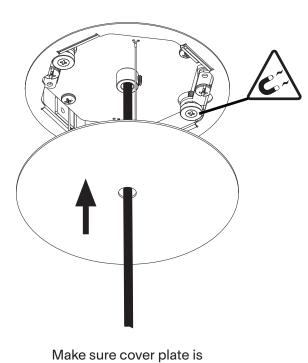



8

centered on the junction box

9

Your luminaire should be perfectly balanced. However, should adjustments be needed, use the supplied hex key in the adjustment mechanism.

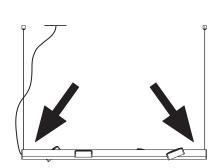

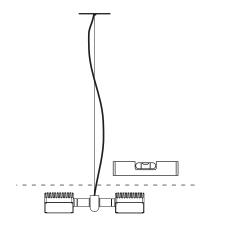



Moving the hex key will shift the lamp body left or right in order to balance it.

Repeat on opposite side if necessary.

RECESSED CANOPY INSTALLATION


Octobox with independent driver

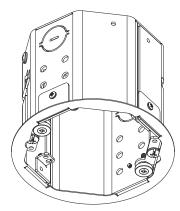

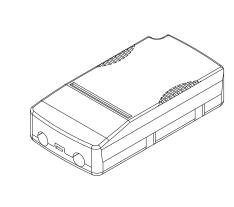


- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws where necessary
- For non-insulated hollow ceiling
- Wires for plenum not provided


For remote driver installation Consult chart below for max wire length.

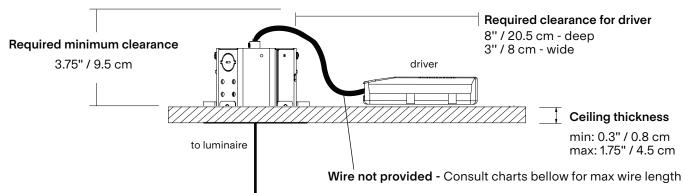



Distance between lamp and driver.

Wire gauge	Max Distance
18AWG	64.6 ft / 19.7m
16AWG	102.7 ft / 31.3m
14AWG	163.3 ft / 49.8m
12AWG	259.7 ft / 79.1m

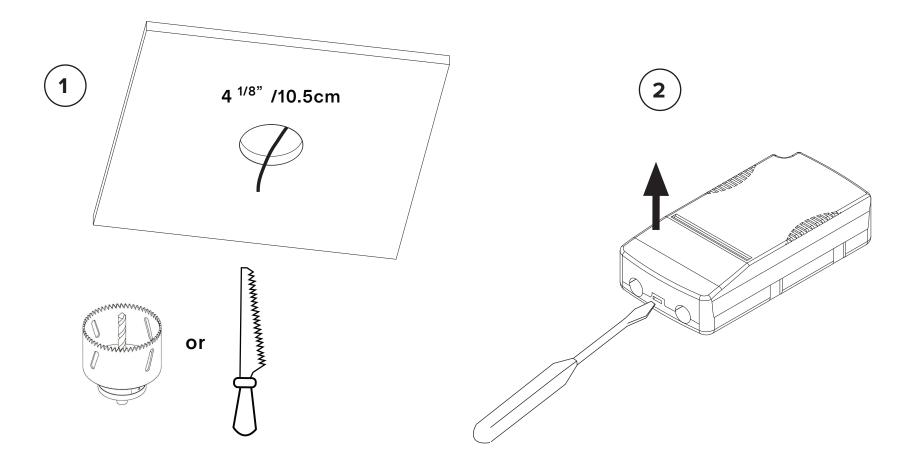

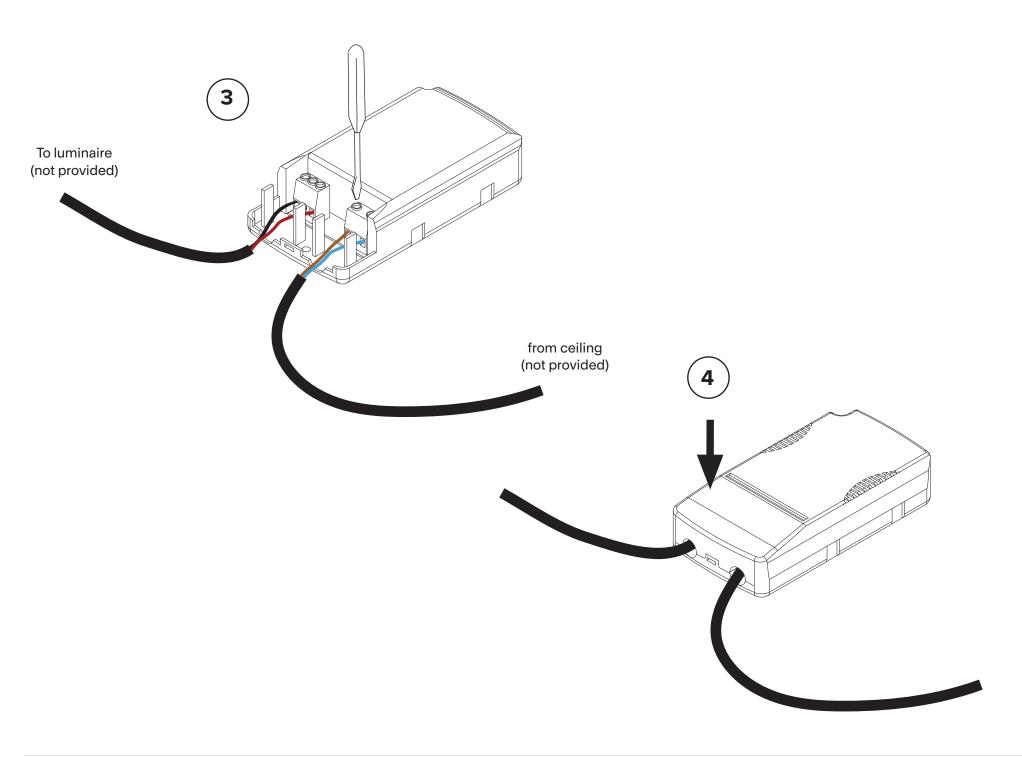


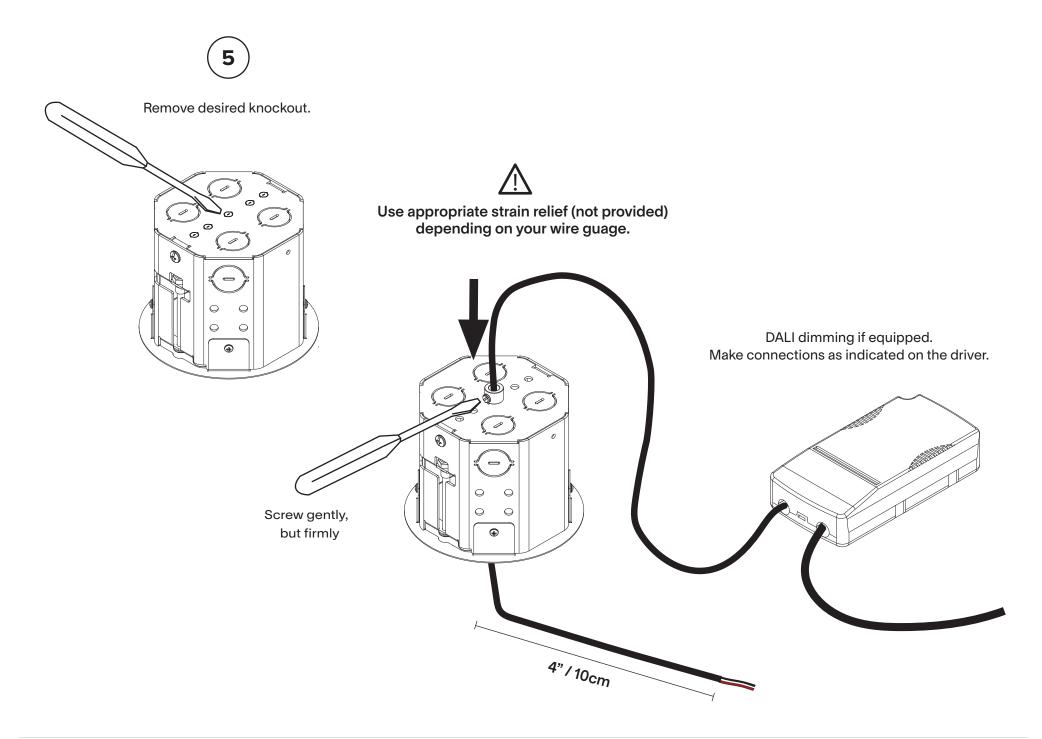

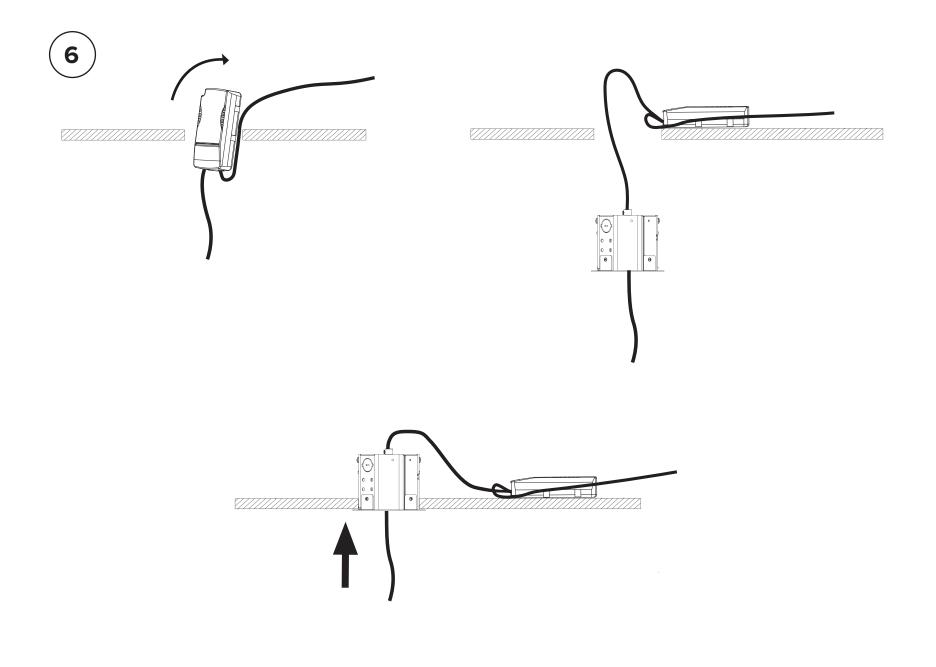

7

View from above

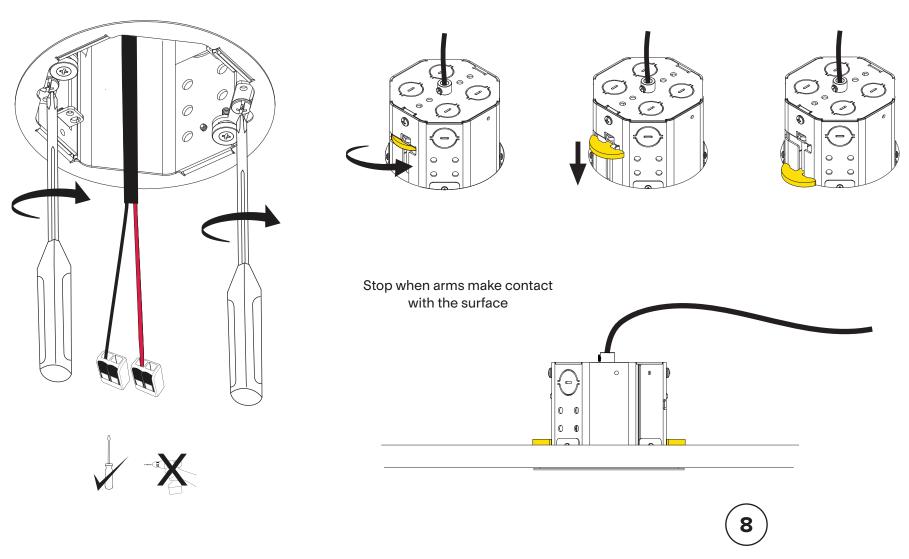

The recessed canopy is now installed, return to luminaire installation steps and follow the instructions (page 3).