


WARNING - ACRYLIC PRODUCT IMPORTANT NOTICE

Take extra care when handling or moving the acrylic shade of the luminaire. Avoid touching it with any tools and keep away from any hard or abrasive surfaces (like rings, jewellery, watches, etc.). The edges and corners are especially fragile.

Keep the acrylic clean and wear gloves at all times. Do not put hands inside the acrylic body unecessarily. This will allow for less cleaning and less chance to damage the acrylic .

Read and follow all steps carefully allowing the appropriate time for each step. Rushing the installation may cause accidents or damage.

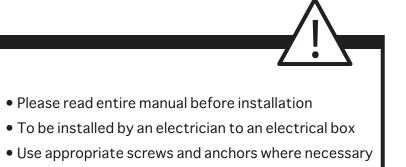


- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site



PLEASE NOTE


ALL SAINTE MODELS FOLLOW THE SAME INSTALLATION PROCESS. Each luminaire comes shipped in three boxes.


To protect the luminaire do not open the boxes until the installation process requires it.

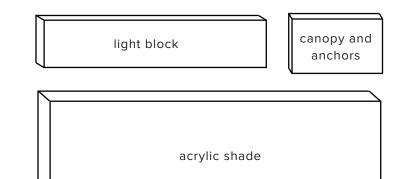


*One pair of scissors has been provided for each order. If you order several Saintes, only one pair will be provided.

INSTALL CEILING ANCHORS

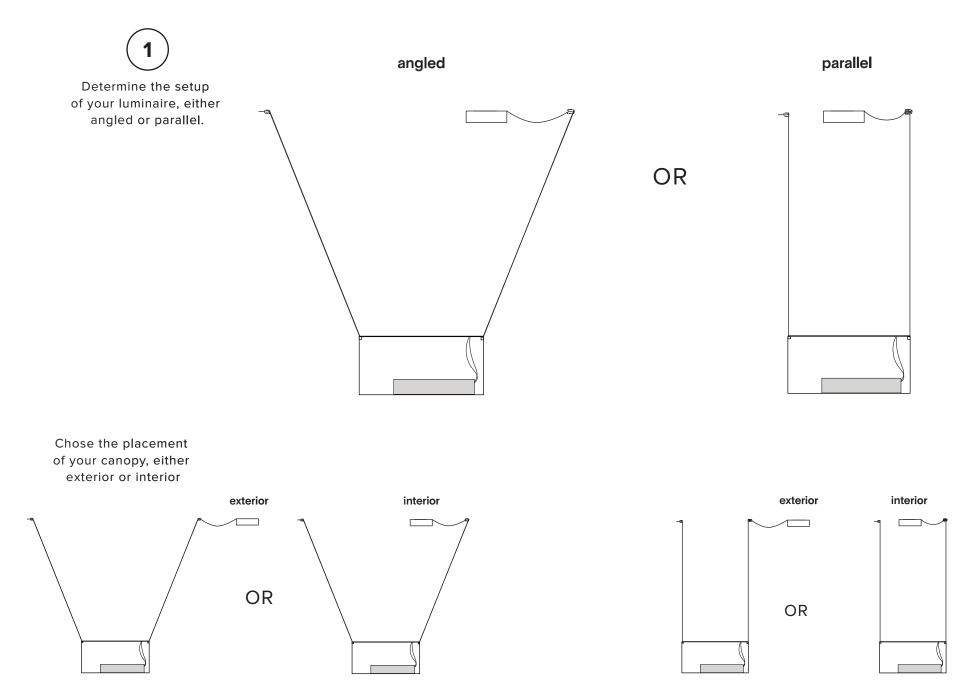

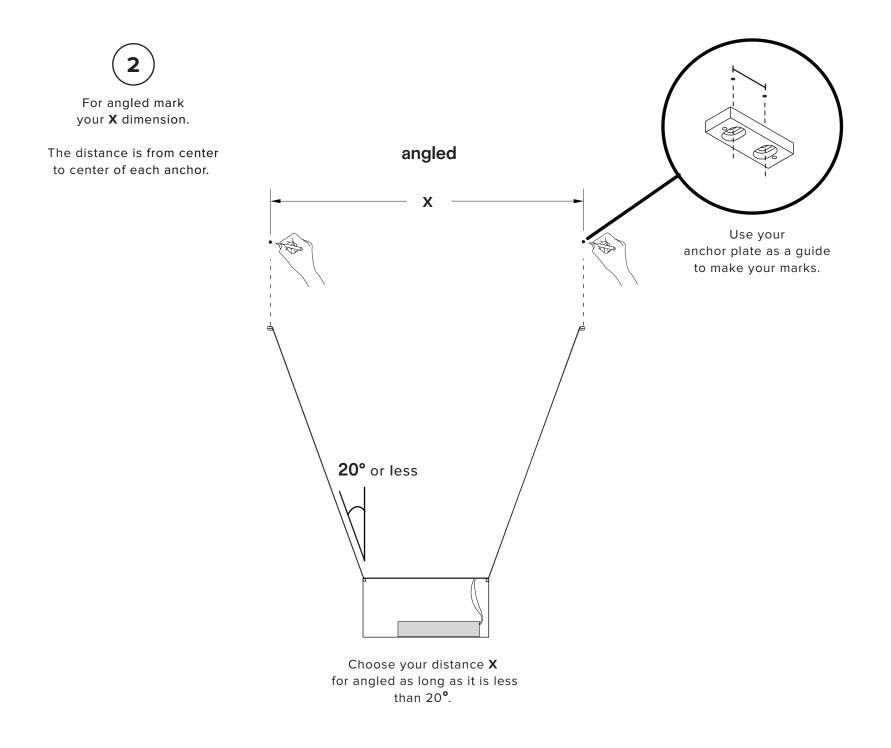

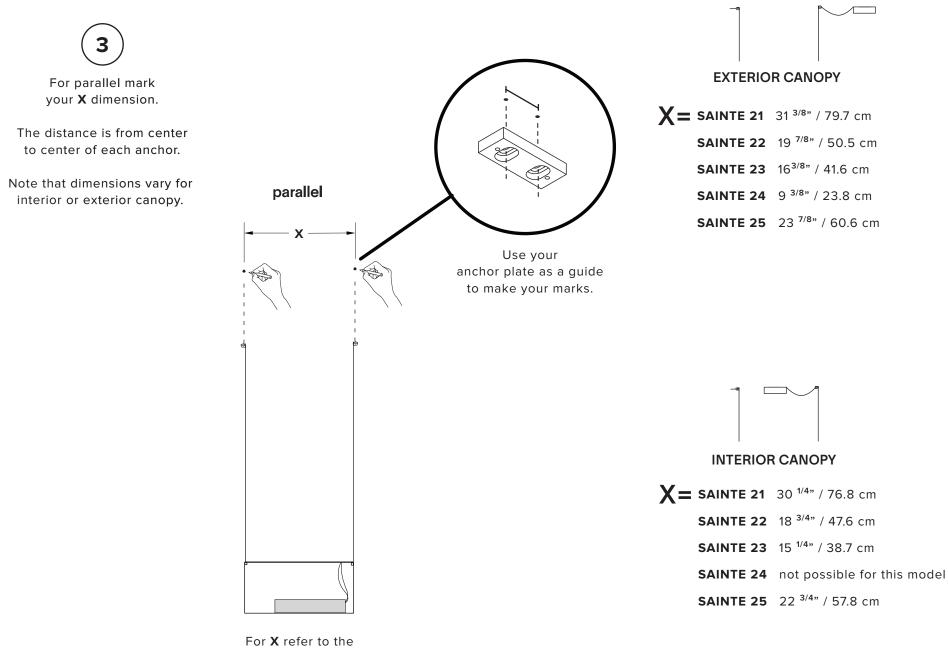

distance chart for your model.

4

Install the aluminum ceiling anchors.

* Use appropriate mounting hardware (not provided) for the weight of your luminaire


SAINTE 21 9.1 lb / 4.1 kg

SAINTE 22 13.8 lb / 6.3 kg

SAINTE 23 11.7 lb / 7.3 kg


SAINTE 24 4.5 lb / 2 kg

SAINTE 25 9.6 lb / 4.4 kg

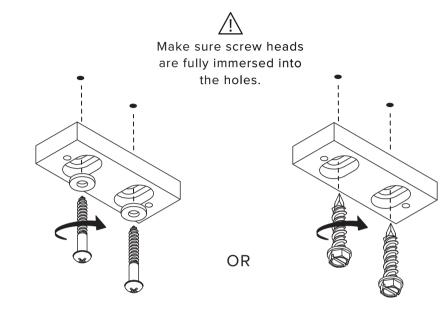

Assembly with N0.8 screws (or other) and washers (included)

 
Assembly with Tapcon no washers required



Note the ceiling side of the anchor is clearly labelled with a sticker.

Partially screw the top plate of the anchor to temporarily allow the ribbon to freely pass through.


5

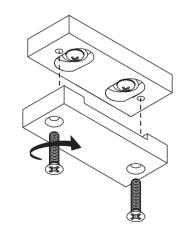


DETERMINE ORIENTATION OF THE ACRYLIC SHADE AND THE ELECTRICAL SIDE

6

The light block should be on the same side as your junction box Choose the orientation for acrylic shades with different finishes on both sides.

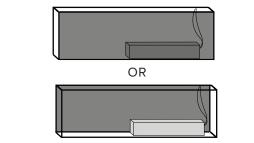

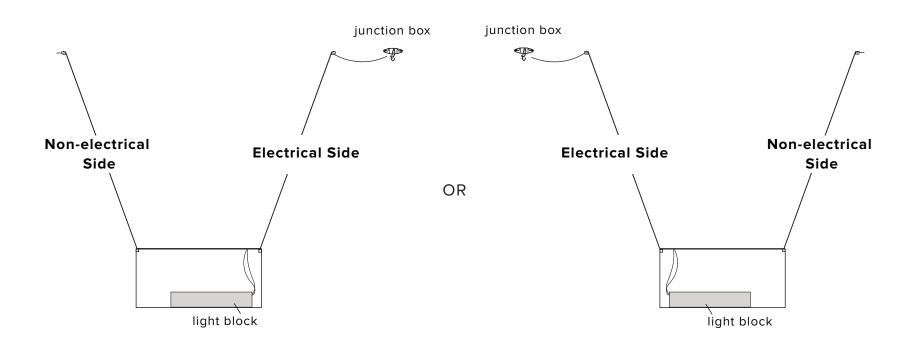

PREPARE THE ACRYLIC SHADE

Carefully remove the acrylic shade

from the box. Place it on the provided

sheet of foam on its side, acrylic anchors away from you. Unwrap the shade.

Wear enclosed gloves


for these steps.


INSTALL THE LIGHT BLOCK





Carefully remove the cardboard tray containing the light block from the box.


Place the tray on a flat surface and unwrap the light block. Make sure to position the light block lens side close to the edge of the tray.

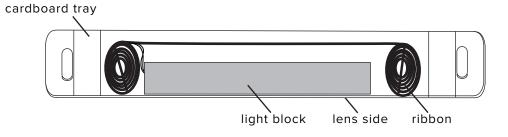

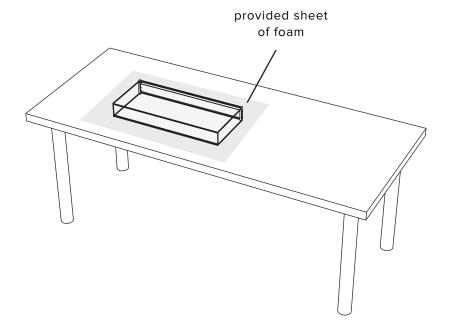


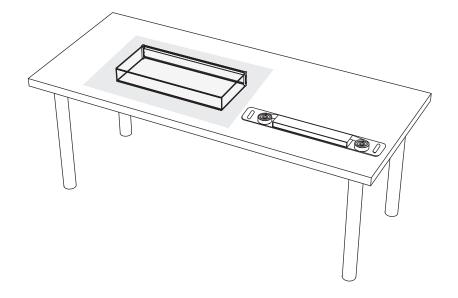

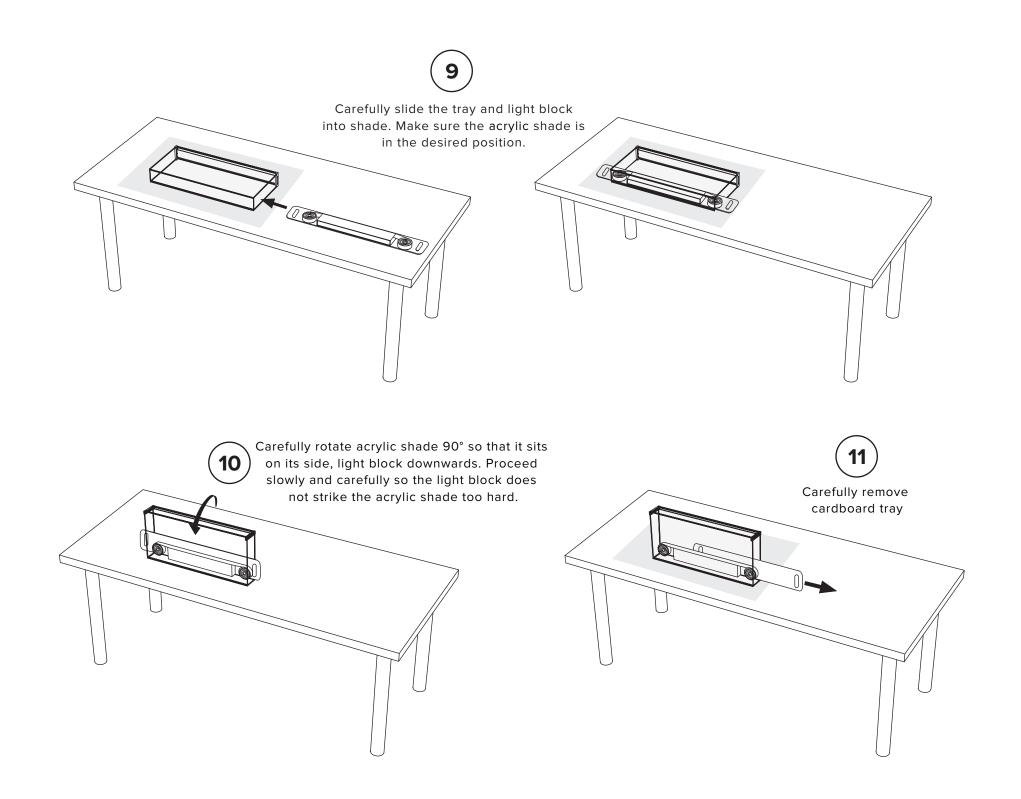

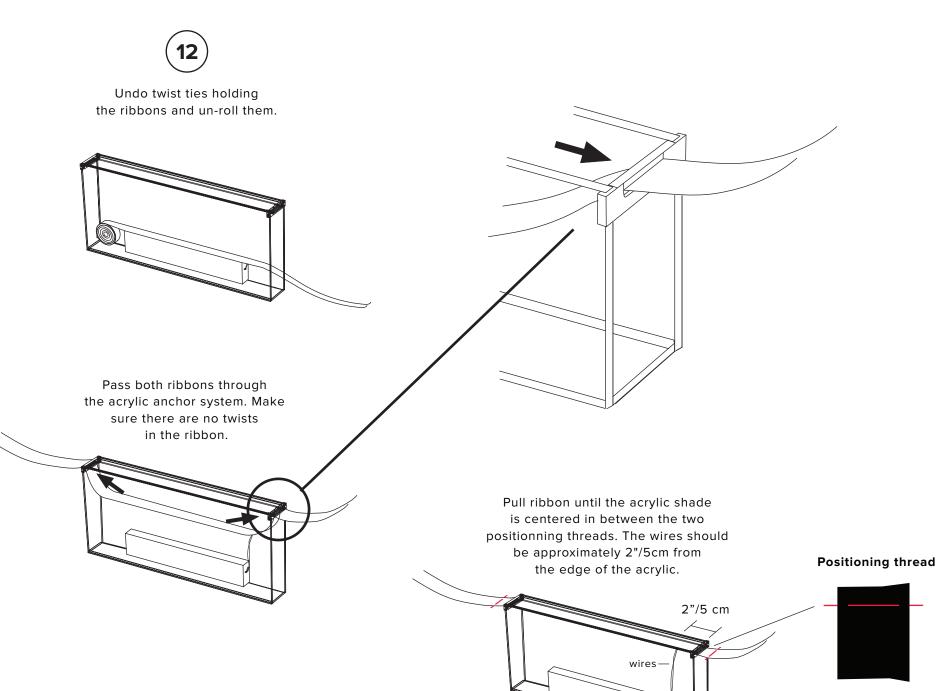

Do not remove positioning thread until the installation is complete.

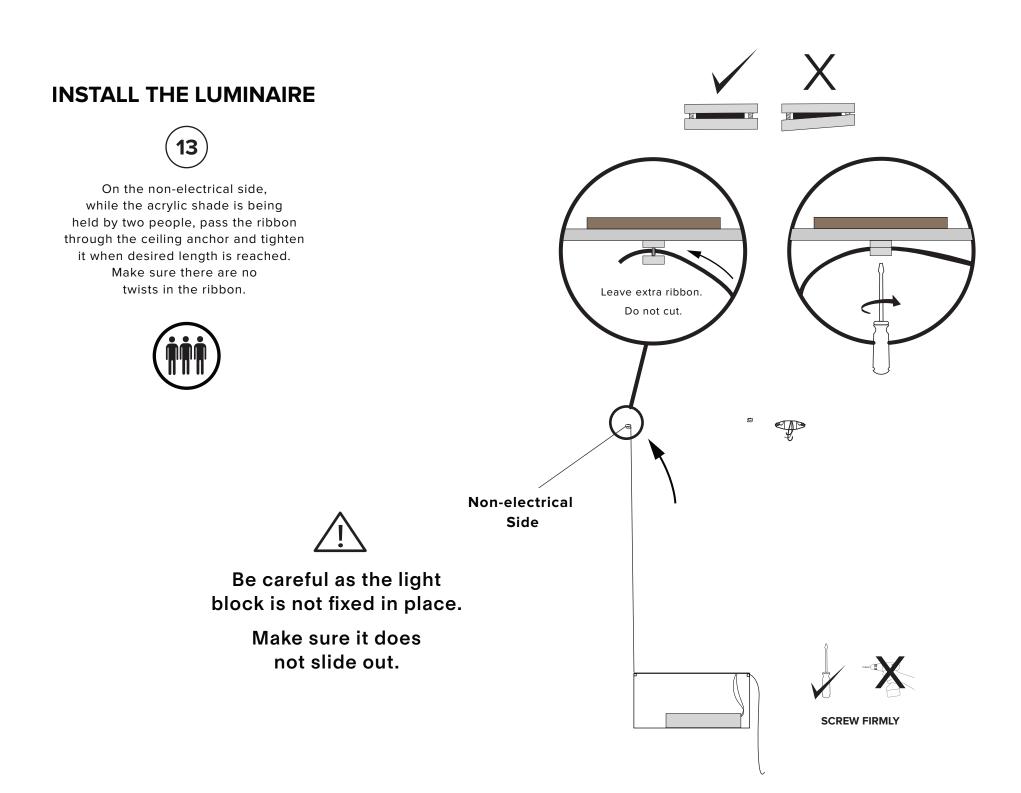




While the acrylic shade is being held by two people, pass the ribbon through the other ceiling anchor and tighten the anchor on the electrical side when desired length is reached.

> Make sure there are no twists in the ribbon.




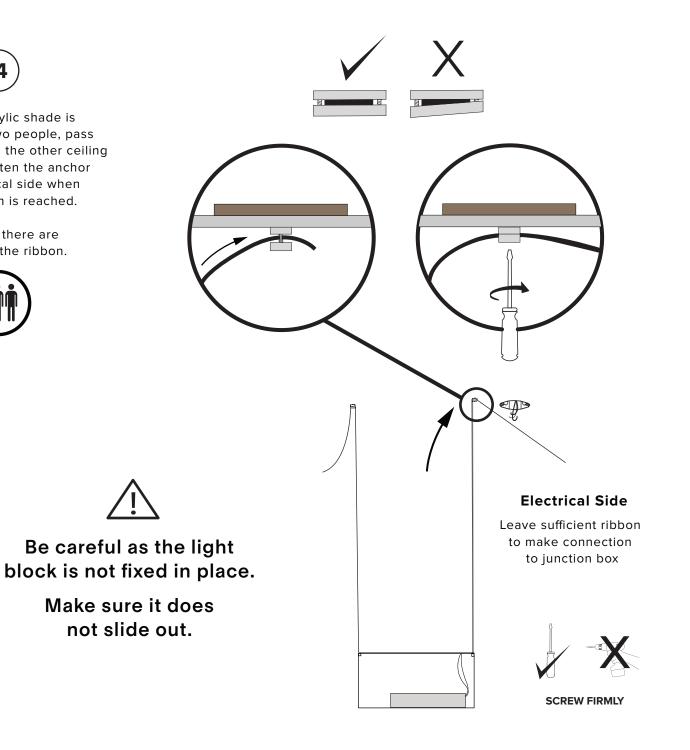


(15)

Ensure that the acrylic shade is level and centered in between the positioning tapes. If needed, adjust height while following steps 14 and 15. Then remove positioning tapes from the ribbon.


Make sure to not scratch or damage your acrylic shade.

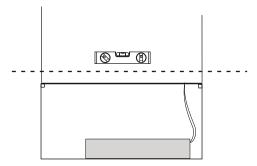

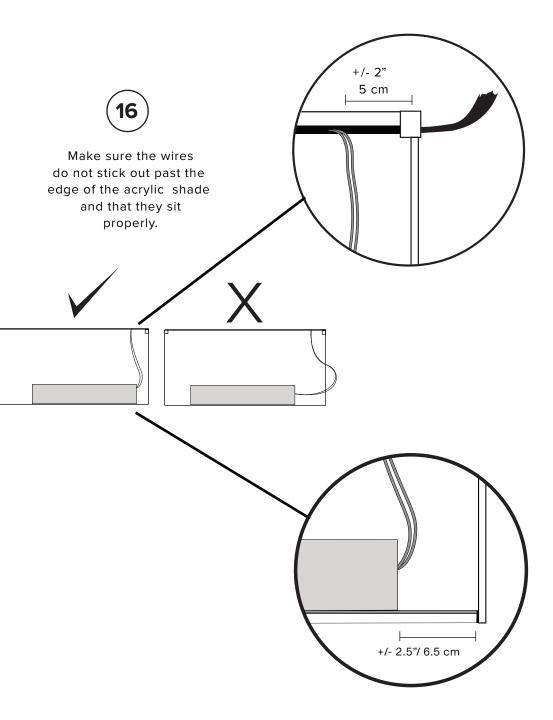





When luminaires is at the desired height and level trim ribbon 1"/ 2.5 cm after the anchor.

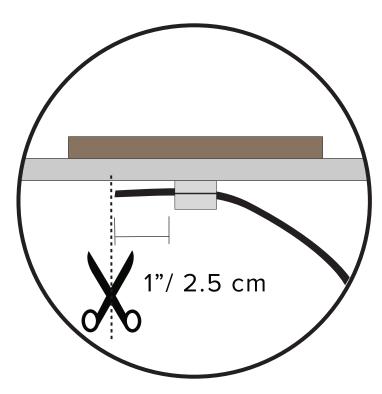

 
*One pair of scissors has been provided for each order. If you order several Saintes, only one pair will be provided.



P

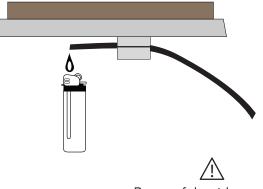


Be careful not burn your fingers or the ceiling.

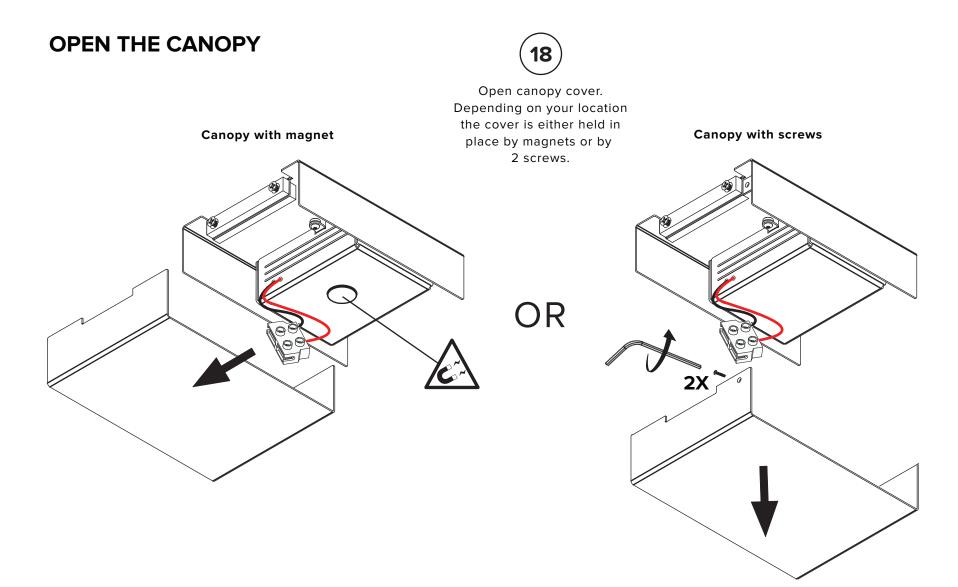


Gently slide the canopy cover away from the magnet.

Remove the screws in the front and back of the canopy cover and lower it.


INSTALL EXTENSION HARNESS

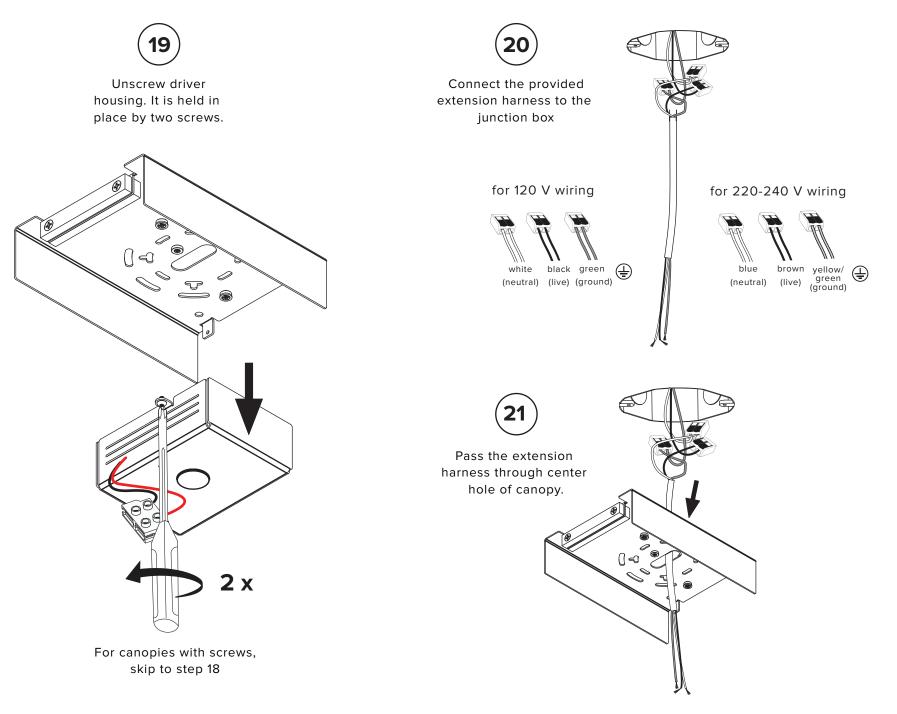


MOUNT CANOPY BRACKET

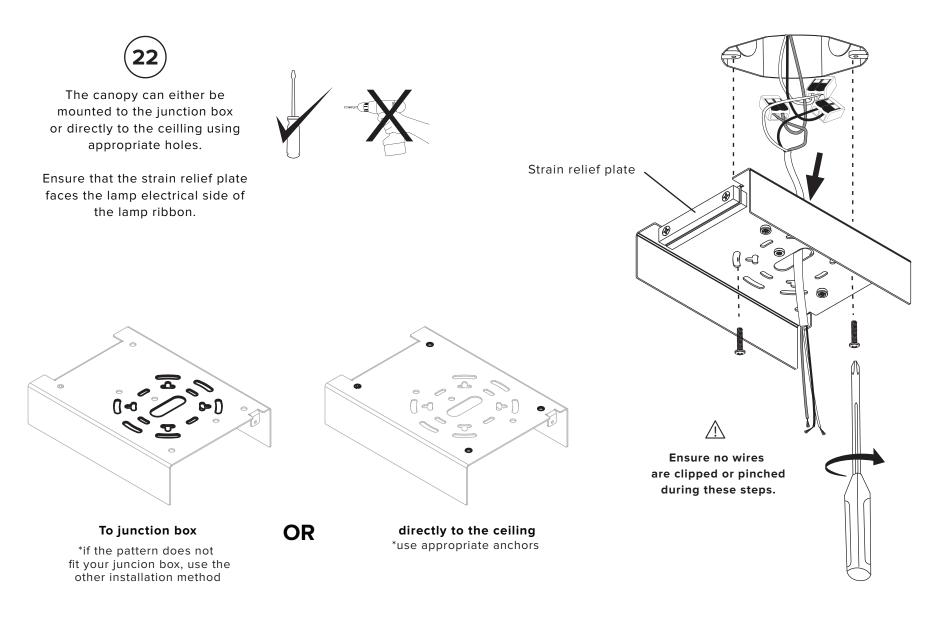


MAKE LINE/MAIN VOLTAGE CONNECTION TO ELECTRICAL BOX (AC)

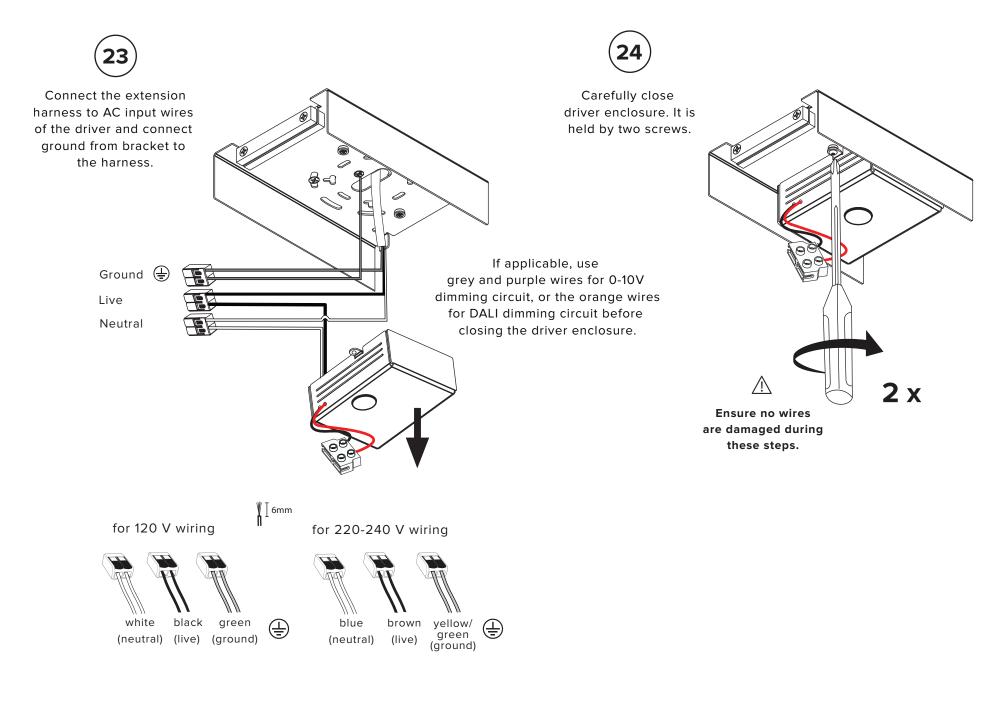


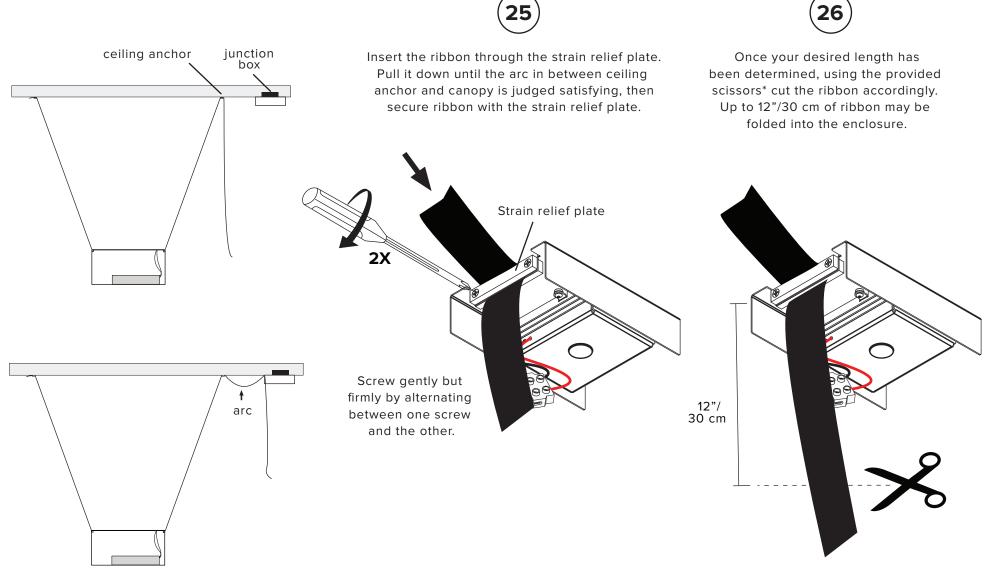



*One pair of scissors has been provided for each order. If you order several Saintes, only one pair will be provided.

UNSLEEVE CONDUCTORS

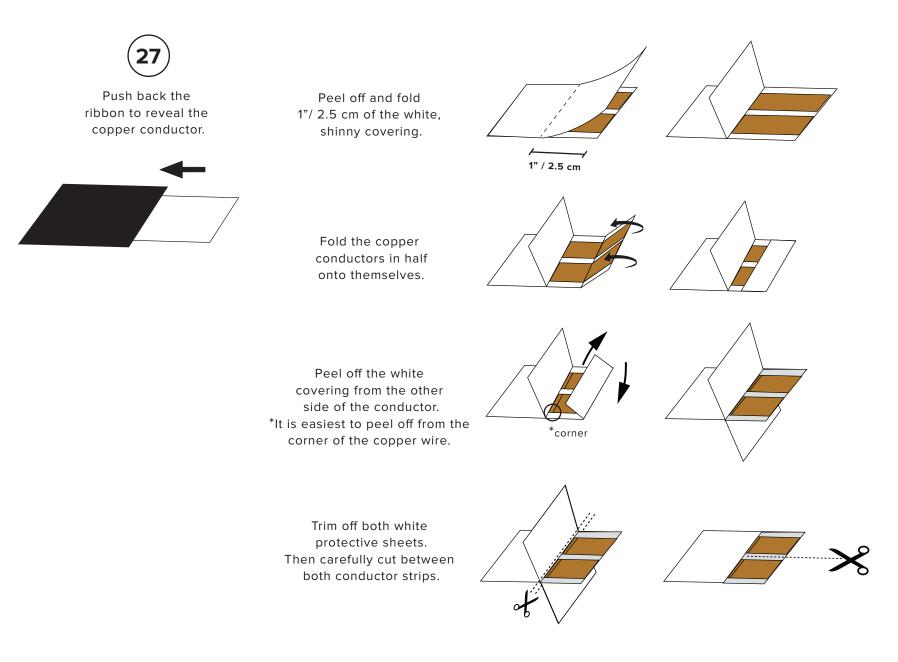


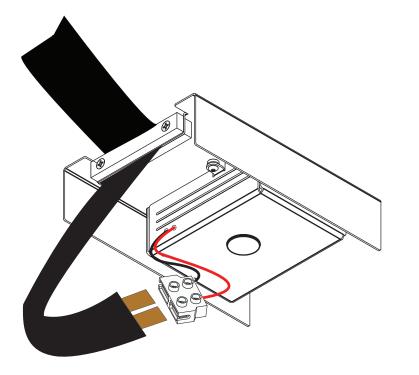

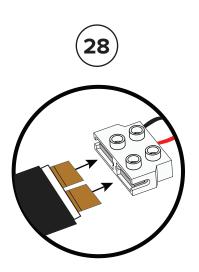

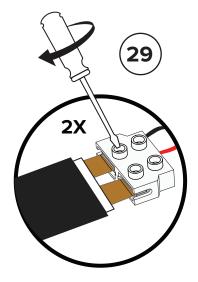

Both slots are the same and will receive either ribbon. (Polarity is not important)

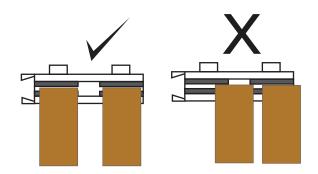

Do not overlap ribbons in both connectors




Close housing. The canopy cover is secured in place by a magnet or two screws depending on your model and location.

Carefully fold up extra ribbon within the housing.



Note, one side of canopy cover is slotted for the ribbon

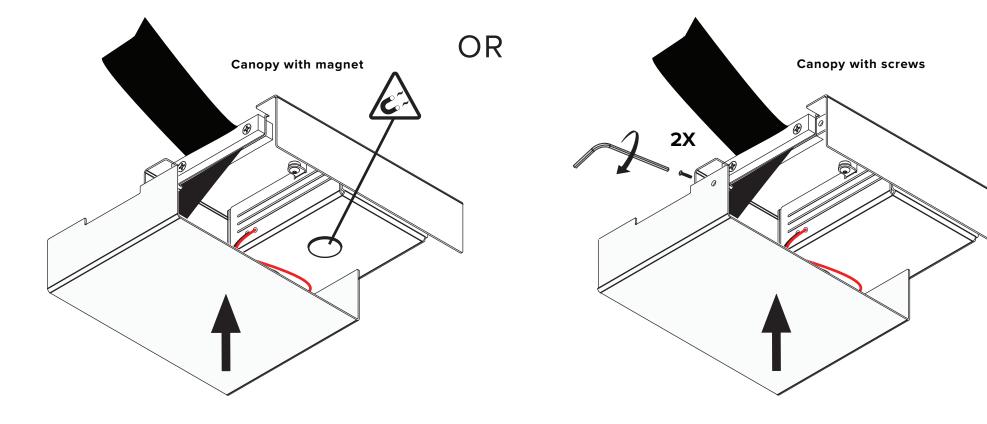


FINAL VERIFICATION

Ensure the block is well positionned. It should be located under the exit wire, +/- 2.5" / 6.5 cm from the side of your acrylic shade.

+/- 2"

5 cm

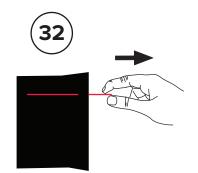

Pull out positioning thread



Use a feather duster or microfiber cloth to remove dust.

To clean finger prints, smudges or dirt on the acrylic, gently and very carefully clean the inside and outside of the shade using water and a microfiber cloth, then a dry mocrofiber cloth.

Do not use abrasive products or contaminated cloth as it could result in scratches on the surface !





