
SILO 11 - 120V

(phase and 0+10V dimming) Plenum or remote installation

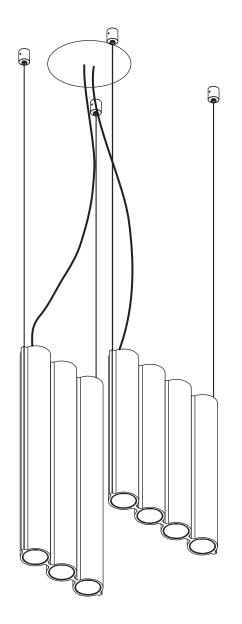

- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site


$\overline{\mathbb{N}}$


Never turn on power supply until installation is completed


1

Remove Octobox cover plate.

Refer to: Annexe A (phase dimming) - page 11 Annexe B (0-10V) - page 17

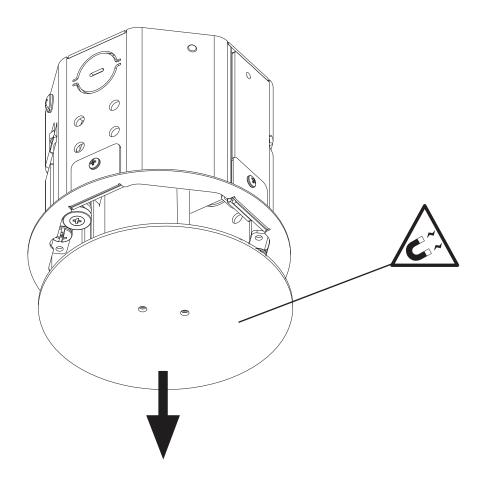

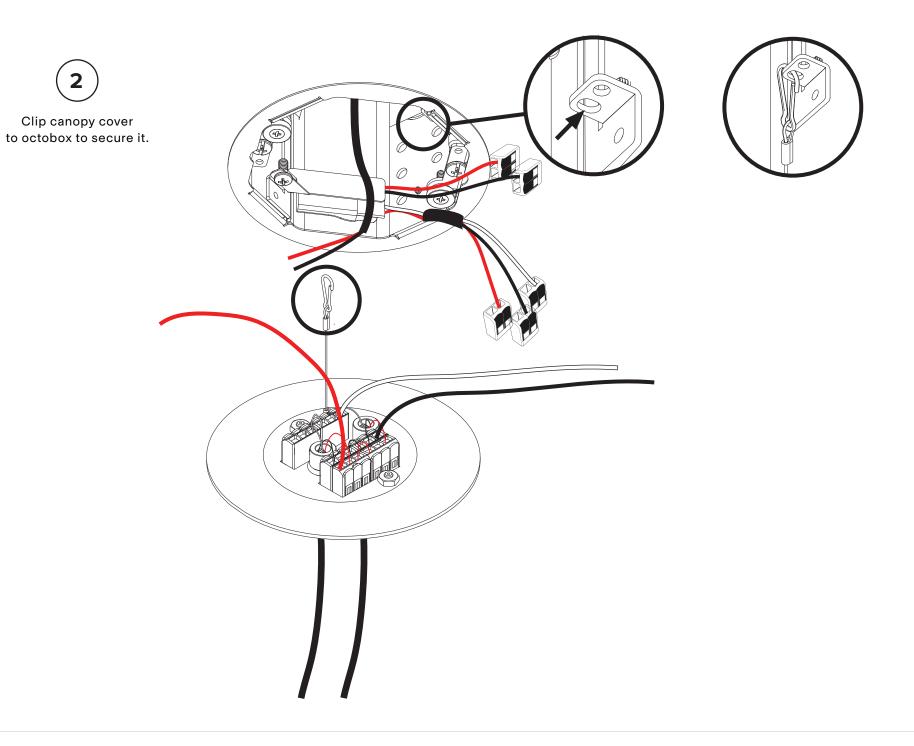

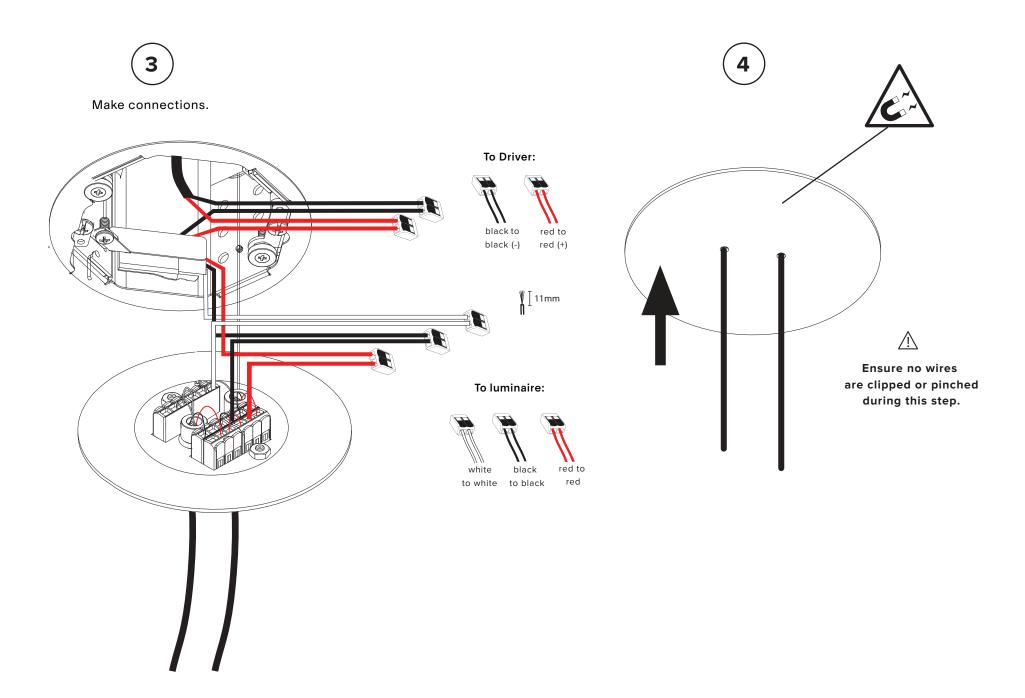



5


After the recessed canopy is installed, carefully replace the cover plate making sure no wires are clipped or pinched.


Use the templates provided at the end of the manual to position the luminaire and to mark your anchor locations.


Note that the cord side of the luminaire should be positioned closest to the canopy.

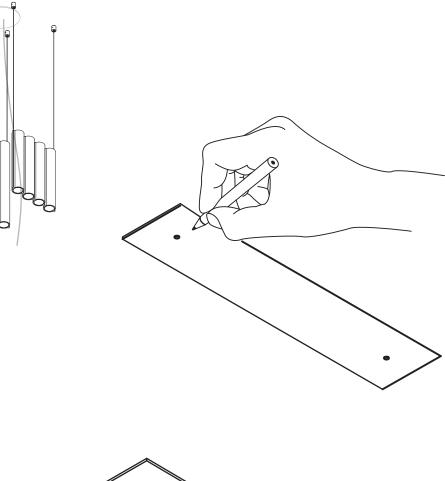


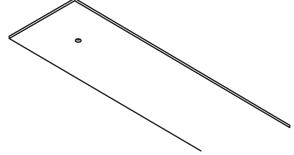


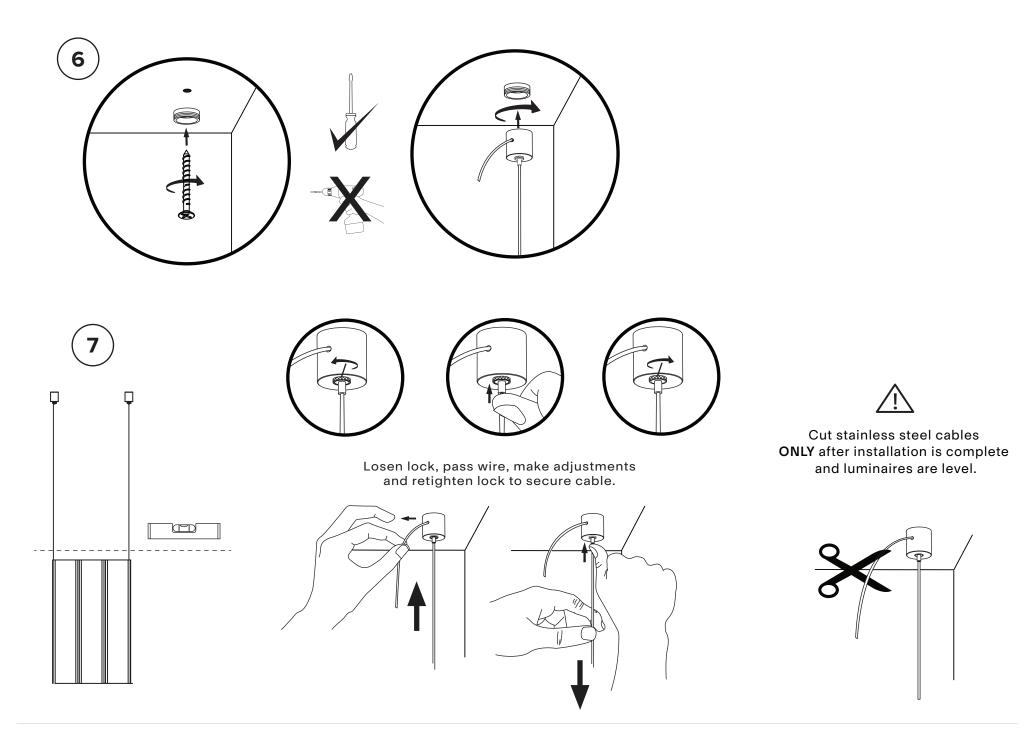

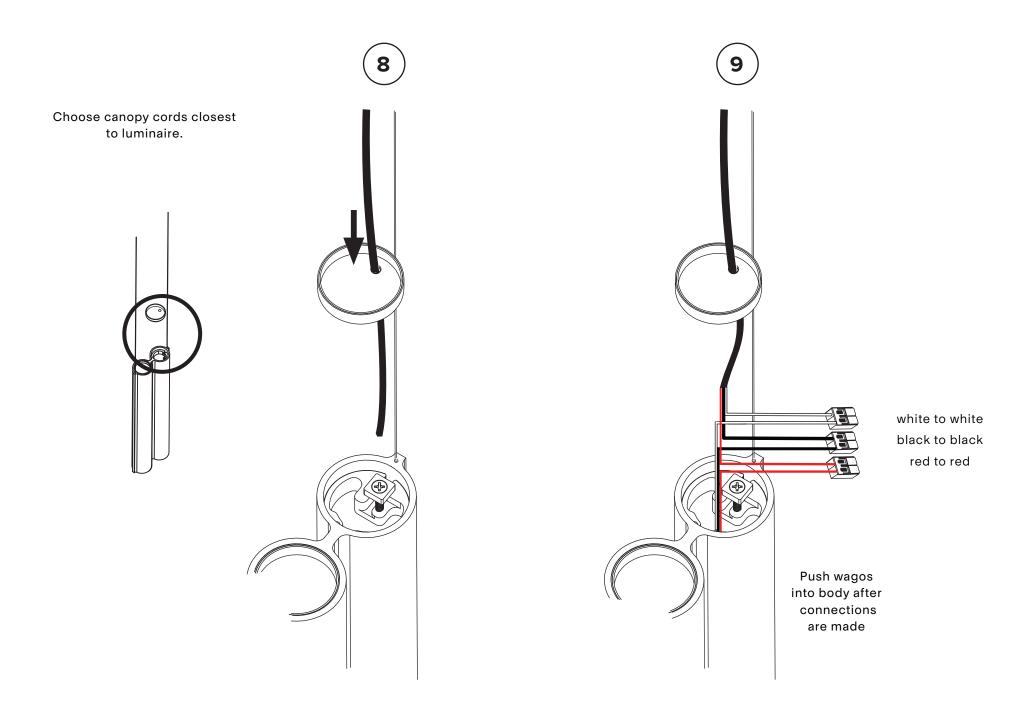

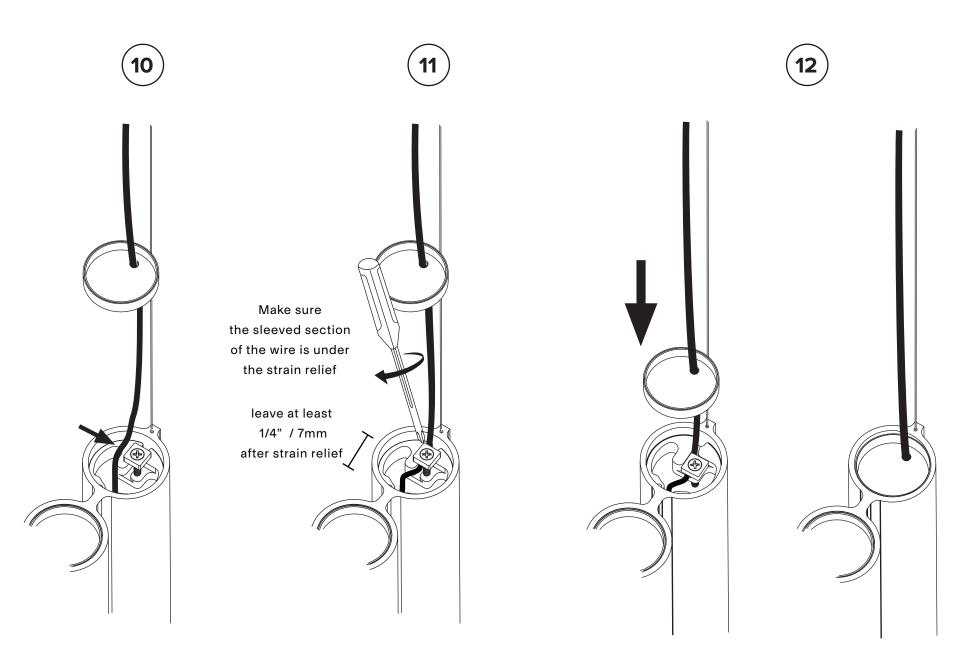


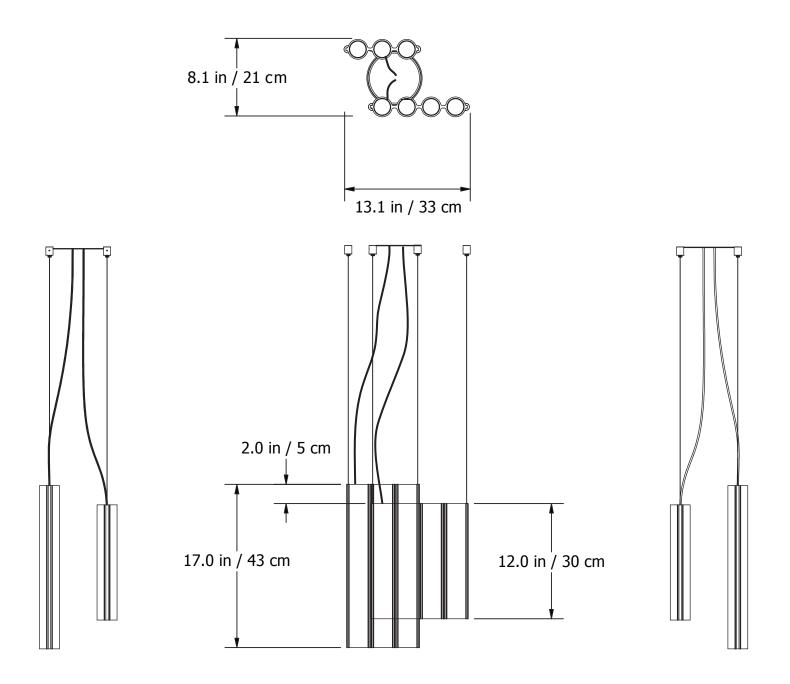


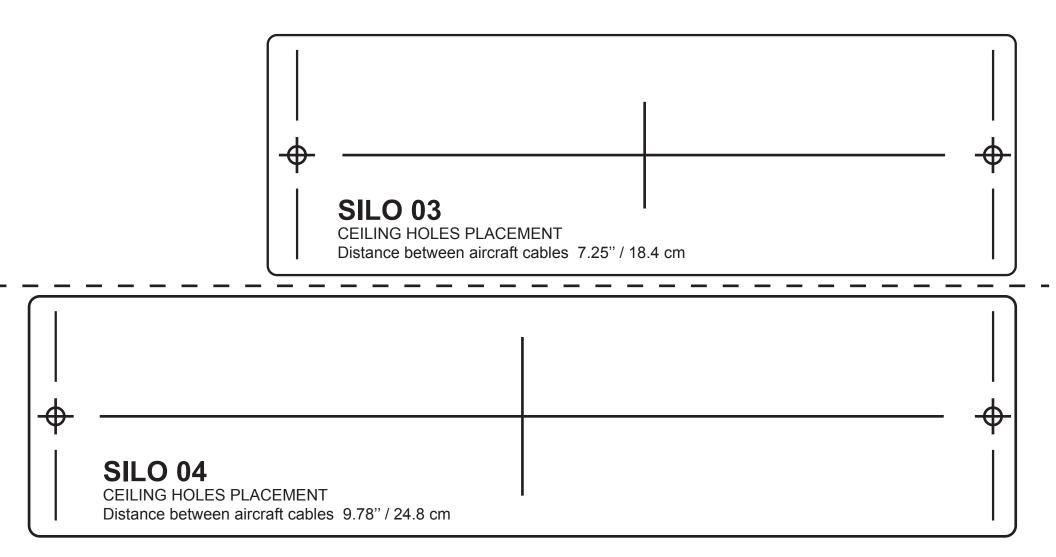


RECESSED CANOPY ANNEX A


Octobox with auxiliary box (phase and 0+10V dimming) Plenum installation

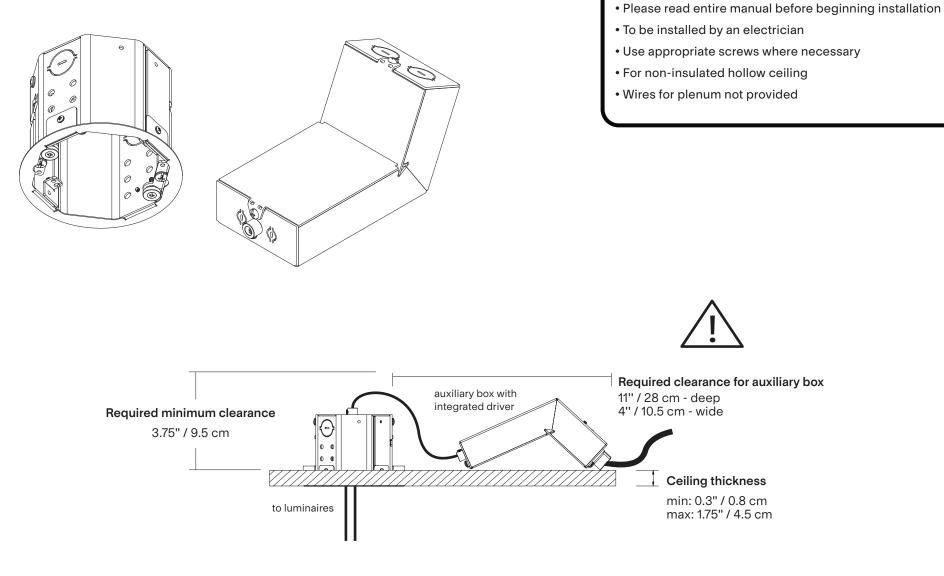


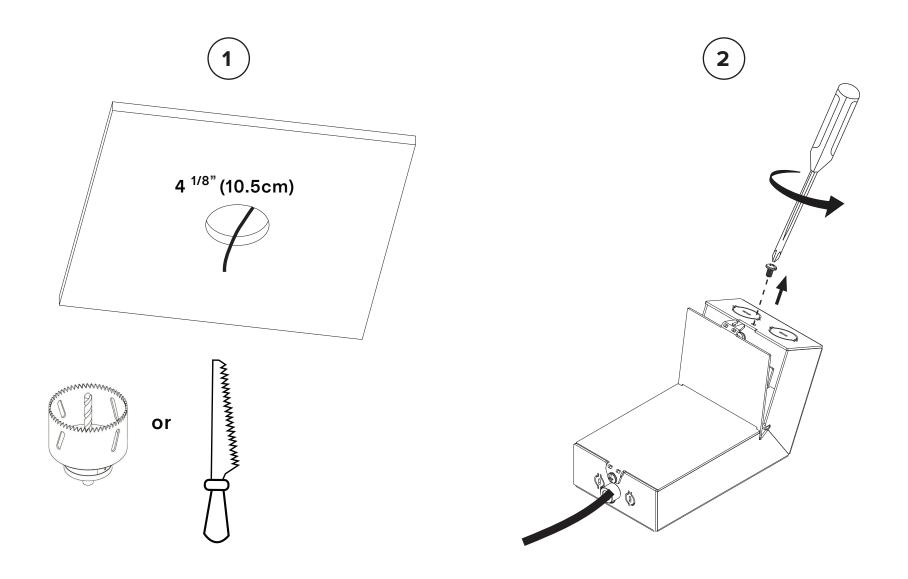


PHASE DIMMING REPRESENTATION

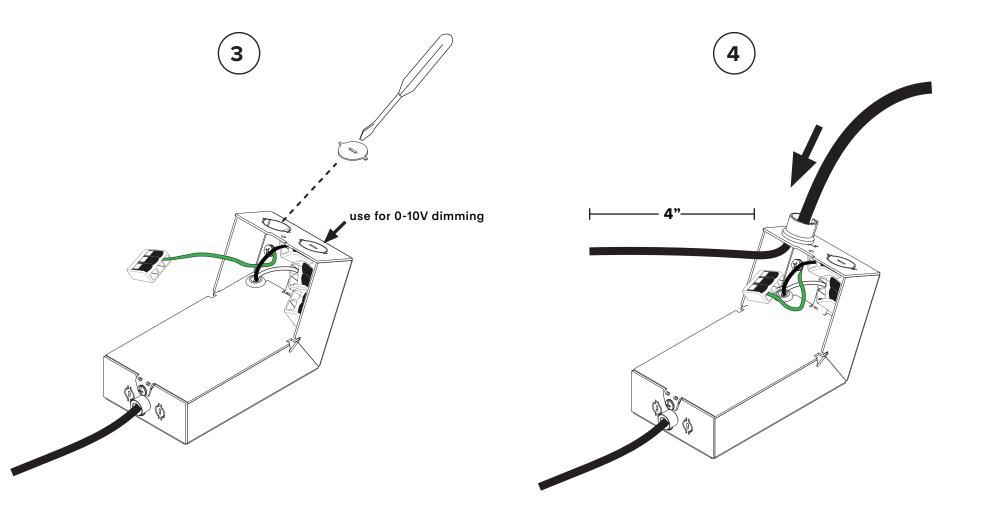

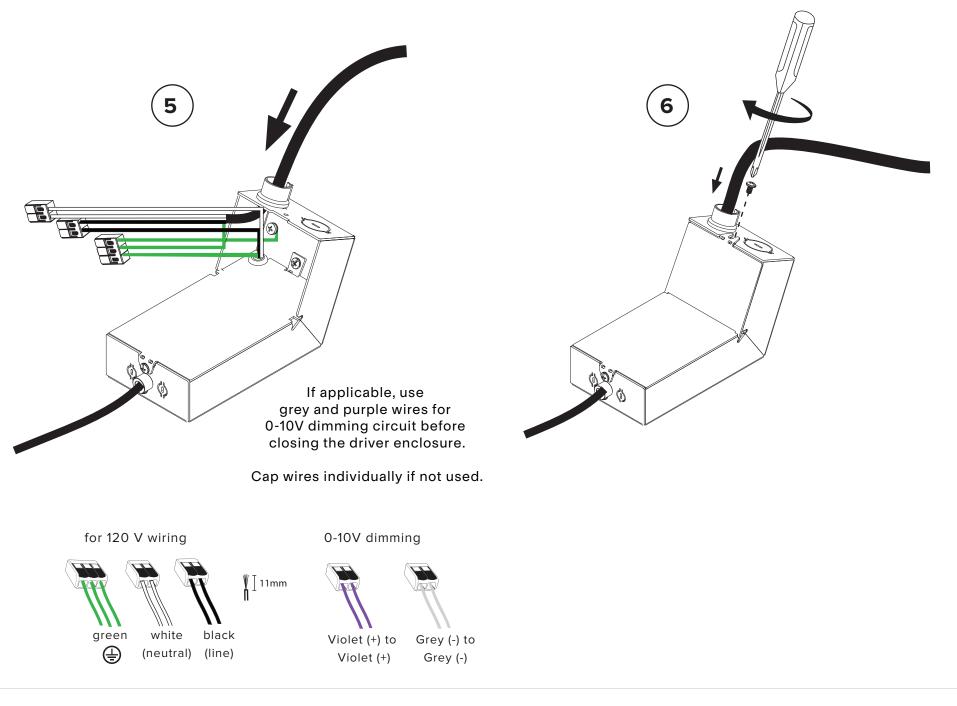


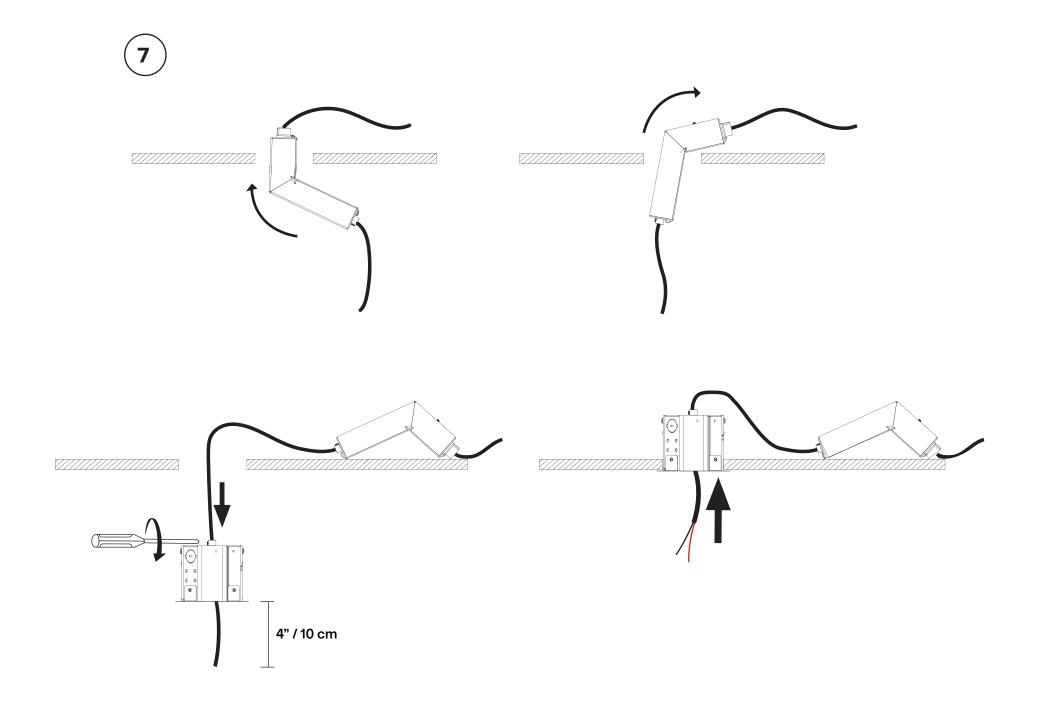


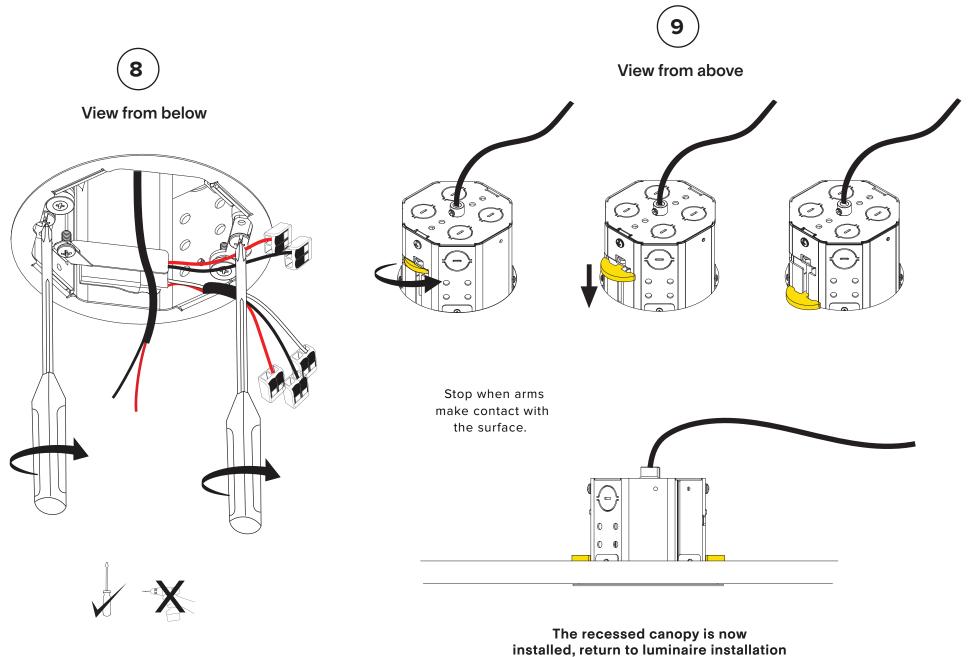


steps and follow the instructions (page 3).

RECESSED CANOPY ANNEX B Octobox with remote driver (phase and 0-10V dimming) • Please read entire manual before beginning installation **Remote installation** • To be installed by an electrician Use appropriate screws where necessary • For non-insulated hollow ceiling • Wires for plenum not provided 0 Wire not provided **Remote driver** Consult charts on page 21 for max wire length Install in a well ventilated area. **Required minimum** Must be accessible for maintenance. clearance 3.75" / 9.5 cm **Ceiling thickness** to luminaires 9" / 22.9 cm min: 0.3" / 0.8 cm max: 1.75" / 4.5 cm WH 1^{7/8}" / 4.8 cm ۰.¢ ÷ 3 ^{5/16}" / 8.4 cm

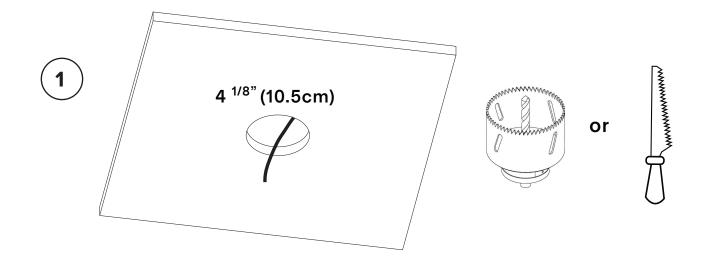


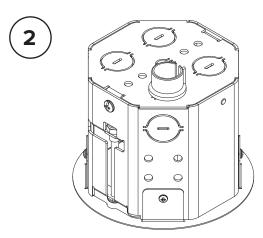

Install suitable connectors for your installation (not included)

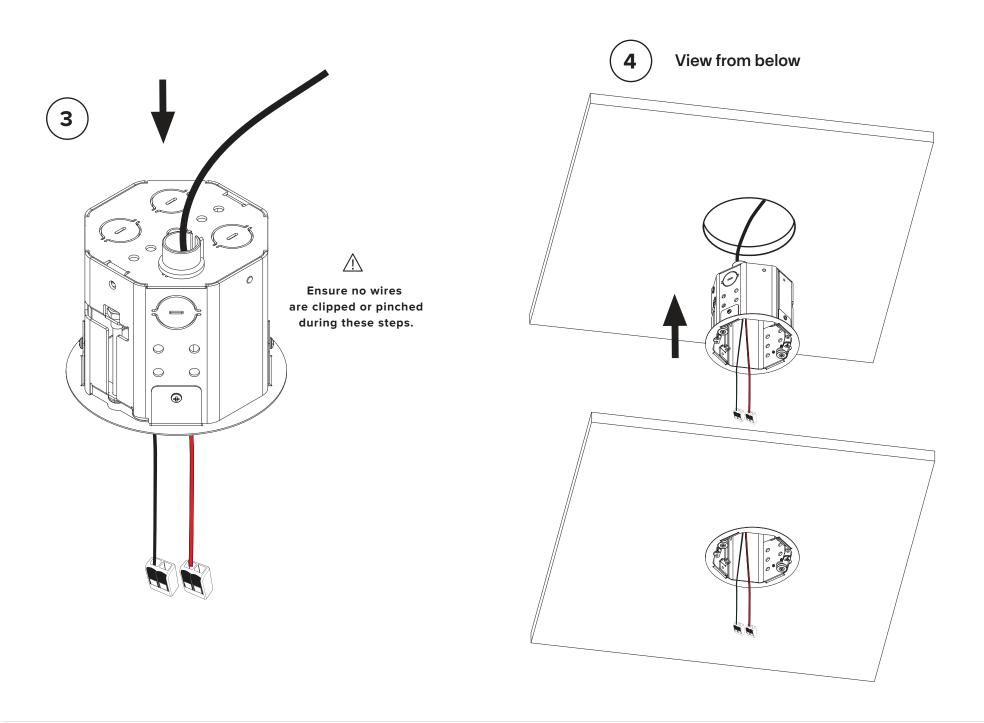

5

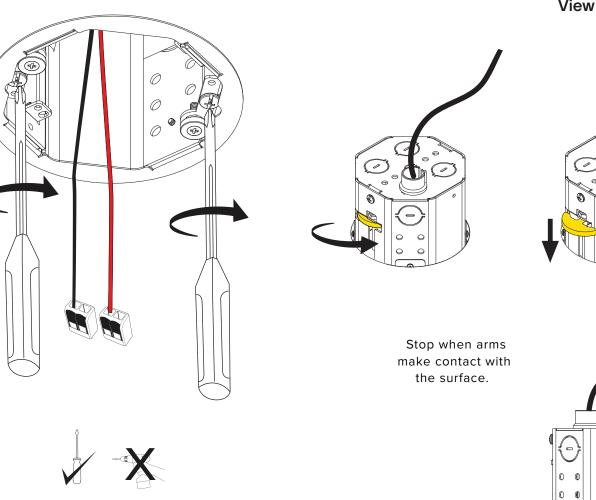

View from above


0

n,


0


<u>์</u> ๏

Ø

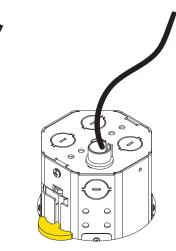


REMOTE DRIV	ER HOUSING			99
 Must be accessible for maintenance in a well aerated location for heat dissipation 		LINE VOLTAGE AND DIMMING INPUT	35/16	80000000
Remote Wire Gauge and Length Allowance Maximum distance between suspended structure internal wiring and remote driver housing				
Wire gauge	Max Distance			
18AWG 16AWG 14AWG	34.4 ft / 10.5m 54.7 ft / 16.7m 86.9 ft / 26.5m		1 ⁷ /8	2x 1/2" TRADE SIZE ELECTRICAL KNOCK-OUT (Ø7/8" HOLE)
12AWG	138.2 ft / 42.1m			

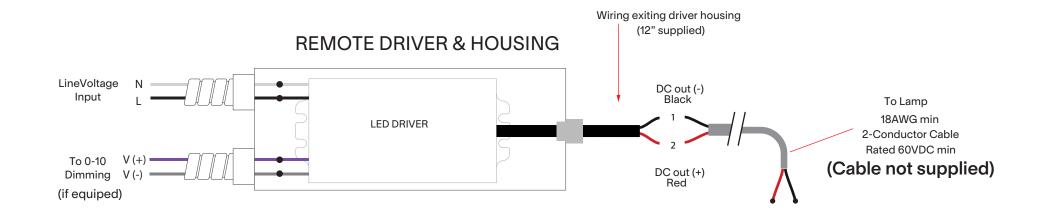

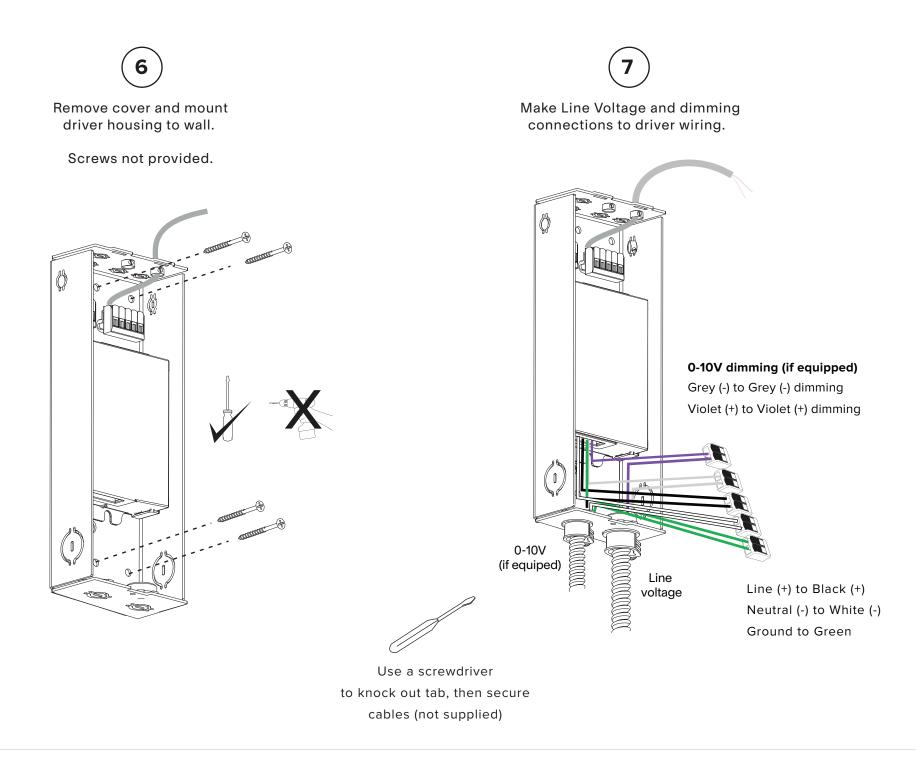



Close driver housing and make low voltage connections.

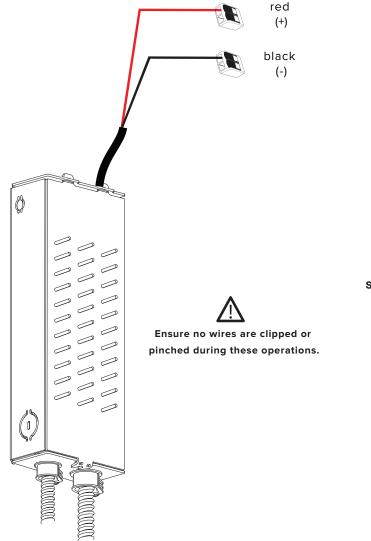

The recessed canopy is now installed, return to luminaire installation steps and follow the instructions (page 3).

9