
#### SILO 14 220-240V

#### Recessed canopy Plenum (non insulated) or remote installation

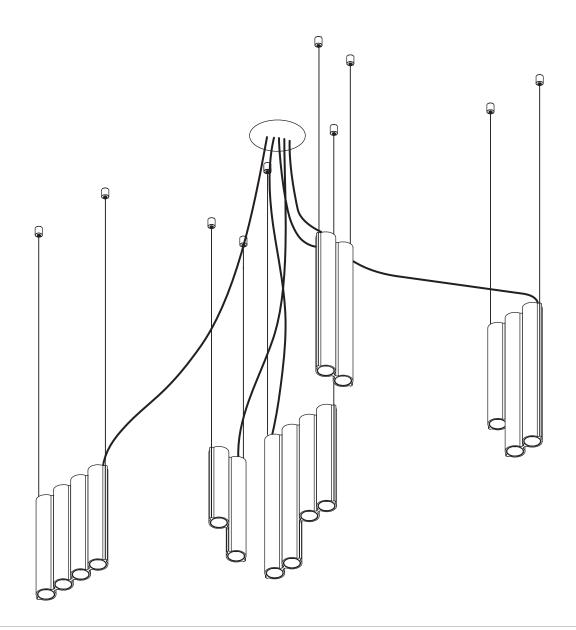



- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site





Never turn on power supply until installation is completed




Remove Octobox cover plate.

Refer to: Annex (independent driver) - page 12

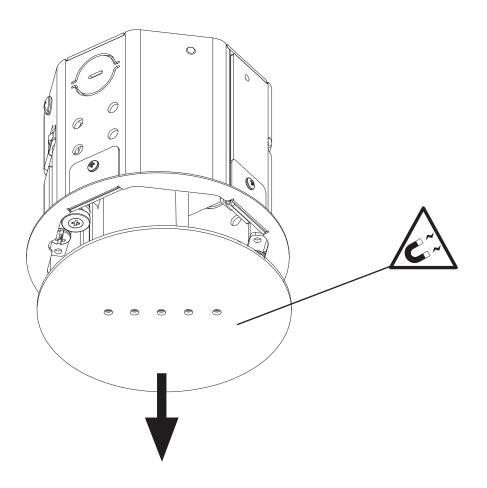

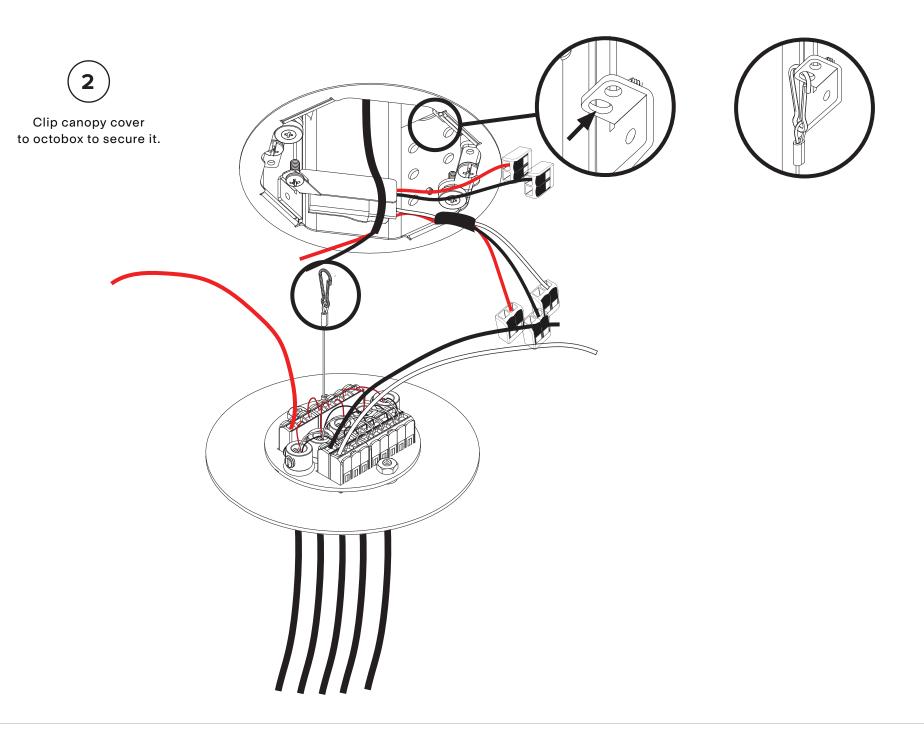

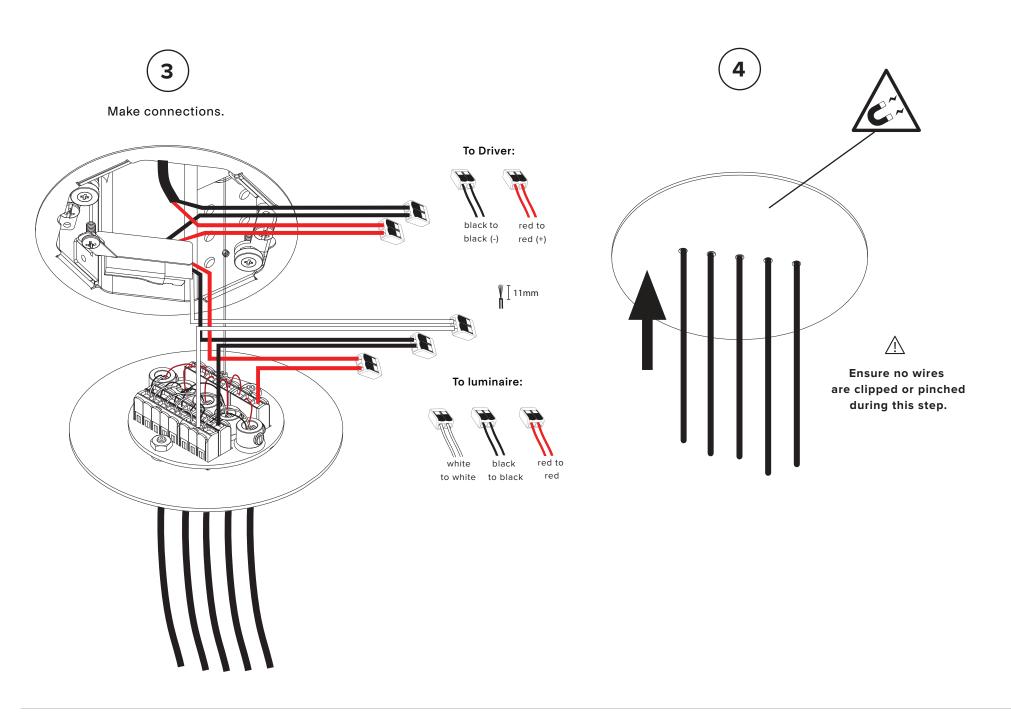


# 5


After the recessed canopy is installed, carefully replace the cover plate making sure no wires are clipped or pinched.


Use the templates provided at the end of the manual to position the luminaire and to mark your anchor locations.


Note that the cord side of the luminaire should be positioned closest to the canopy.

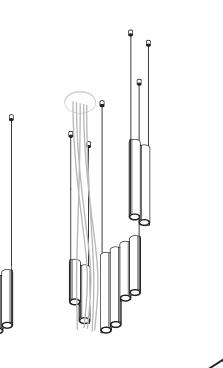



C

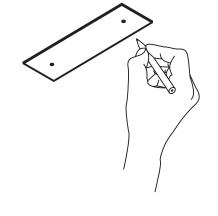


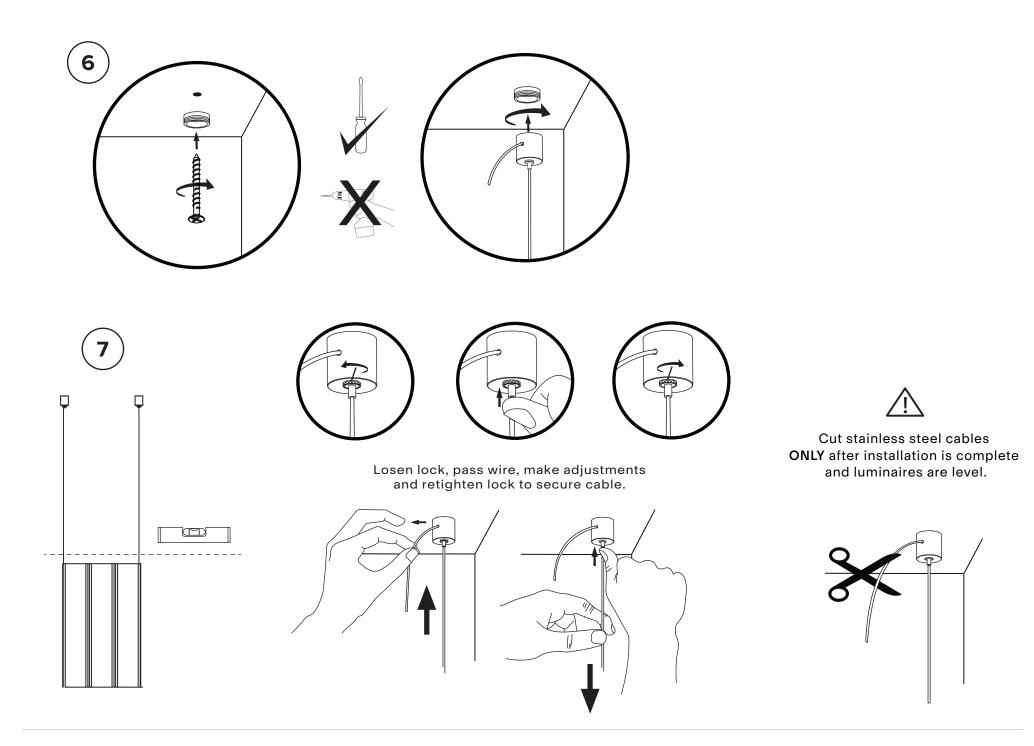


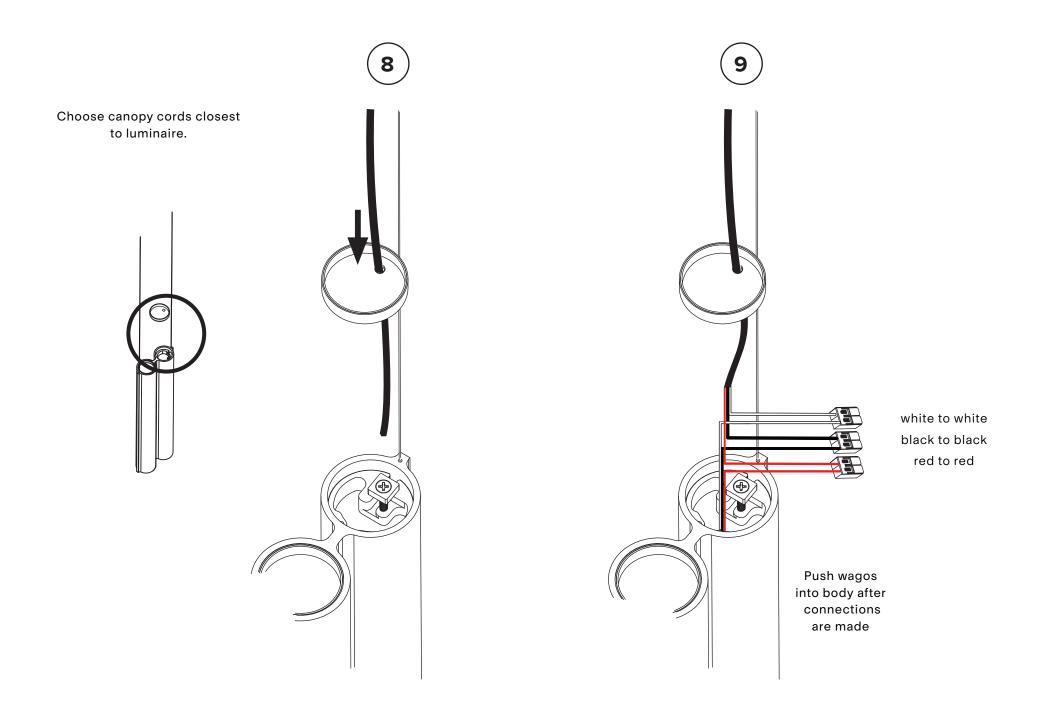

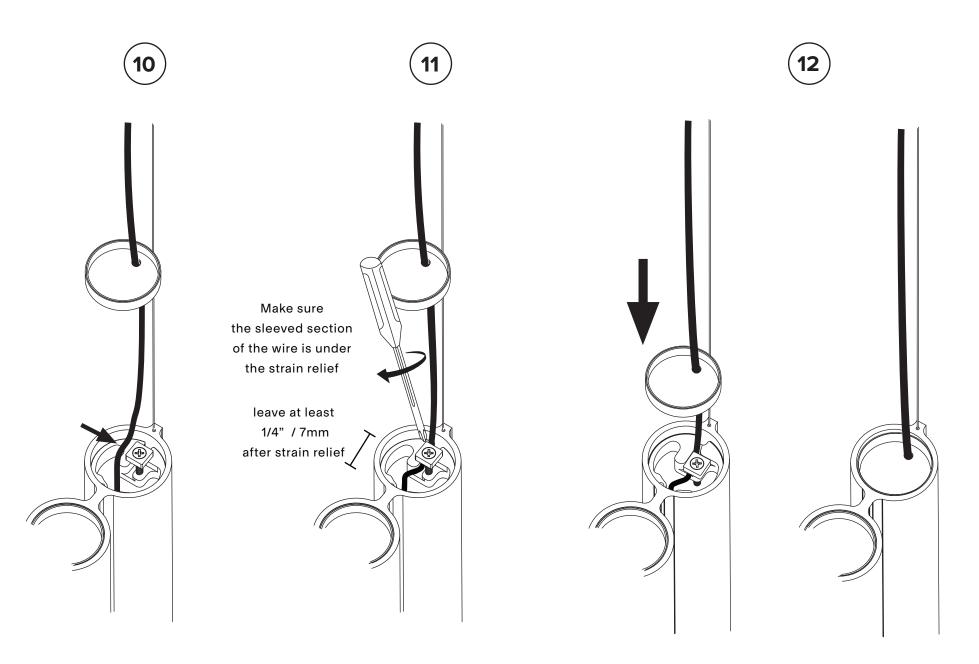

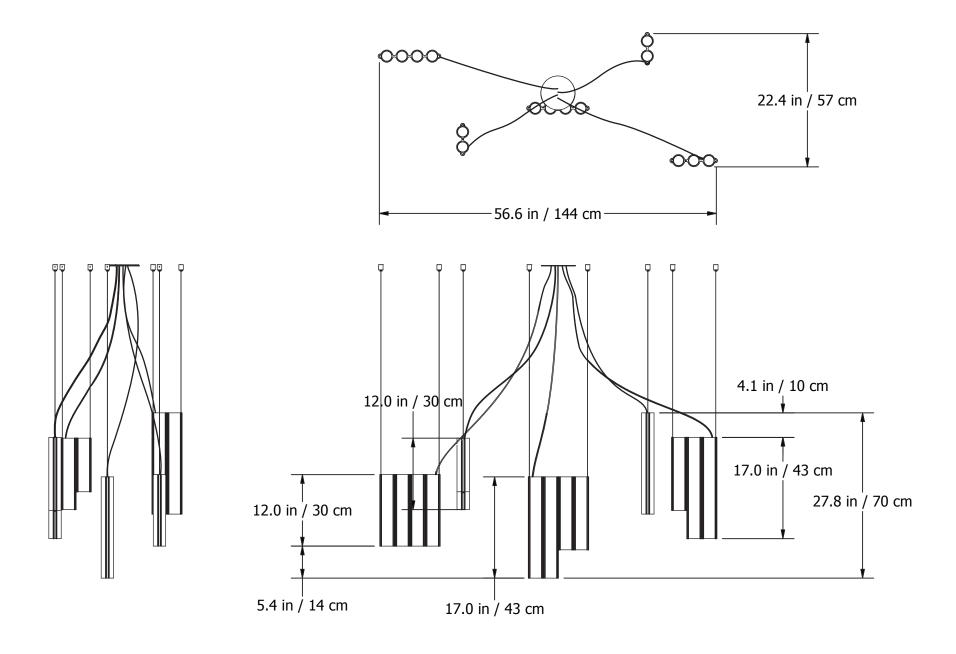


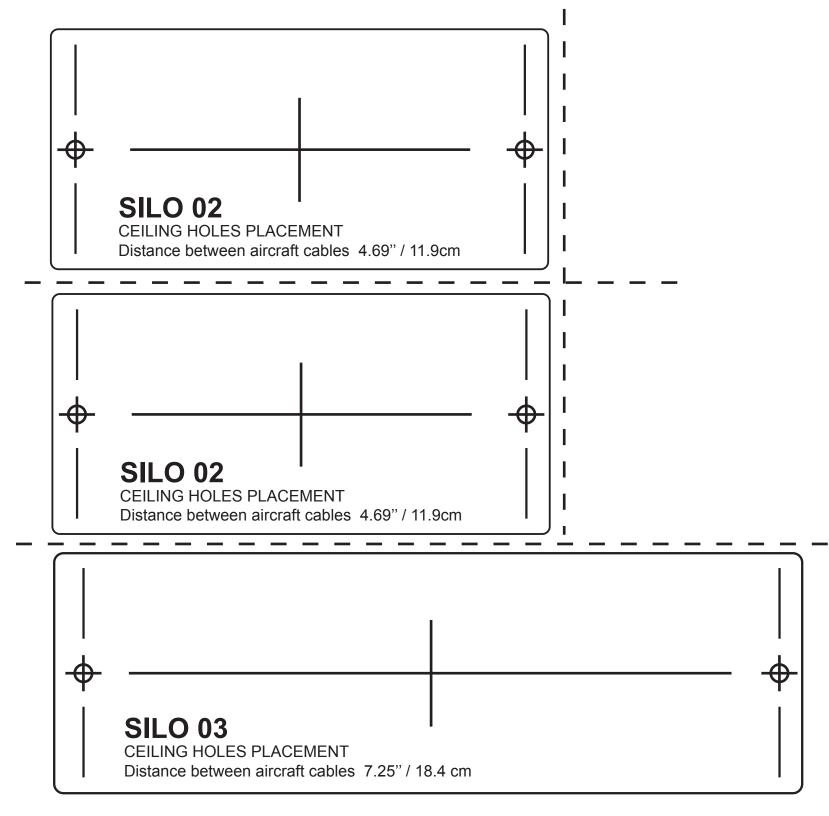


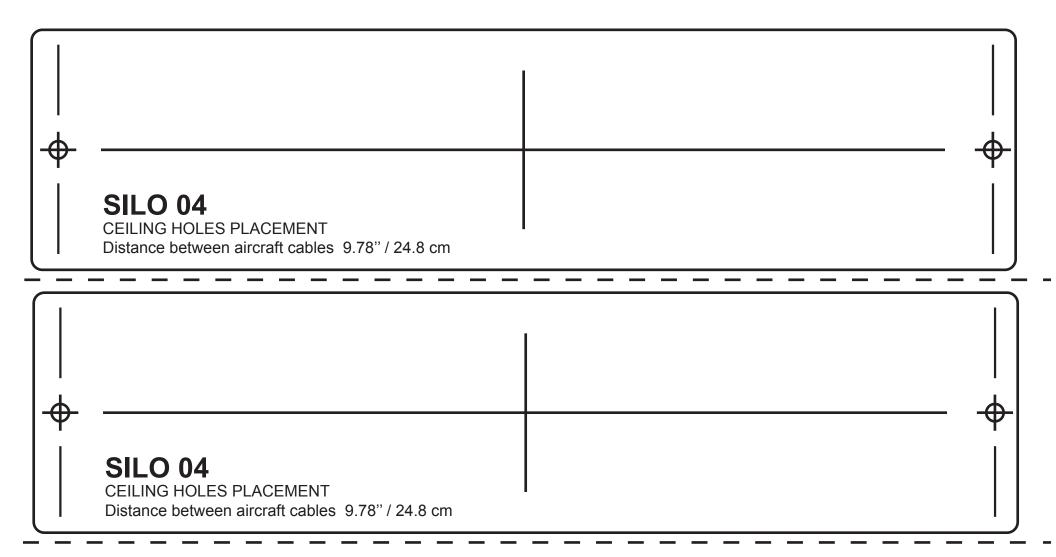

#### **RECESSED CANOPY INSTALLATION**

#### Octobox with independent driver

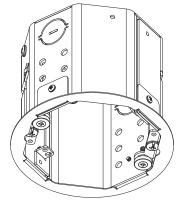


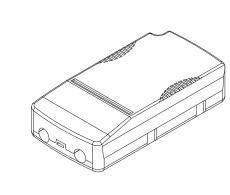

Please read entire manual before beginning installation


- To be installed by an electrician
- Use appropriate screws where necessary
- For non-insulated hollow ceiling
- Wires for plenum not provided


For remote driver installation Consult chart below for max wire length.

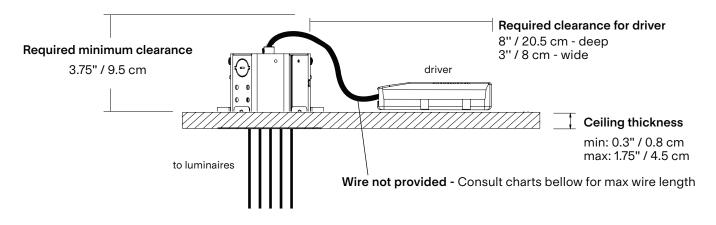



Distance between lamp and driver.

Wire gauge	Max Distance
18AWG	34.4 ft / 10.5m
16AWG	54.7 ft / 16.7m
14AWG	86.9 ft / 26.5m
12AWG	138.2 ft / 42.1m

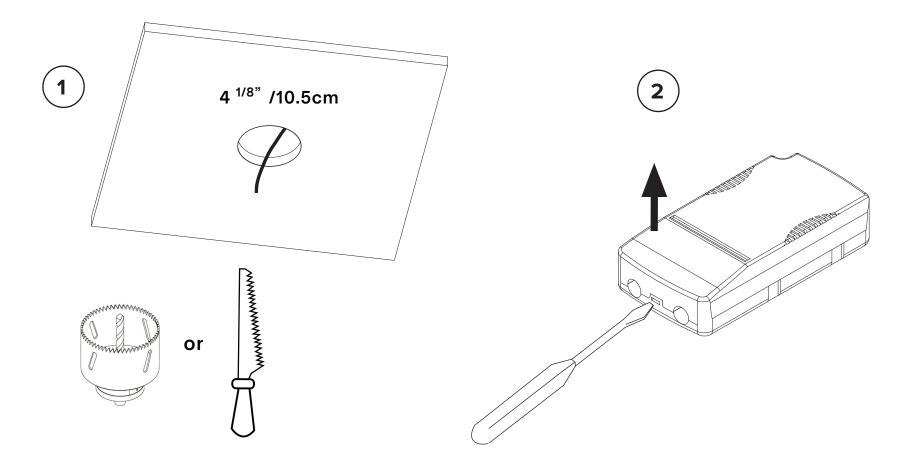

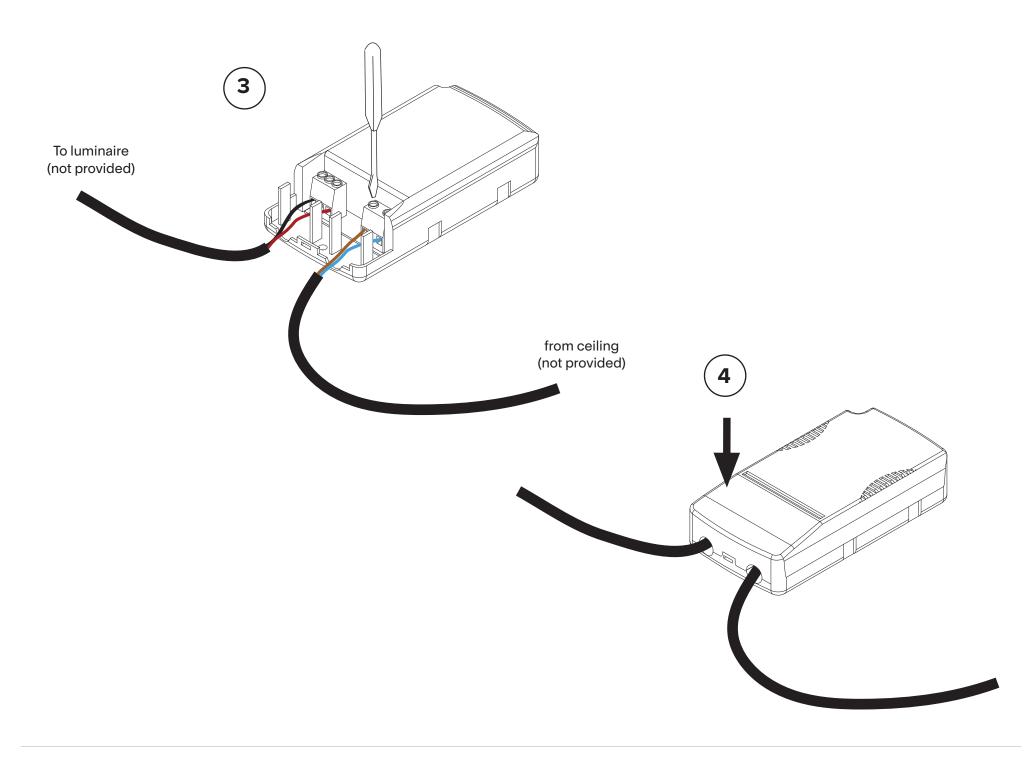

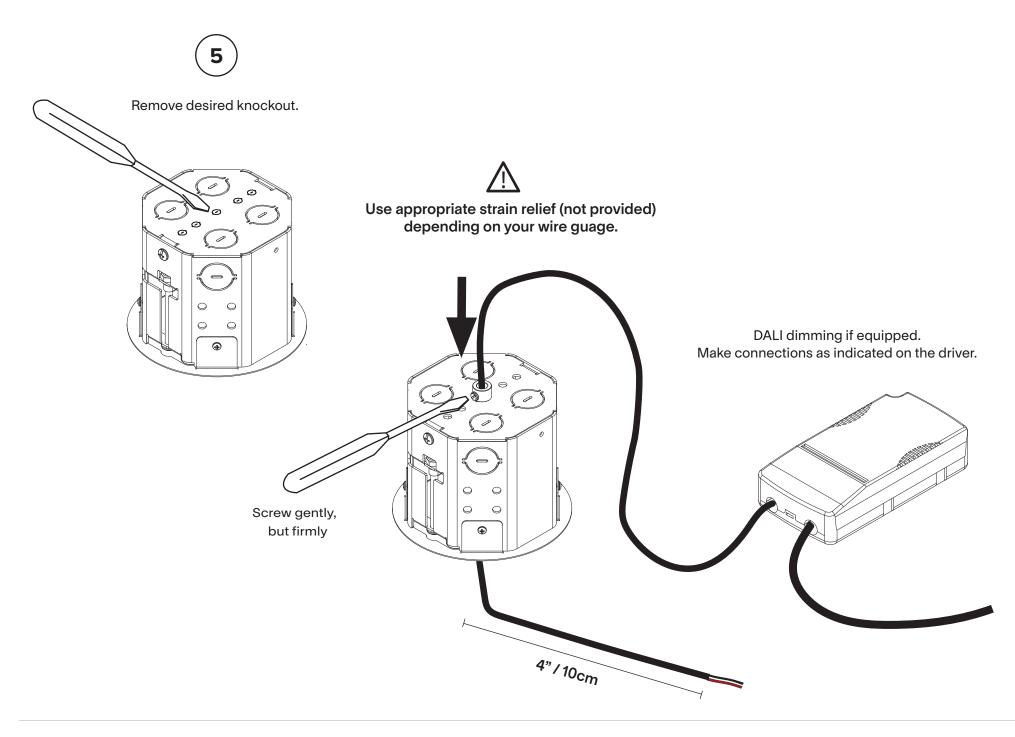

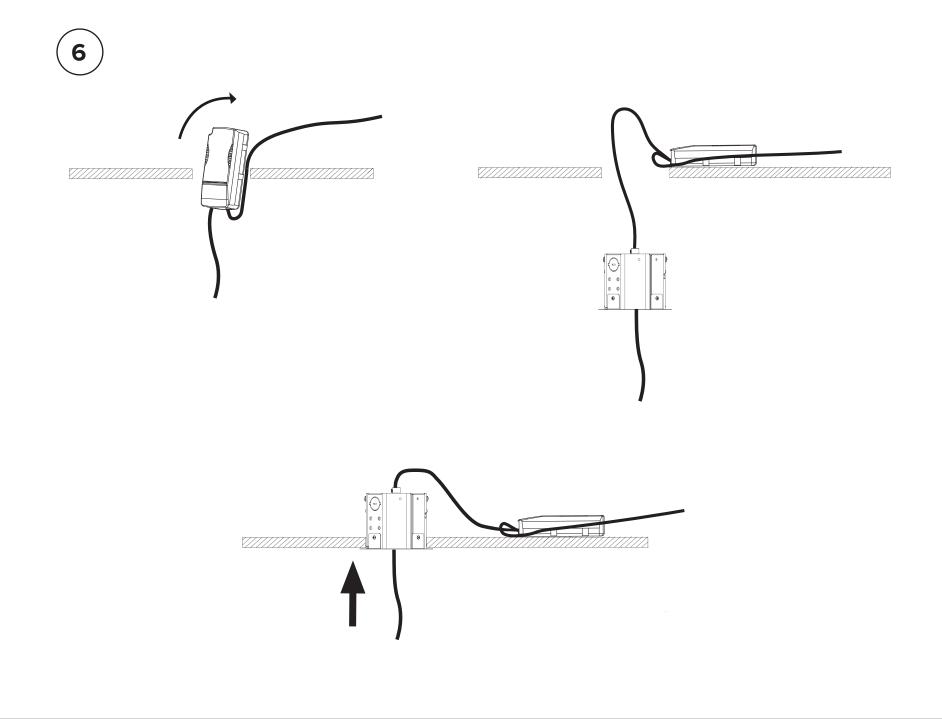

#### View from above

