
SILO 14 - 120V

(phase and 0+10V dimming) Plenum or remote installation

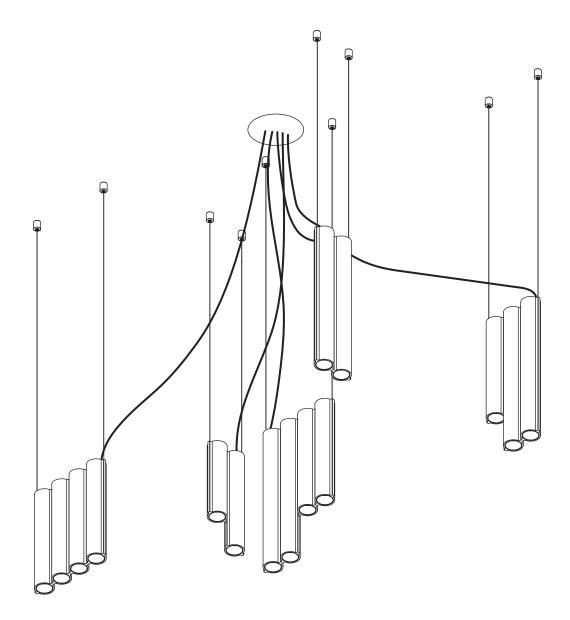



- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site





Never turn on power supply until installation is completed





Remove Octobox cover plate.

Refer to: Annexe A (phase dimming) - page 12 Annexe B (0-10V) - page 18

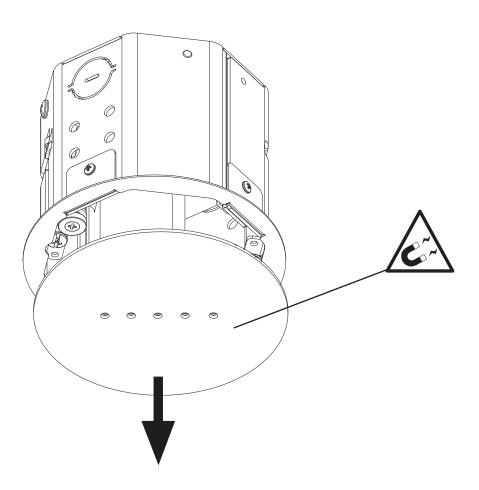

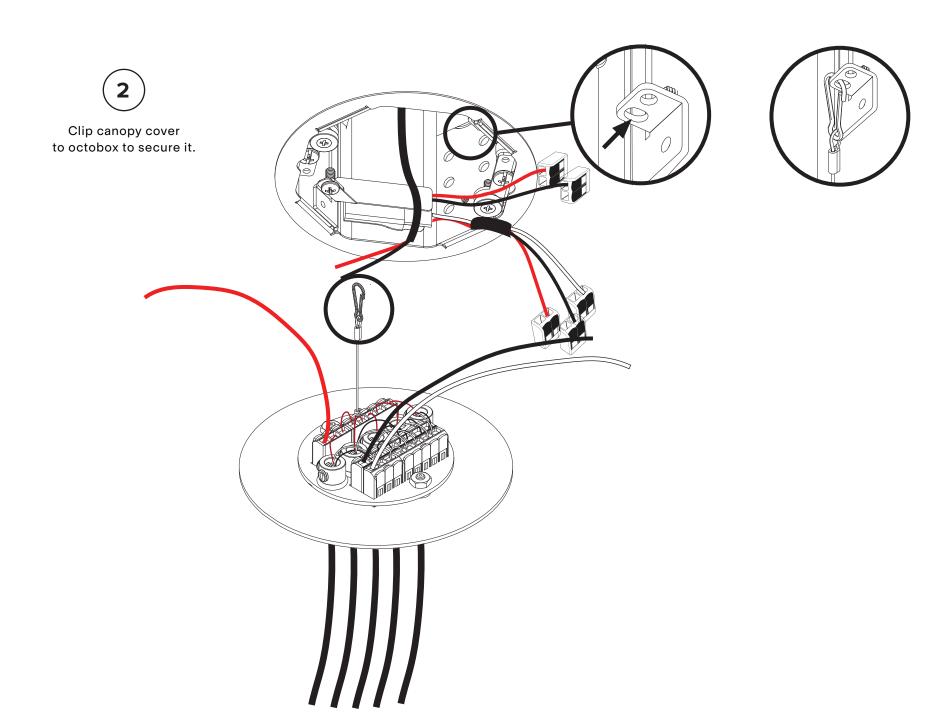

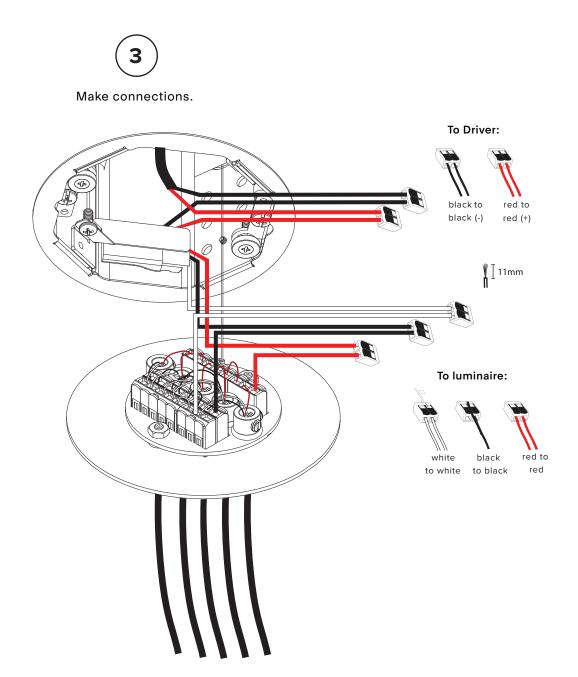

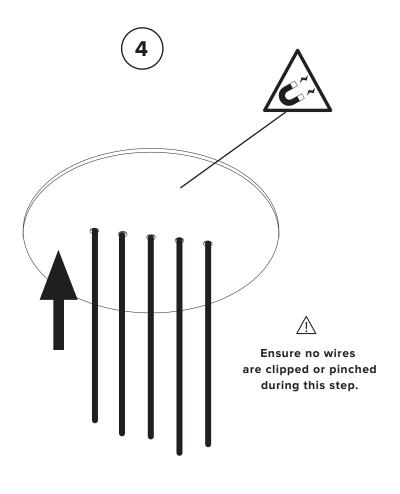






After the recessed canopy is installed, carefully replace the cover plate making sure no wires are clipped or pinched.

Use the templates provided at the end of the manual to position the luminaire and to mark your anchor locations.

Note that the cord side of the luminaire should be positioned closest to the canopy.

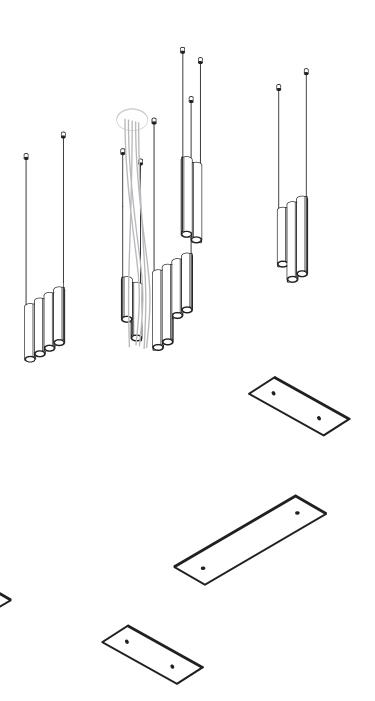

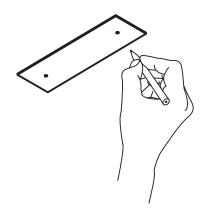


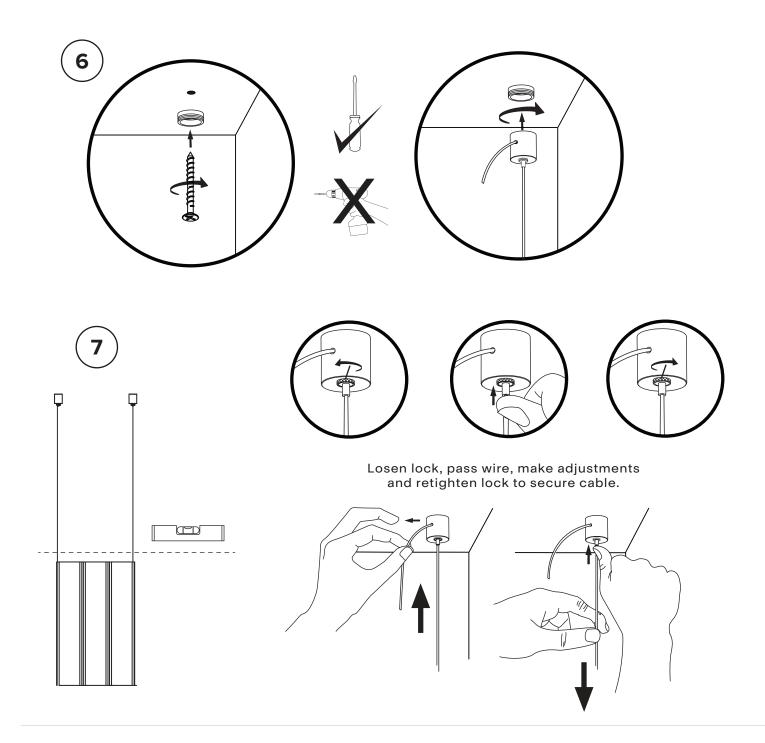





Cut stainless steel cables


ONLY after installation is complete
and luminaires are level.

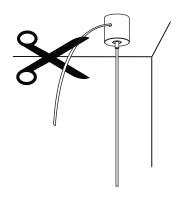


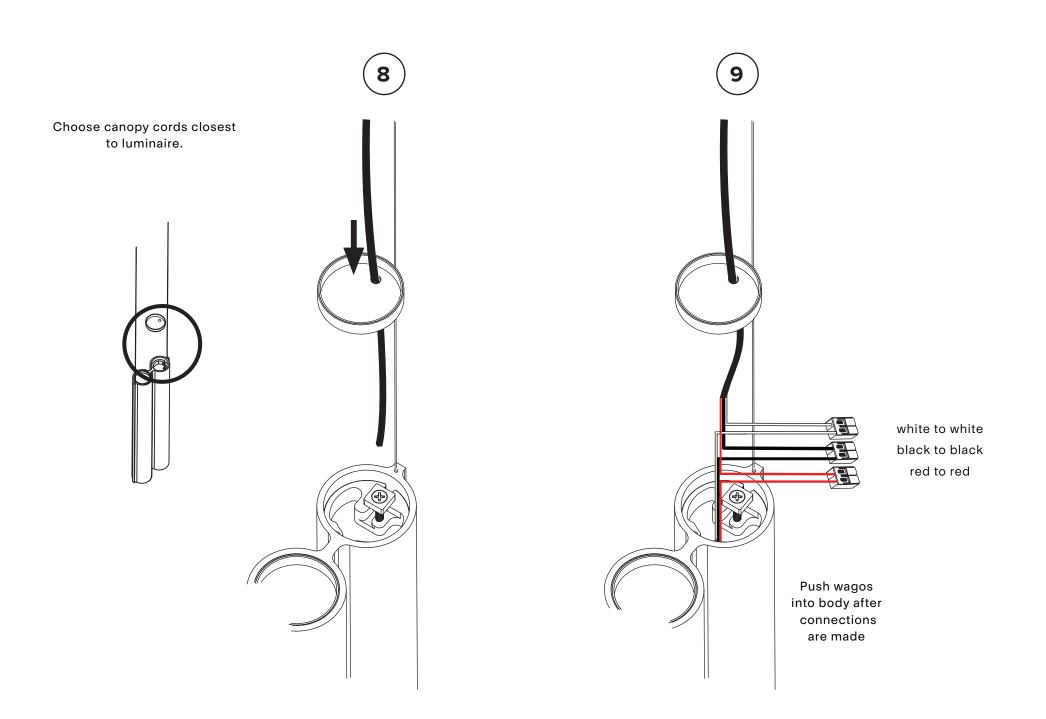


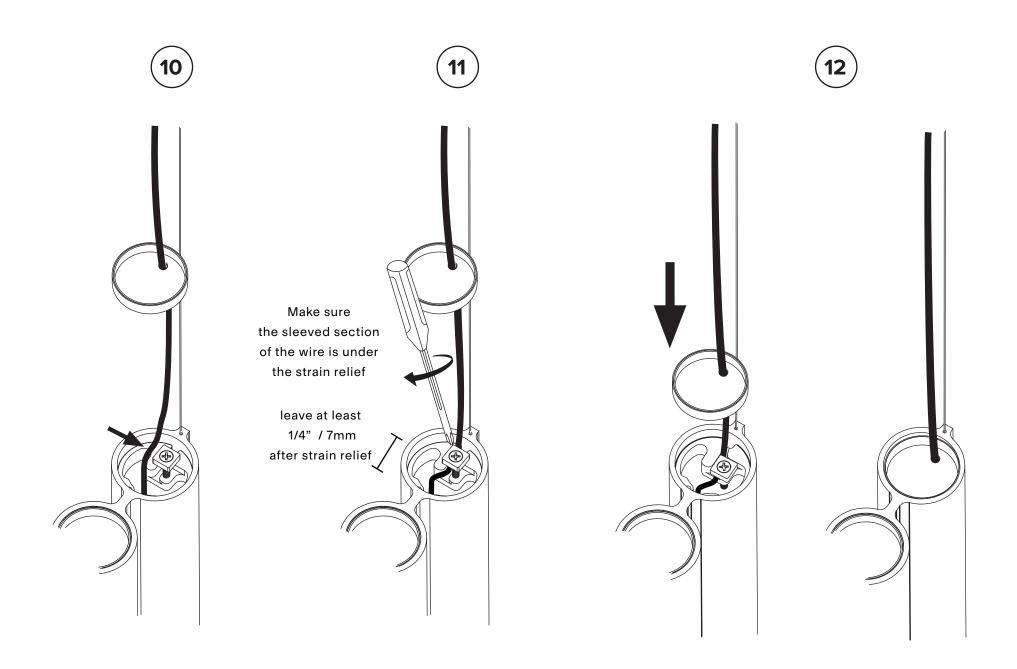

Recommended installation plan

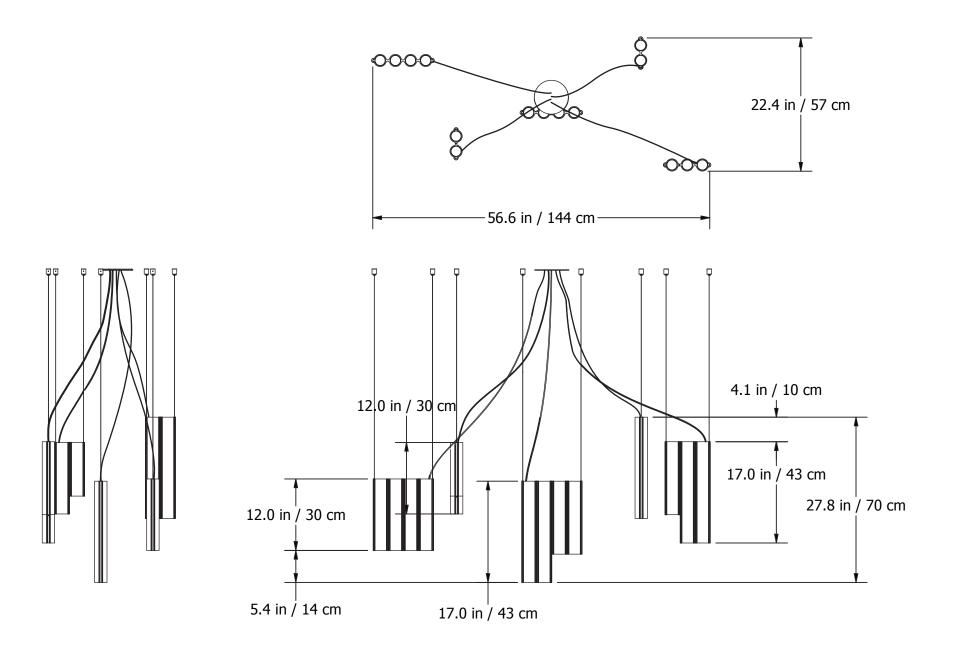

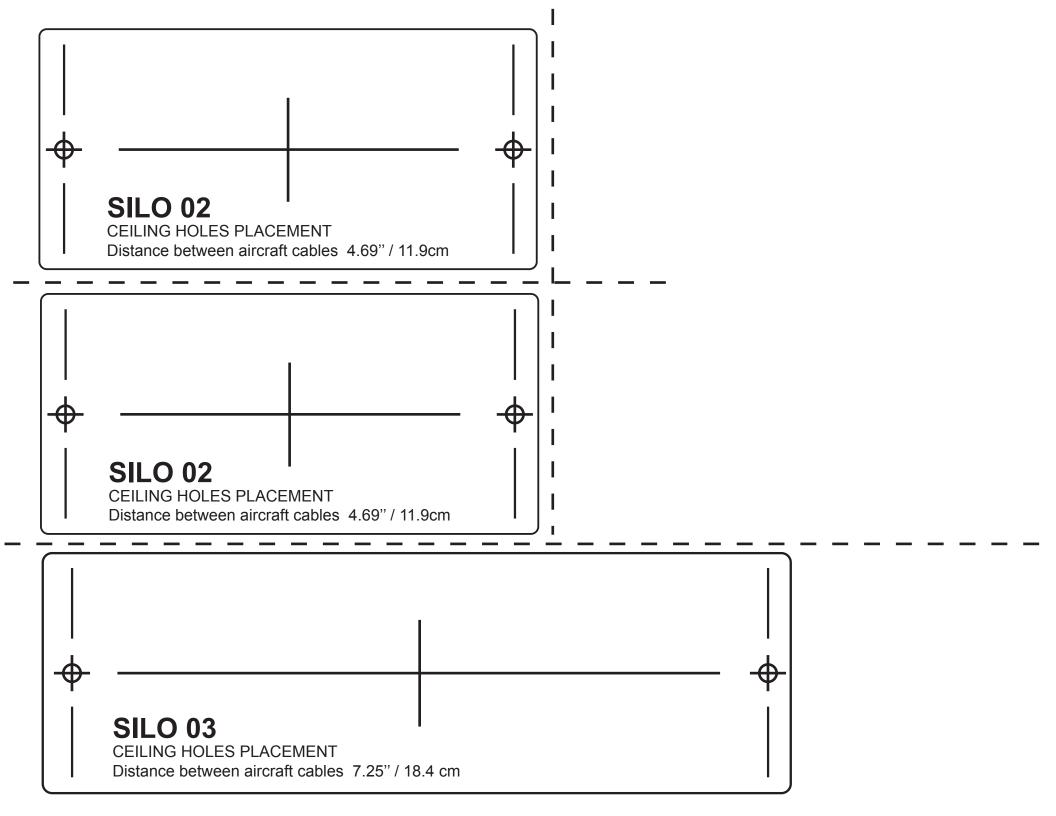

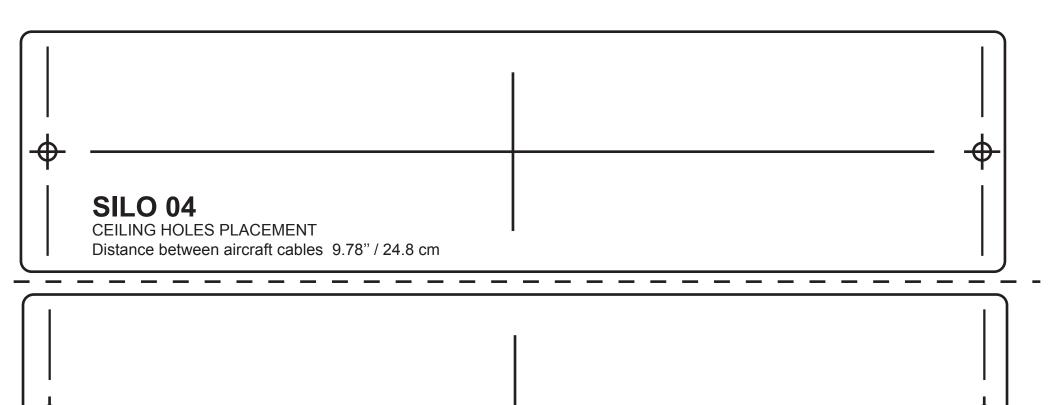


SILO 04

CEILING HOLES PLACEMENT

Distance between aircraft cables 9.78" / 24.8 cm

RECESSED CANOPY ANNEX A


Octobox with auxiliary box (phase and 0+10V dimming) Plenum installation

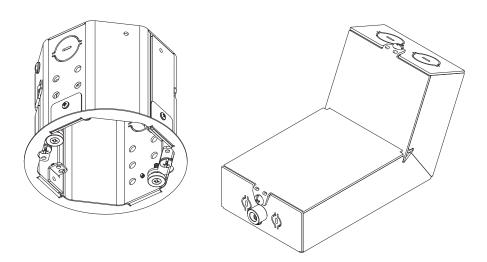





- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws where necessary
- For non-insulated hollow ceiling
- Wires for plenum not provided




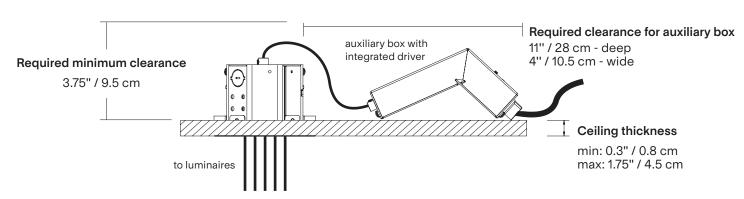


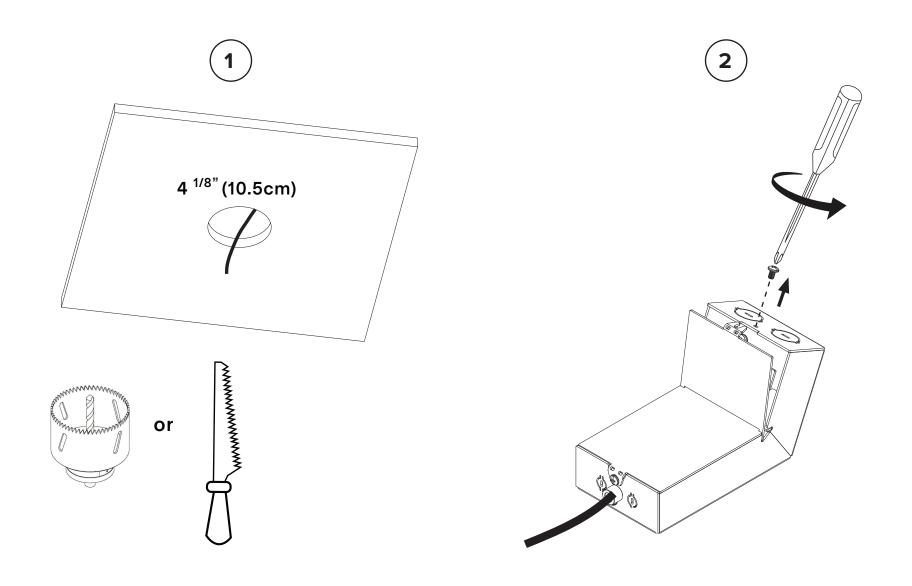


PHASE DIMMING REPRESENTATION

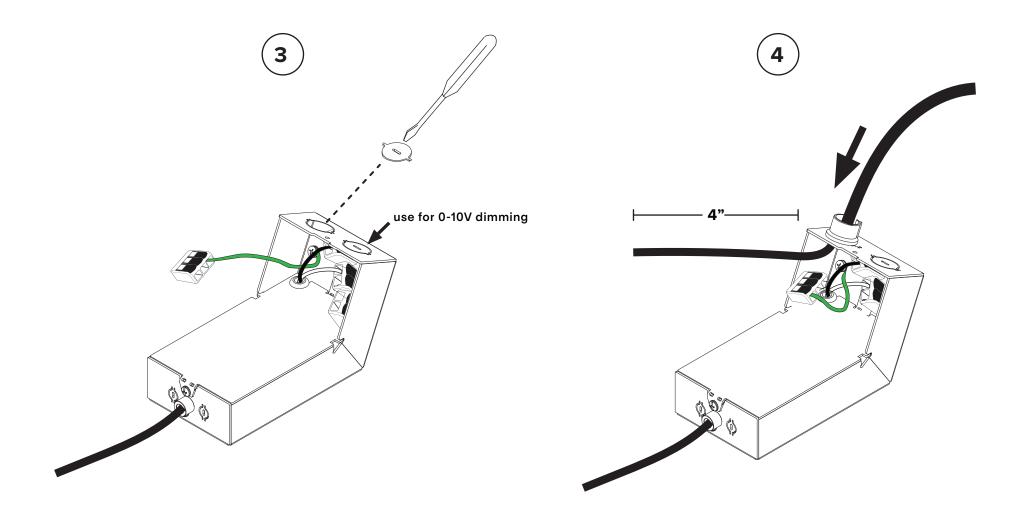


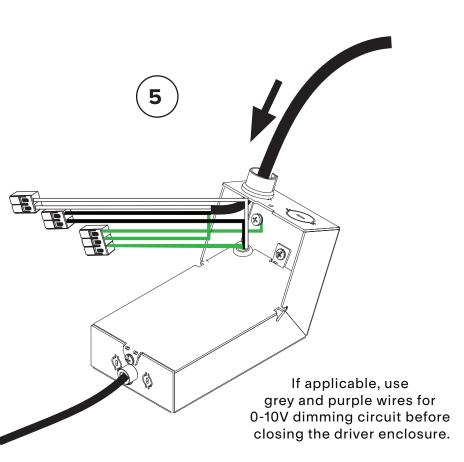


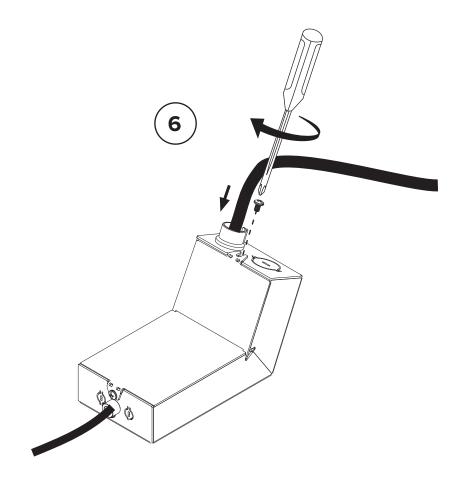

Cap wires individually if not used.

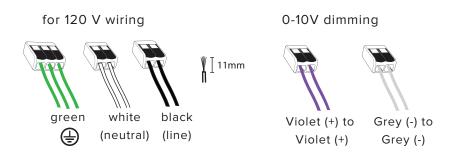


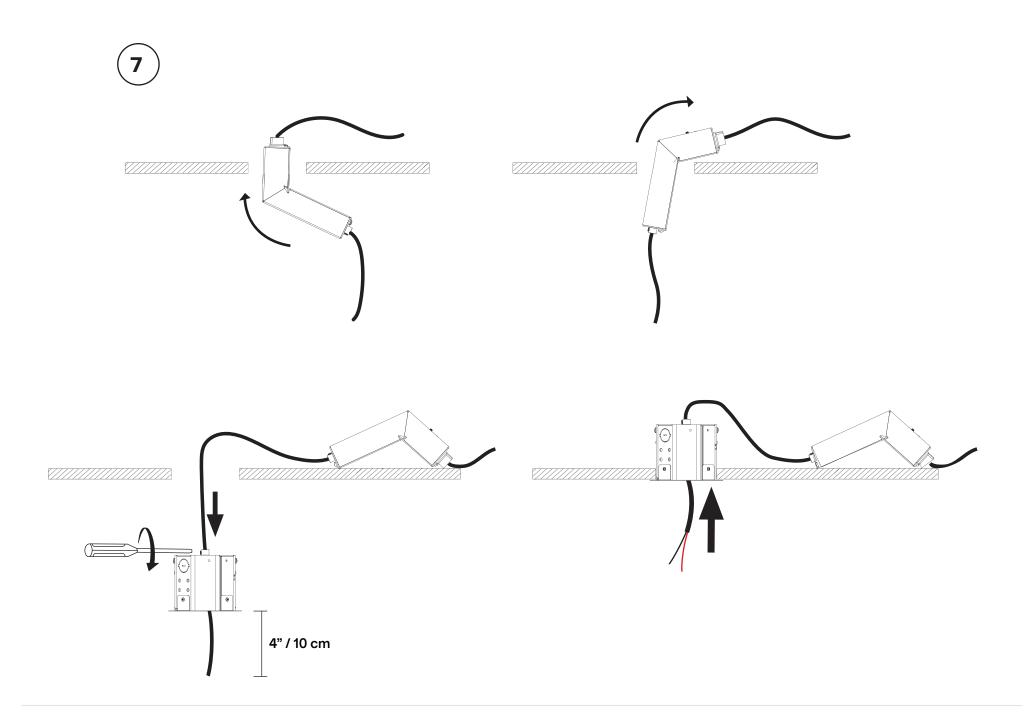

 




View from below

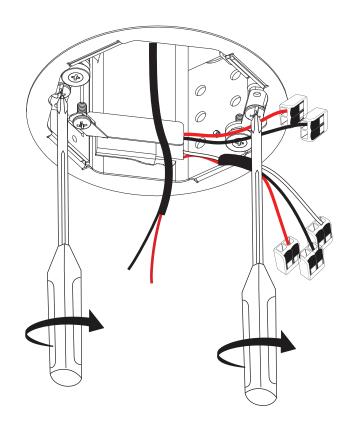




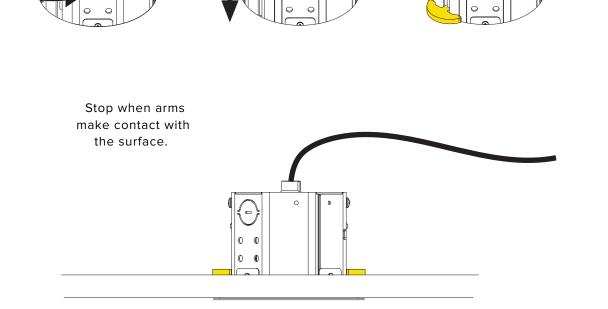

The recessed canopy is now installed, return to luminaire installation steps and follow the instructions (page 3).


RECESSED CANOPY ANNEX B

Octobox with remote driver (phase and 0-10V dimming) Remote installation

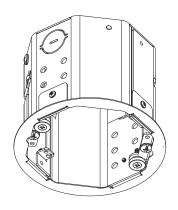





- Please read entire manual before beginning installation
- To be installed by an electrician
- Use appropriate screws where necessary
- For non-insulated hollow ceiling
- Wires for plenum not provided

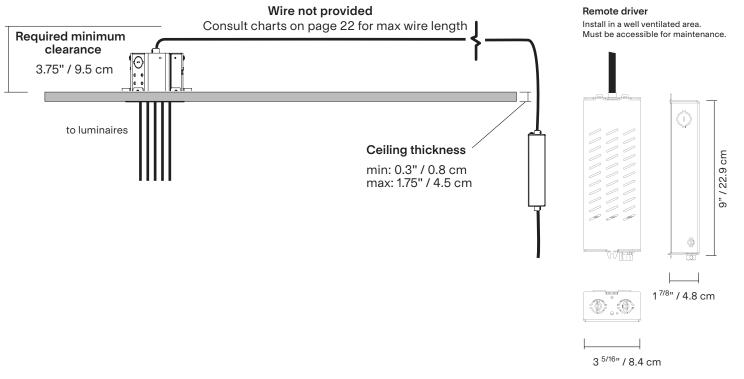



lambert&fils

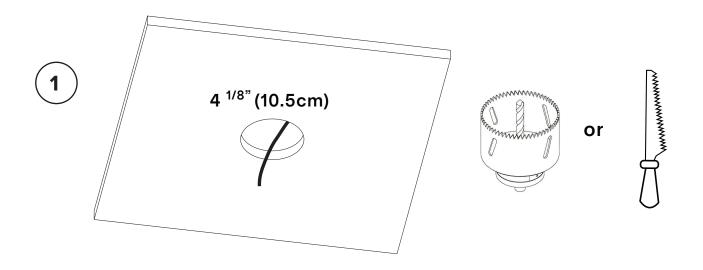


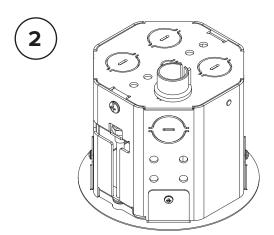

Install suitable connectors for your installation (not included)

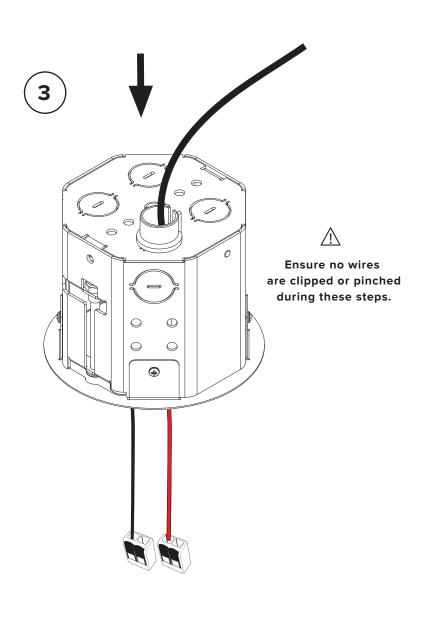

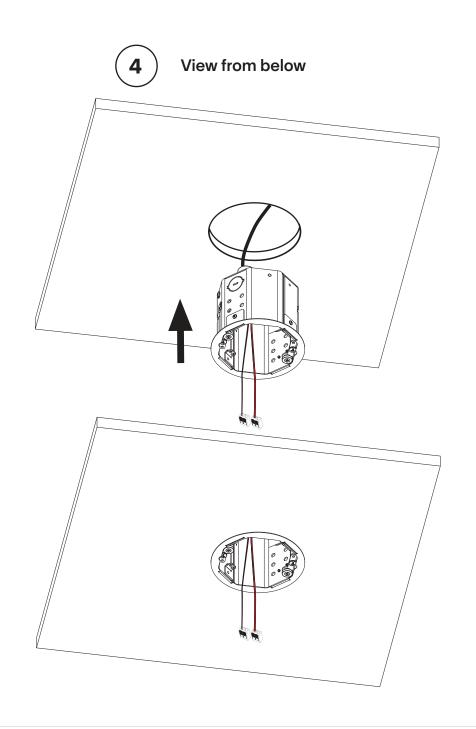

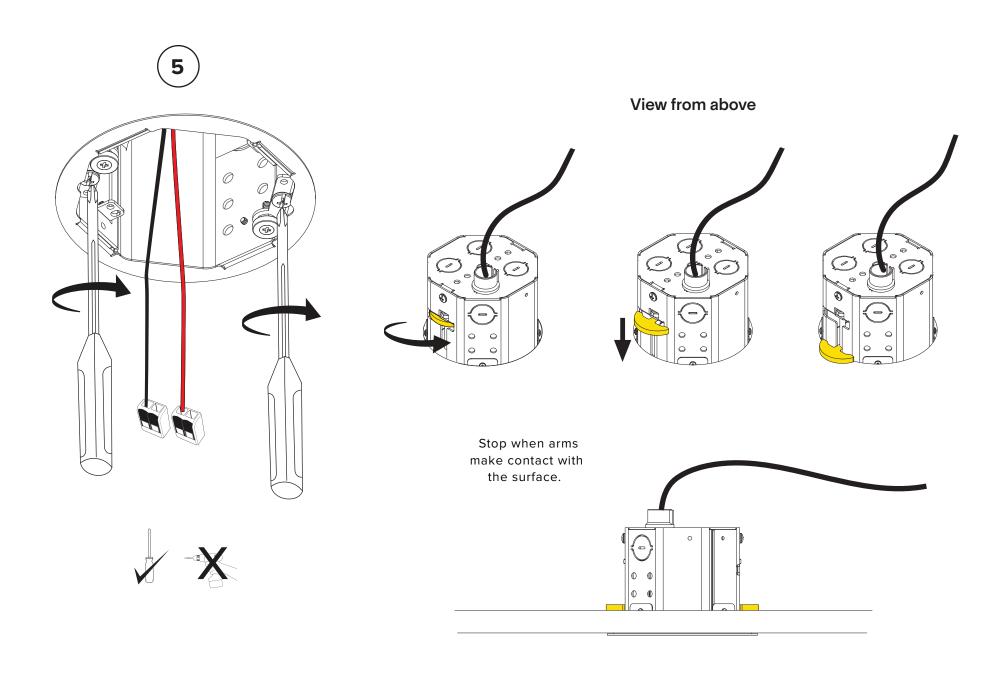



REMOTE DRIVER HOUSING

 Must be accessible for maintenance in a well aerated location for heat dissipation

Remote Wire Gauge and Length Allowance Maximum distance between suspended structure internal wiring and remote driver housing

Wire gauge	Max Distance
18AWG	34.4 ft / 10.5m
16AWG	54.7 ft / 16.7m
14AWG	86.9 ft / 26.5m
12AWG	138.2 ft / 42.1m

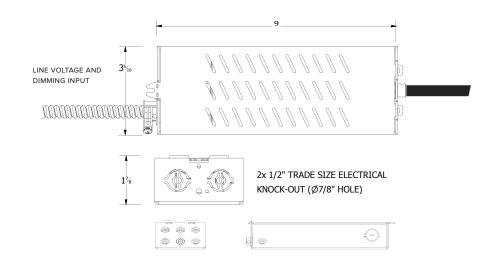


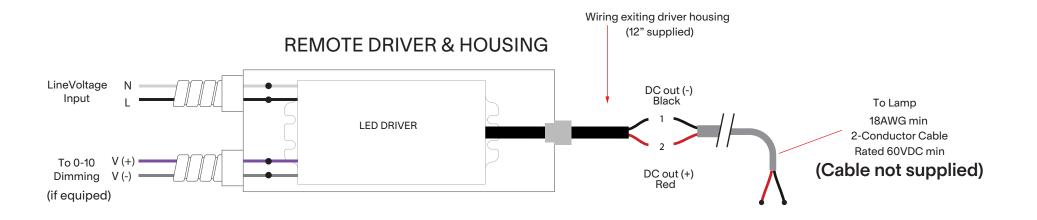




Remove cover and mount driver housing to wall.

Screws not provided.

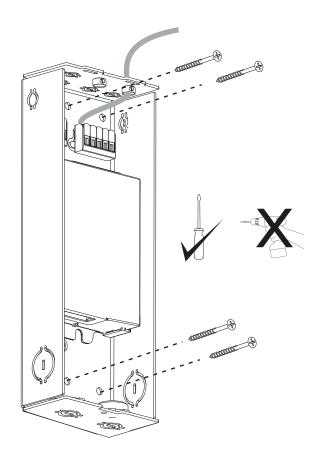




Make Line Voltage and dimming connections to driver wiring.

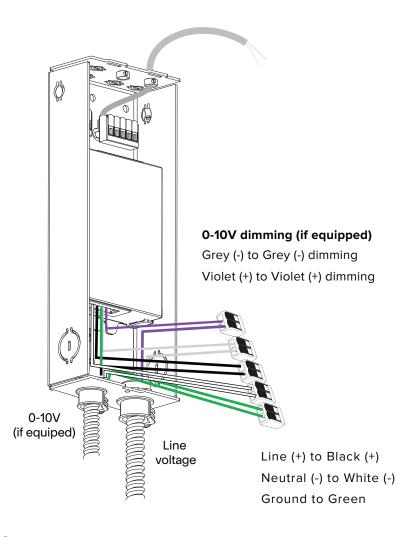

Use a screwdriver to knock out tab, then secure cables (not supplied)



Close driver housing and make low voltage connections.

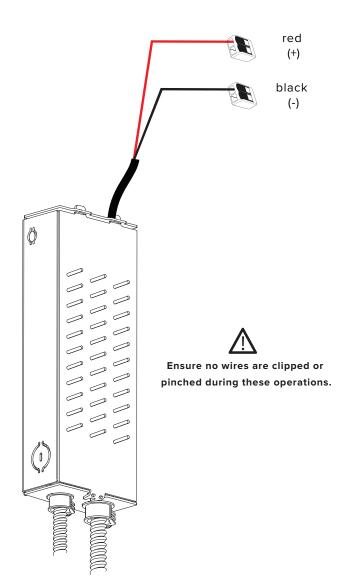



The recessed canopy is now installed, return to luminaire installation steps and follow the instructions (page 3).