






Trim wires to desired length (X). Do not leave a large excess of wires inside canopy. Reconnect them as before.

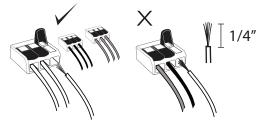


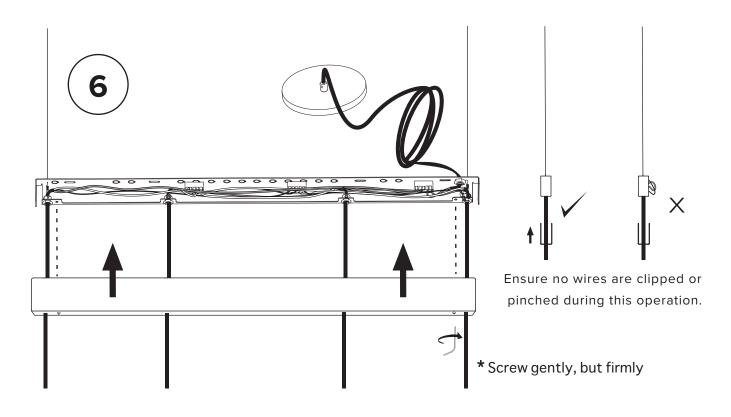


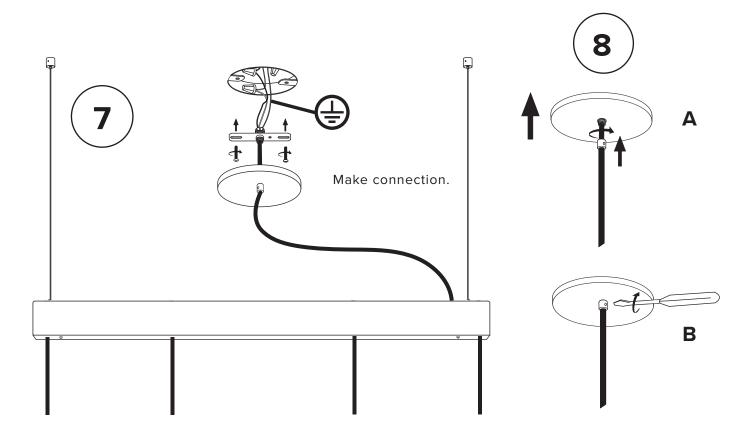


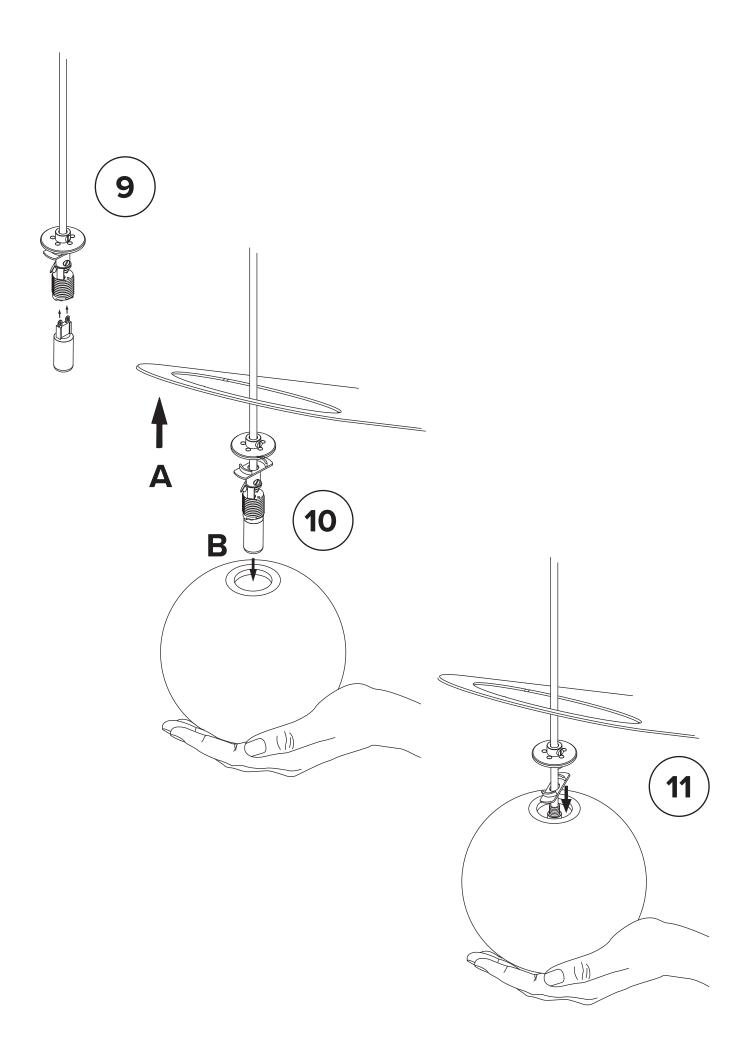

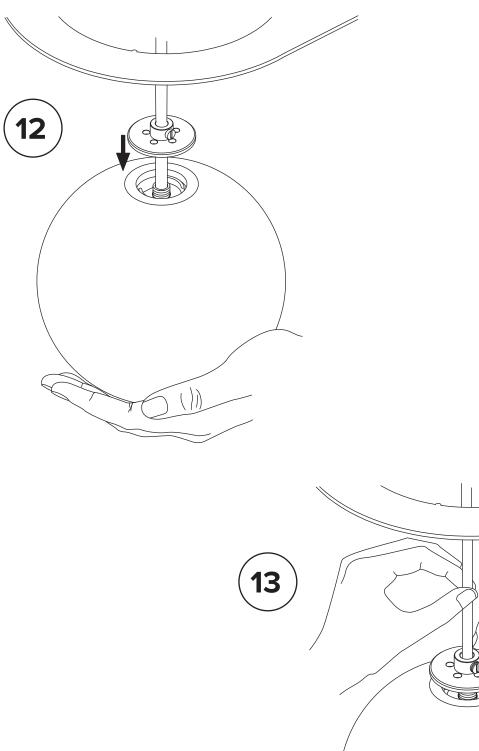


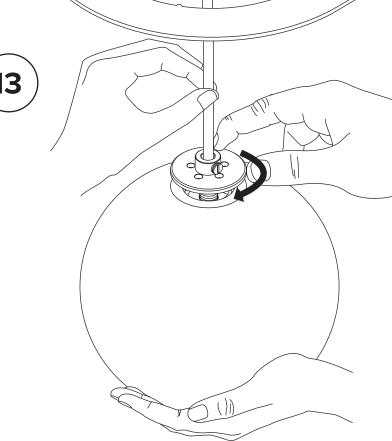


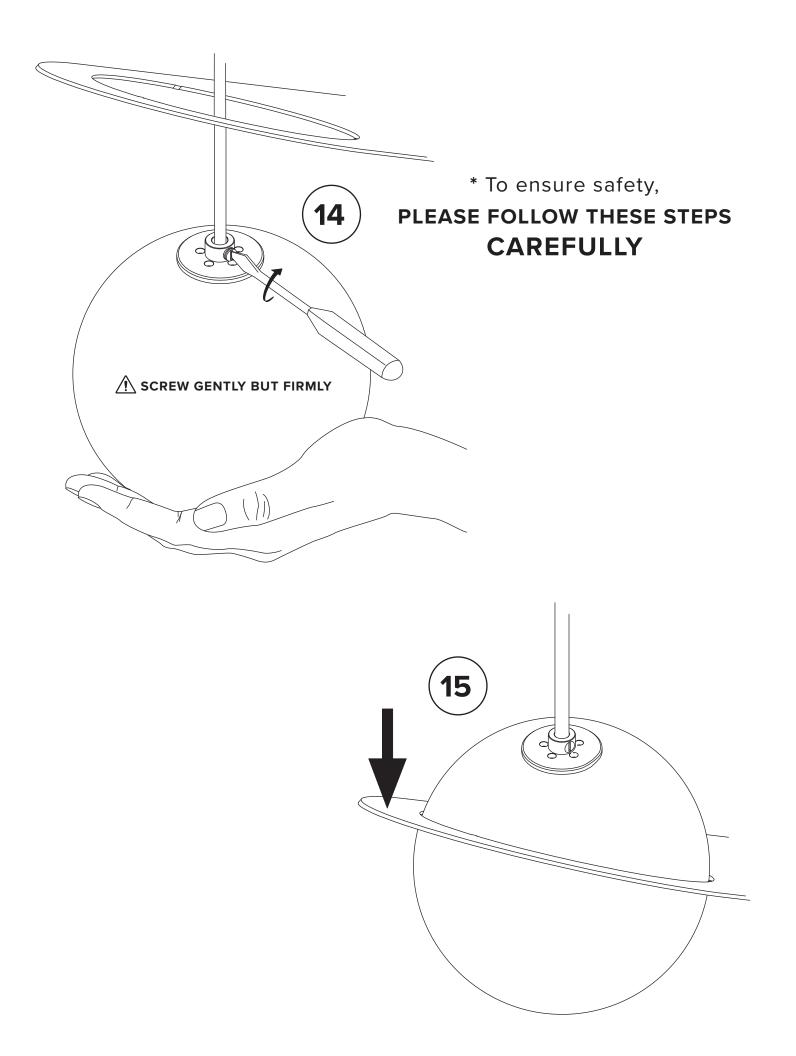

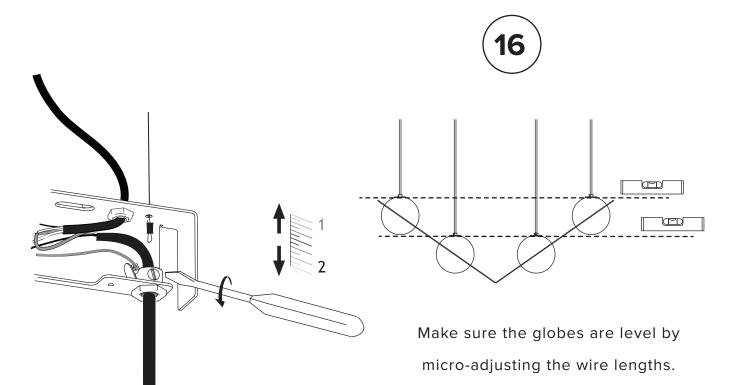

SCREW GENTLY BUT FIRMLY

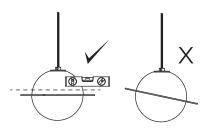

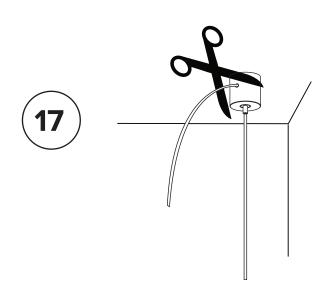

Trim extra cable when desired height and level are acheived.



