





lambert&fils

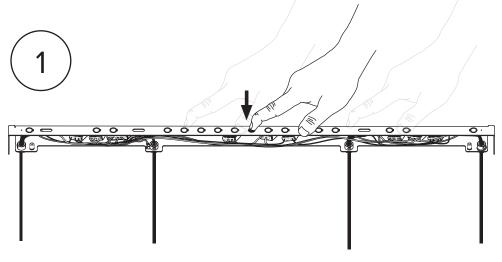

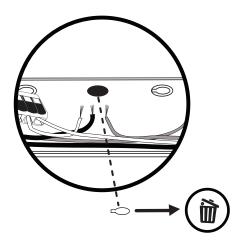


Knockout selected hole depending on desired electrical box alignment.

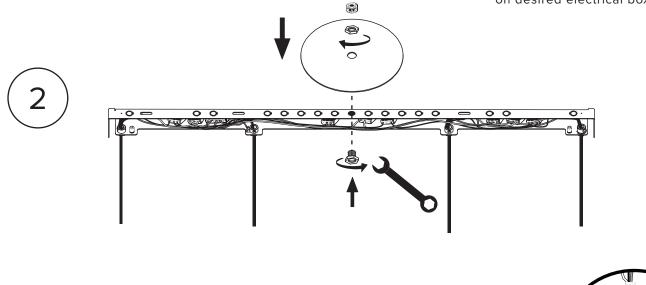


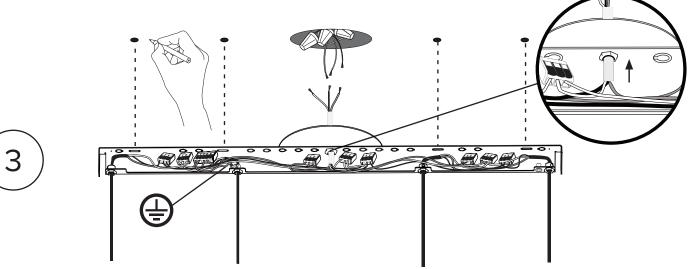


Before marking your anchor locations, align the ceiling bracket with the center of your junction box. Feed wires through anti-abrasive sleeve before making connection

Make sure to use appropriate anchors for ceiling material.

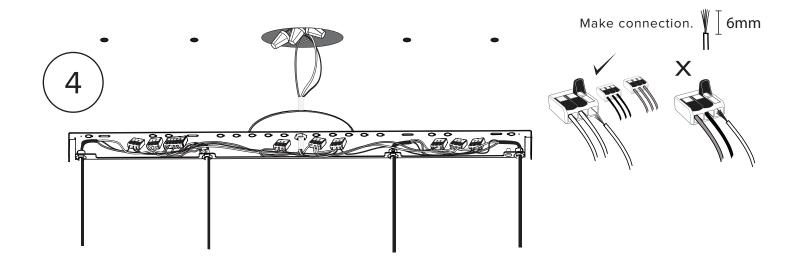


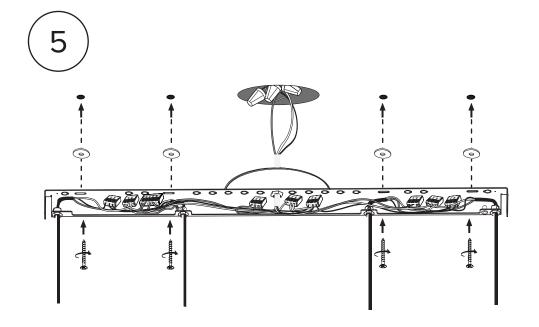



SMALL SPACING WASHER

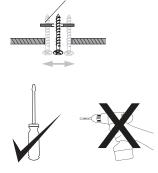



Avoid scuffing the wires during this operation.

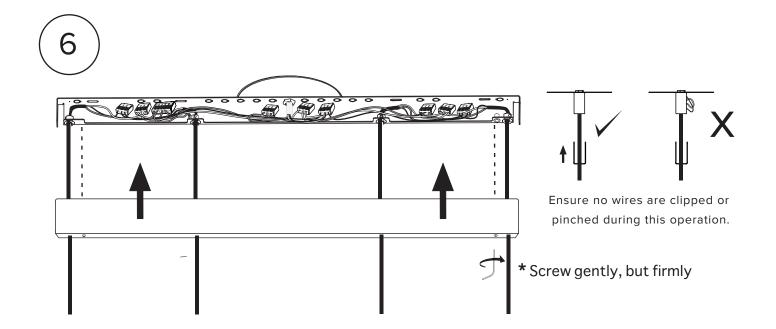


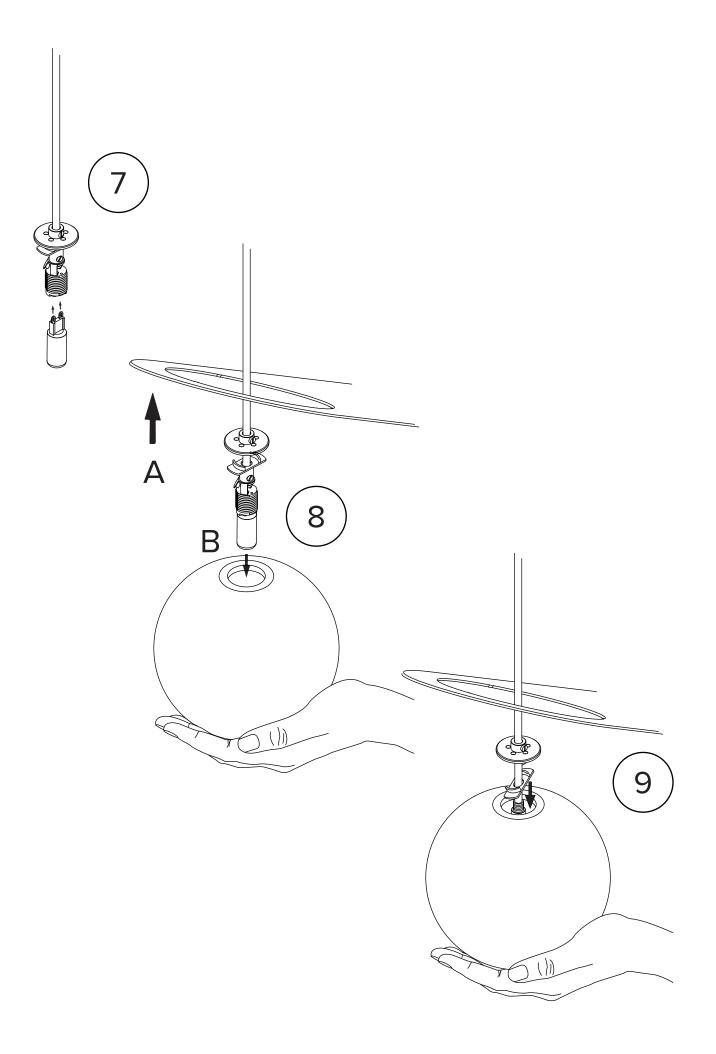

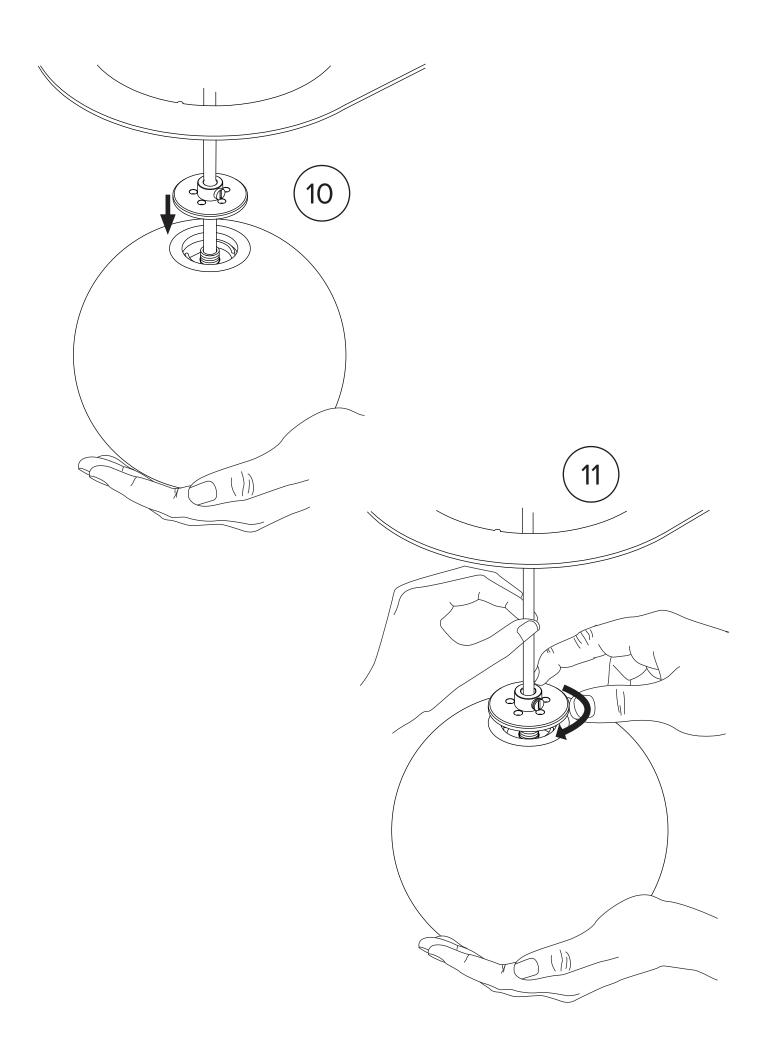

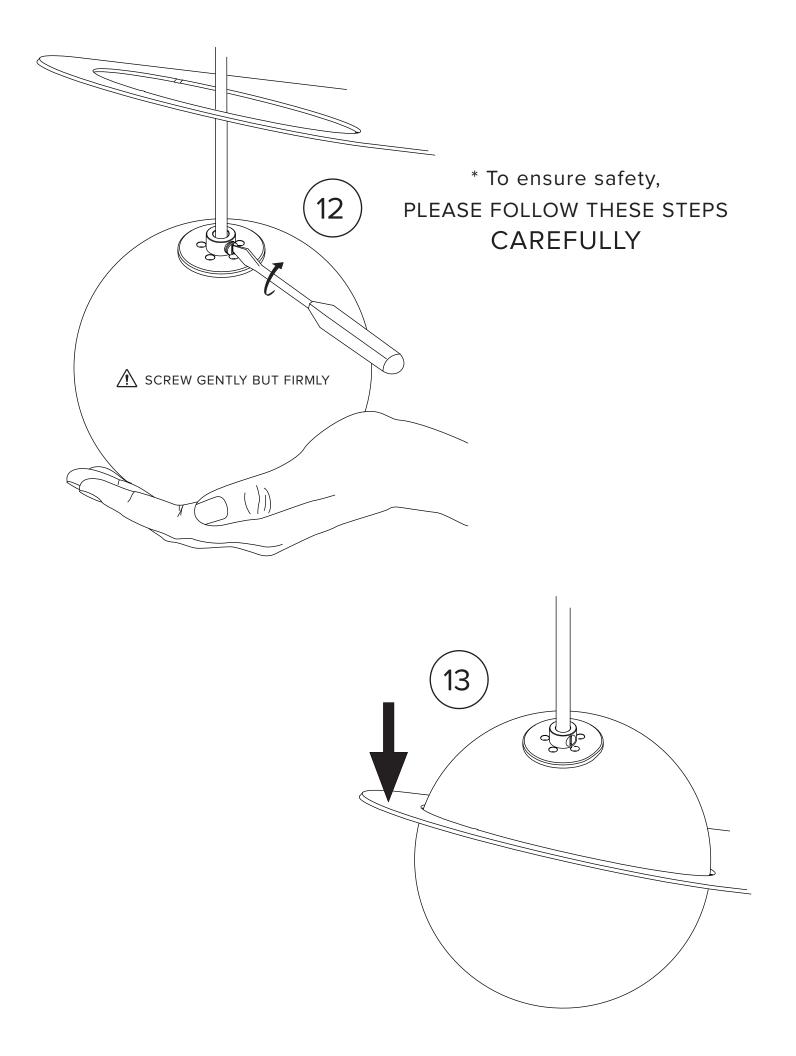

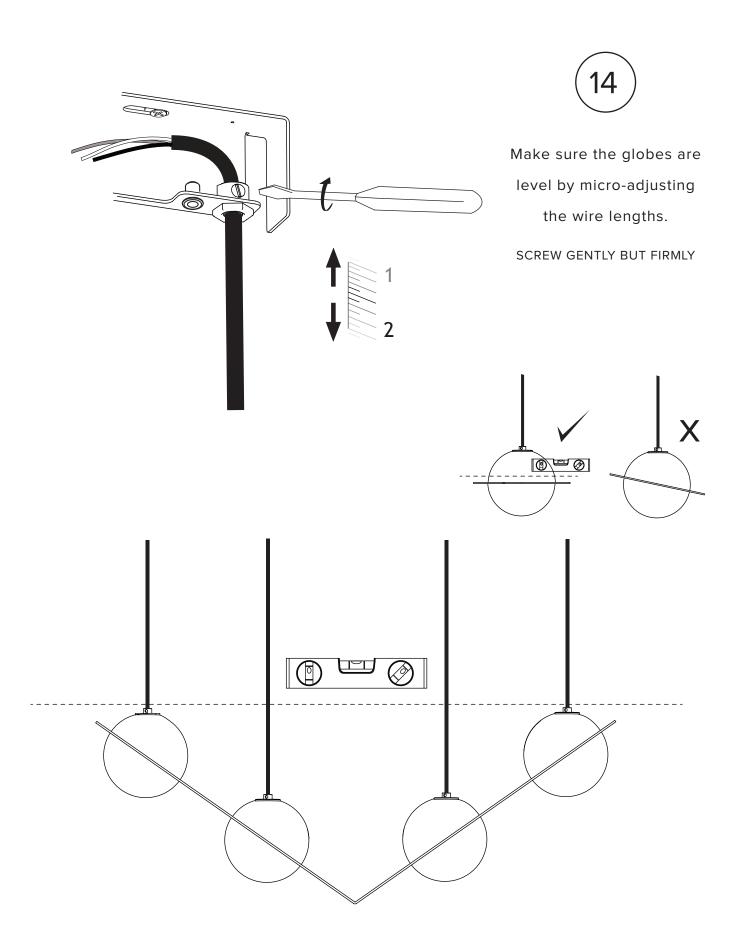

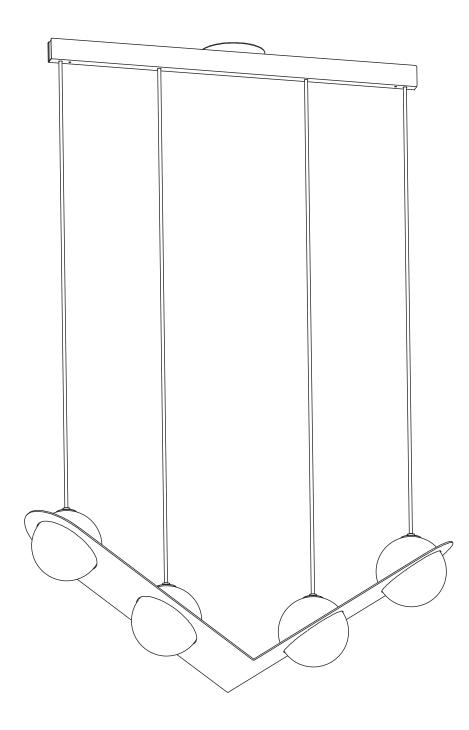

lambert&fils