

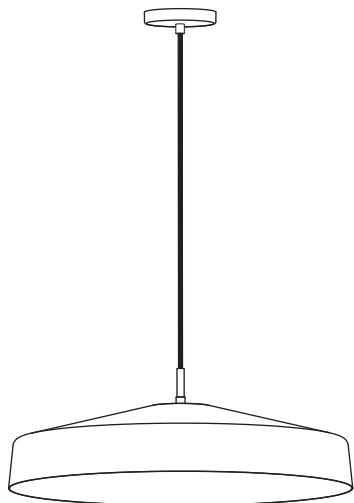



CLIFF DOME

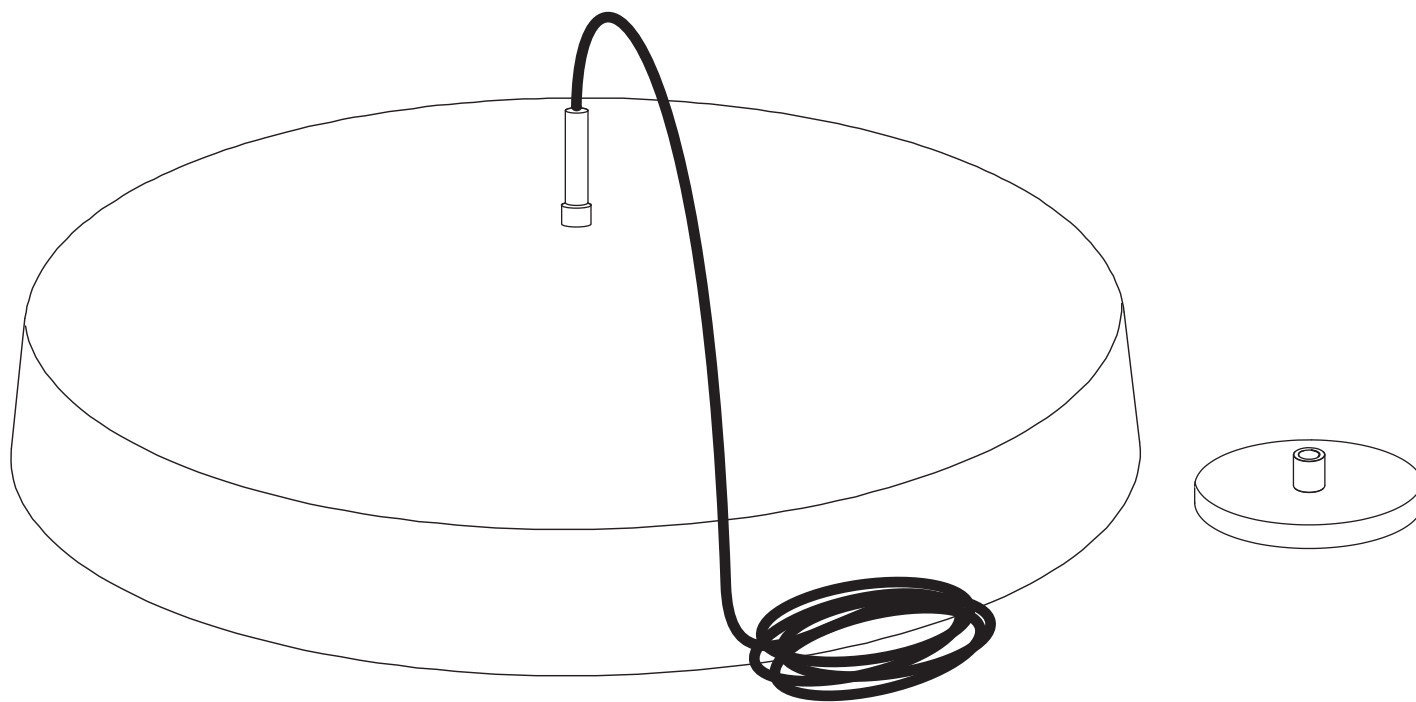


- To be installed by an electrician to an electrical box
- Use appropriate screws and anchors where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site

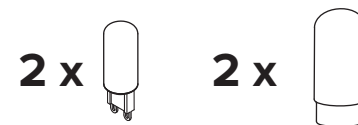

1

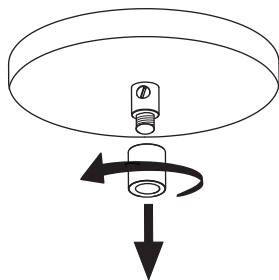


2

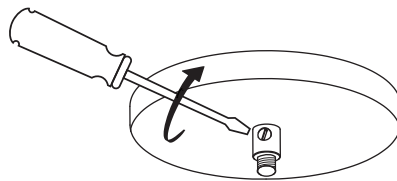

3


Feed cord through then adjust cord length. Leave 8" / 20.3 cm of cord after the bracket.

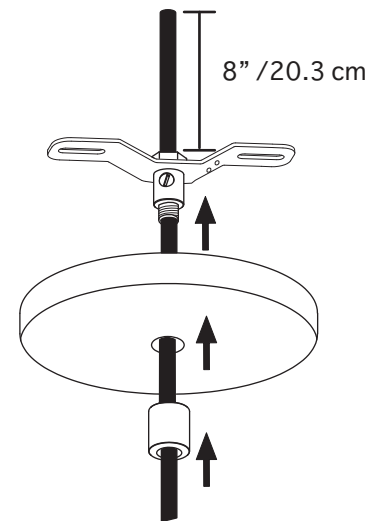


4

MAKE MAIN/LINE VOLTAGE CONNECTIONS


Tighten nylon set screw on top of sleeved section of cord.

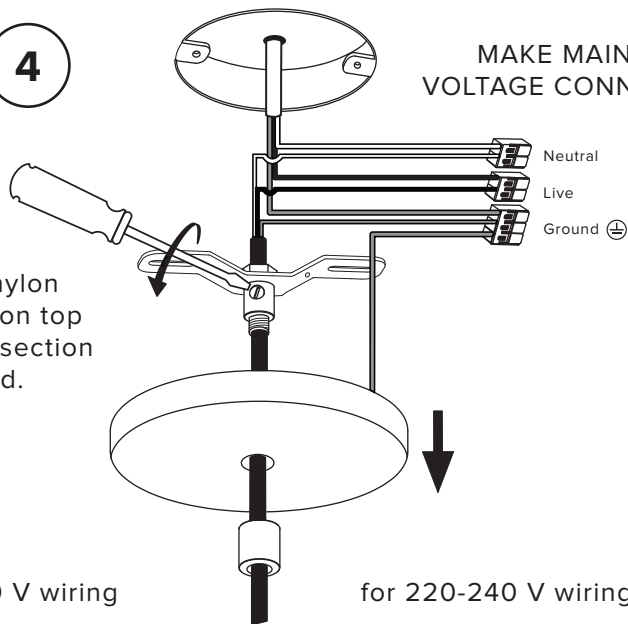


5

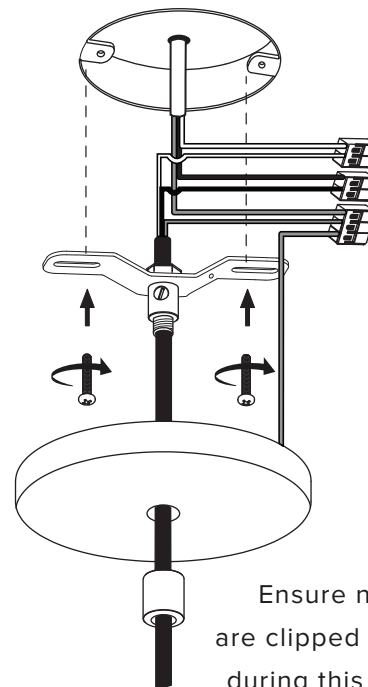

6

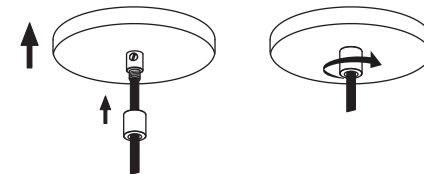


7

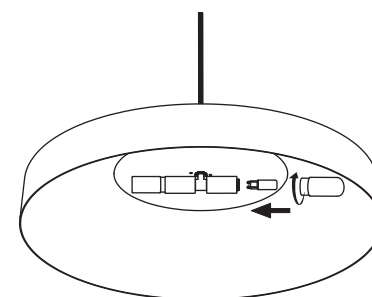


Ensure no wires are clipped or pinched during this operation.

for 120 V wiring

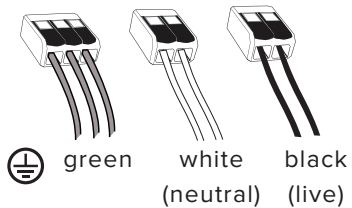

for 220-240 V wiring

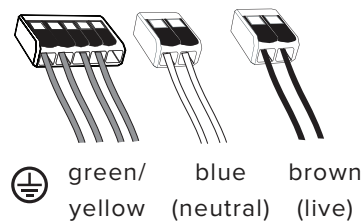

6mm