
MILE 04 A,B,C

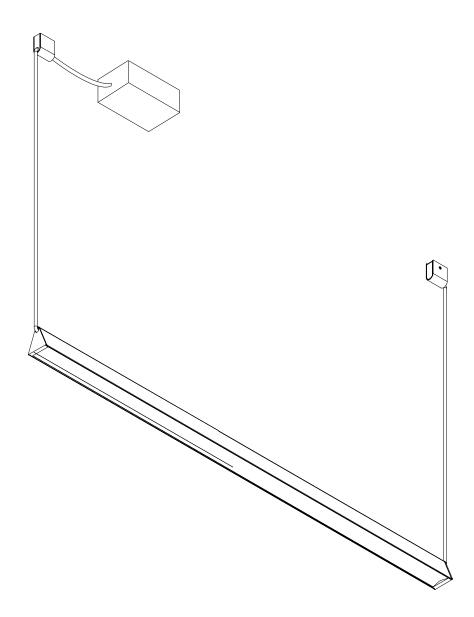




- To be installed by an electrician to an electrical box
- Use appropriate screws and anchors where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site
- Should be used exclusively as a lamp and not as a shelving, display or hanging unit




lamp weight 4-9 lbs.

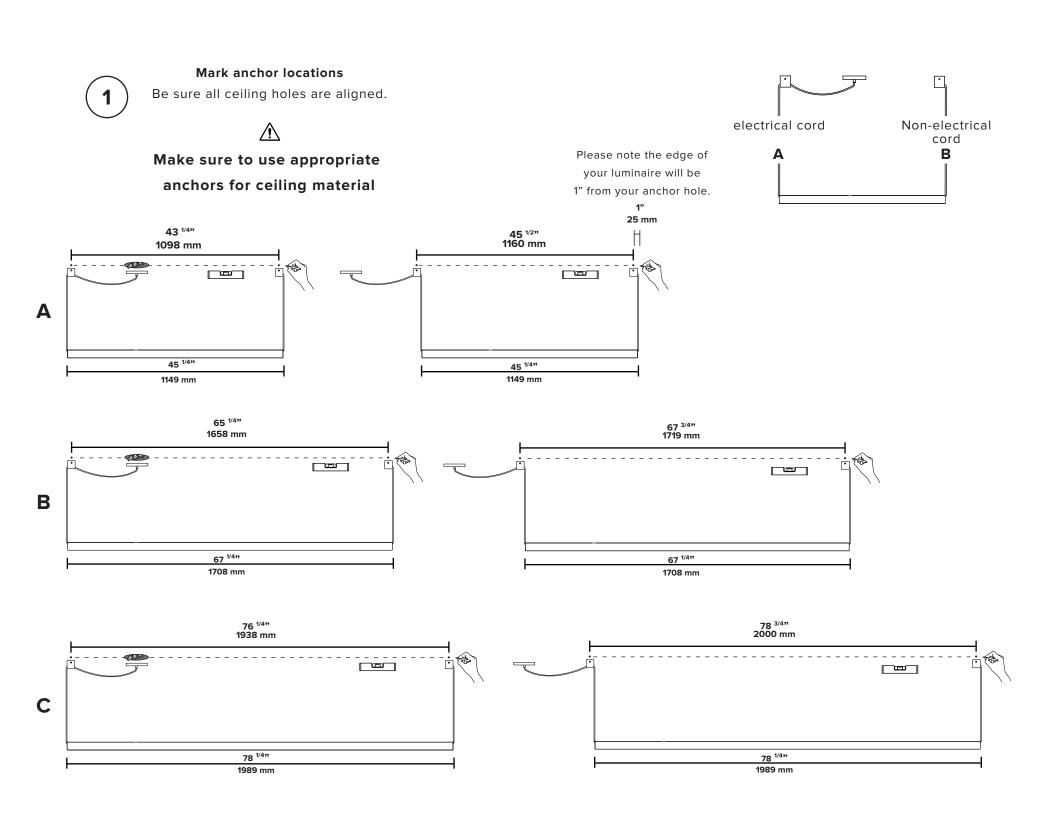




Mount double hole anchor with line/main voltage cord.


Pull wires to straighten them before mounting them.

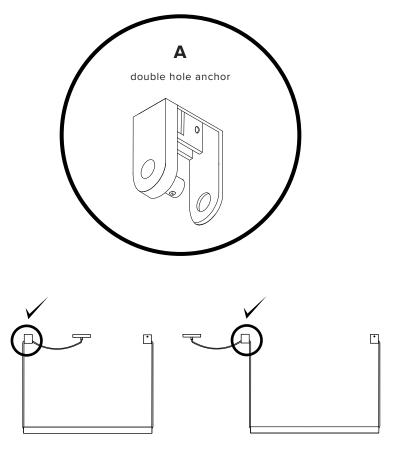


Make sure to use appropriate anchors for ceiling material

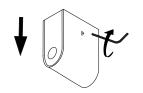



Remove or install cover by screwing and unscrewing set screw.

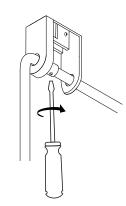

Screw gently, but firmly

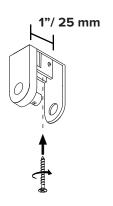

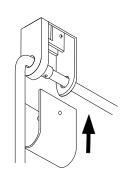

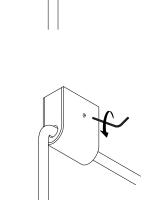



Screw gently, but firmly




Mount single hole anchor with non-electrical cord.

Pull wires to straighten them before mounting them.

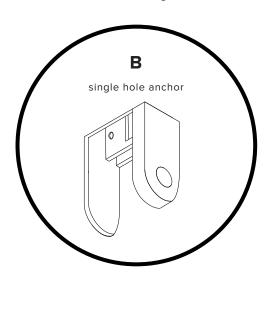


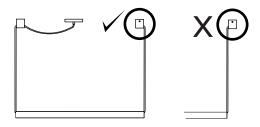


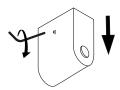



Remove or install cover by screwing and unscrewing set screw.




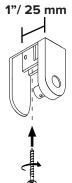


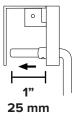

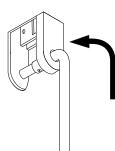

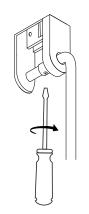

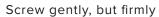

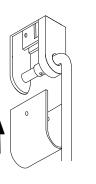


Screw gently, but firmly






Open canopy cover.
It is held in place with a magnet. Place the cover aside.

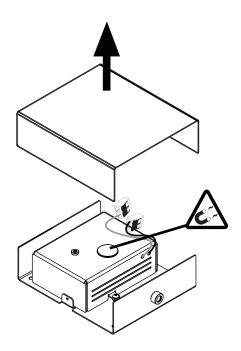



INSTALL EXTENSION HARNESS TO LINE/MAIN VOLTAGE




Connect the extension harness to the junction box. The harness is shipped with the canopy .

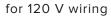

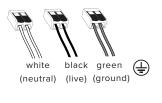

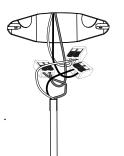


for 220-240 V wiring

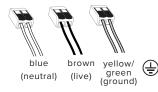




Unscrew driver housing. It is held in place by two screws. Place the housing aside.

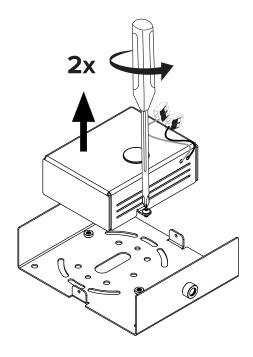




Pass the extension harness through center hole of canopy.

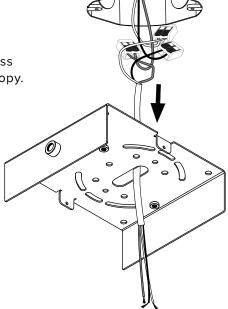


MOUNT CANOPY BRACKET




The canopy can either be mounted to the junction box or directly to the ceilling using appropriate holes.

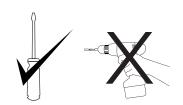


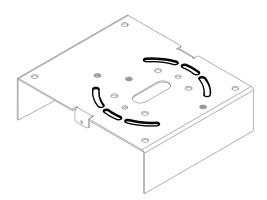


To junction box

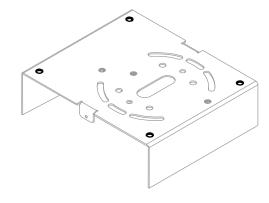


OR directly to the ceiling
*use appropriate anchors

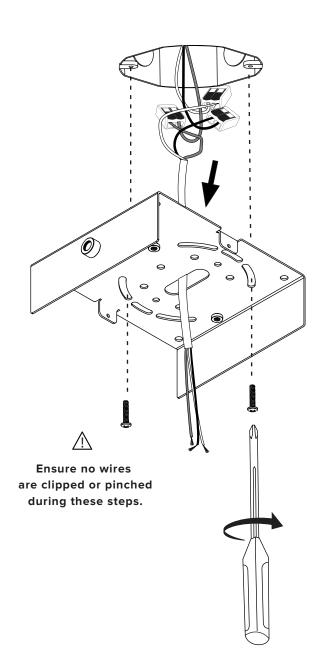


CONNECT EXTENSION HARNESS (ELECTRICAL BOX) TO DRIVER'S AC IMPUT WIRES

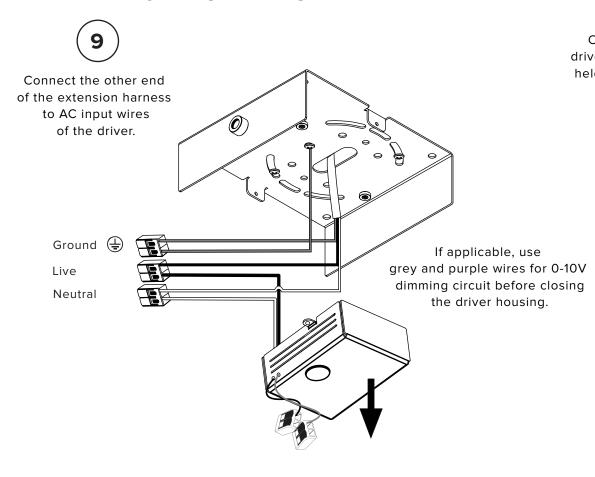

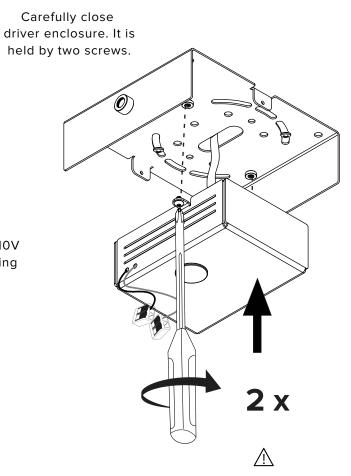


Ensure no wires are clipped or pinched during these steps.

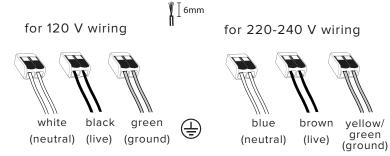





Feed luminaire cord into the canopy strain relief.

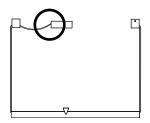



Tighten strain relief set screw when desired cord lenght is reached.

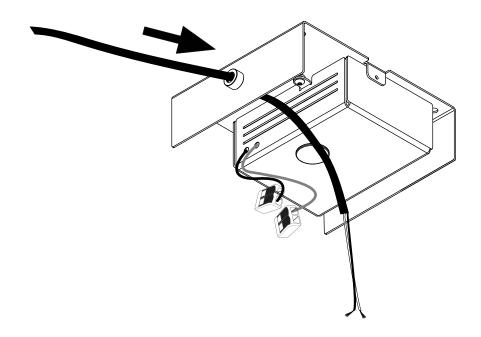


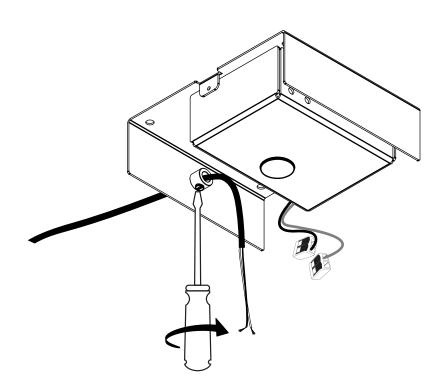


*screw gently but firmly

CONNECT LUMINAIRE CORD TO DRIVER DC WIRES



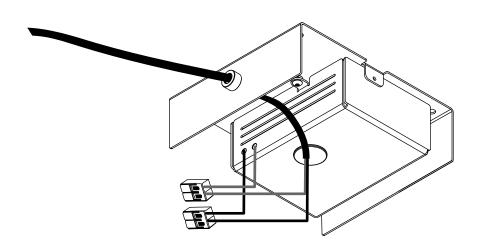


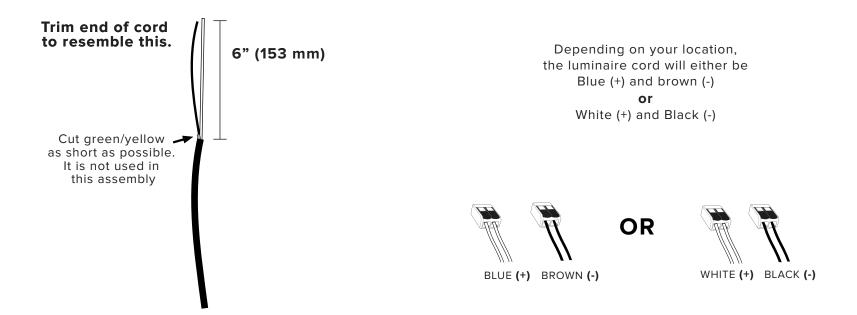

LEVELING THE LUMINAIRE




Carefully close canopy cover that is held in place with a magnet.

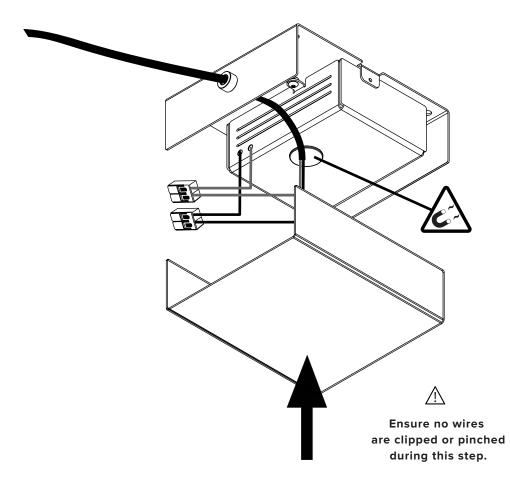



Adjust wire length to assure your lamp is balanced.

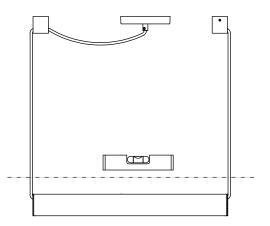



Readjustments may be required as your luminaire settles and the wires flex.