



# HUTCHISON

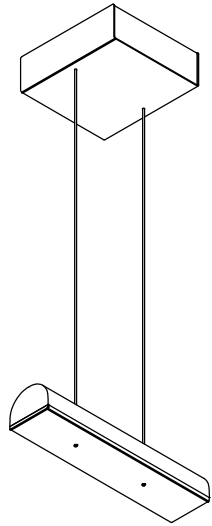


- To be installed by an electrician to an electrical box
- LED may only be changed by Lambert & Fils or other authorized personnel
- Use appropriate screws where necessary
- Use appropriate anchors and ensure your electrical box can hold the weight of the luminaire.
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site

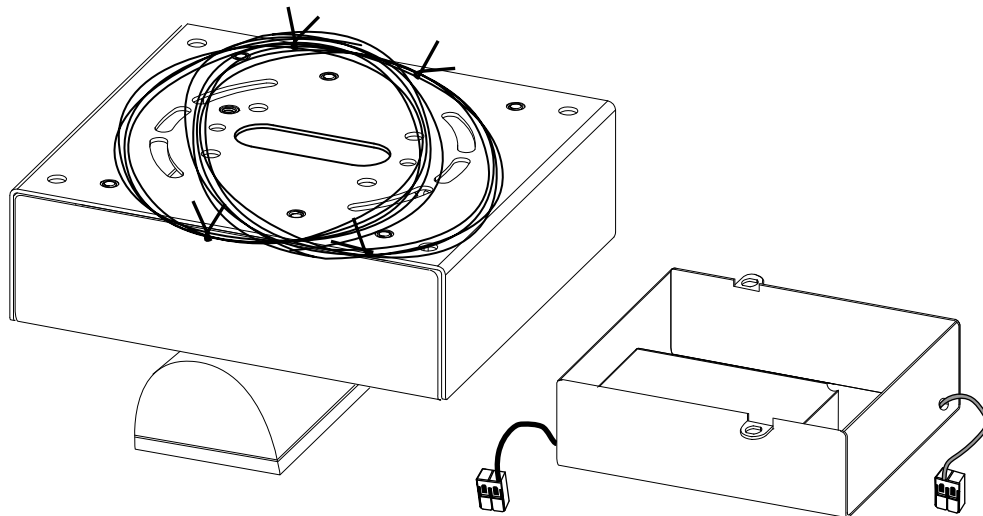


## PLEASE NOTE

THIS IS AN EXAMPLE OF THE HUTCHISON 01.  
HOWEVER, THE 02, 03 AND 04 FOLLOW  
THE SAME INSTALLATION PROCESS.


Hutchison 01

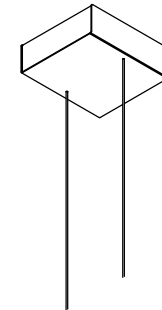


Hutchison 02

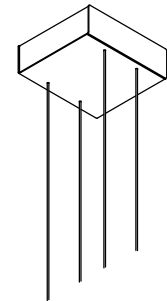

Hutchison 03

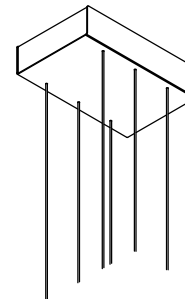

Hutchison 04

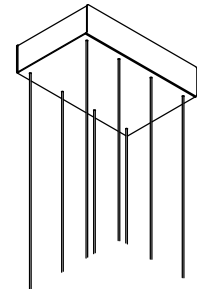


# OPEN CANOPY

## STEPS 1-3



1

Untie the wires, make sure that they are not twisted.

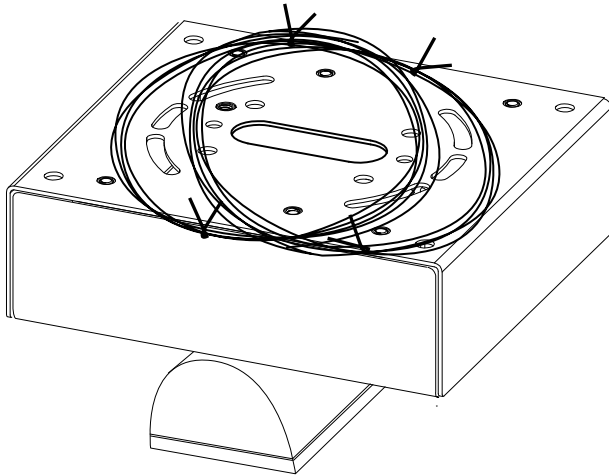

2


Gently raise the top part of canopy until you reach desired height (X).

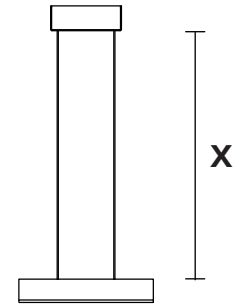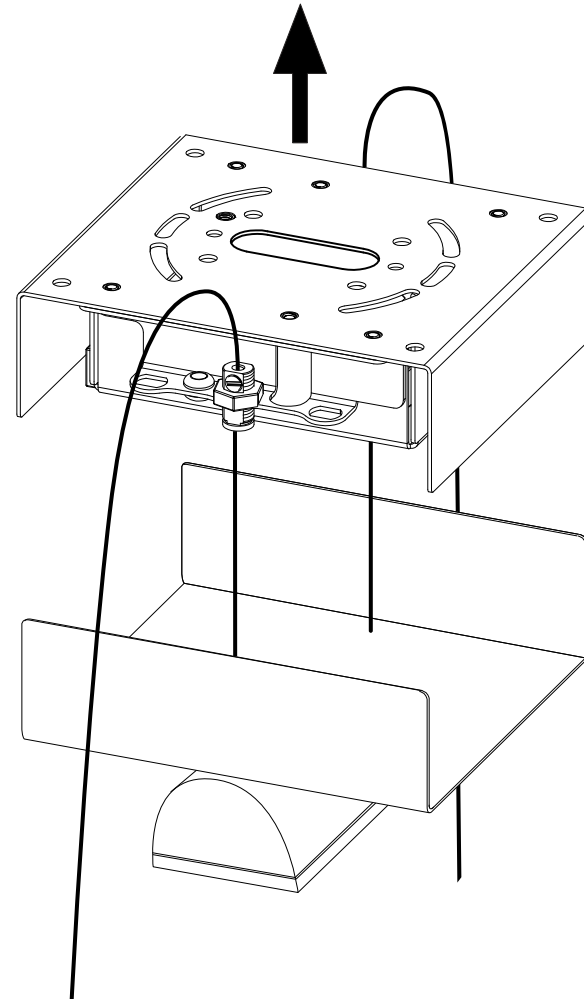

3


Tighten nylon set screw  
in the strain relief when  
desired length is achieved.

Micro adjustments  
can be made later.

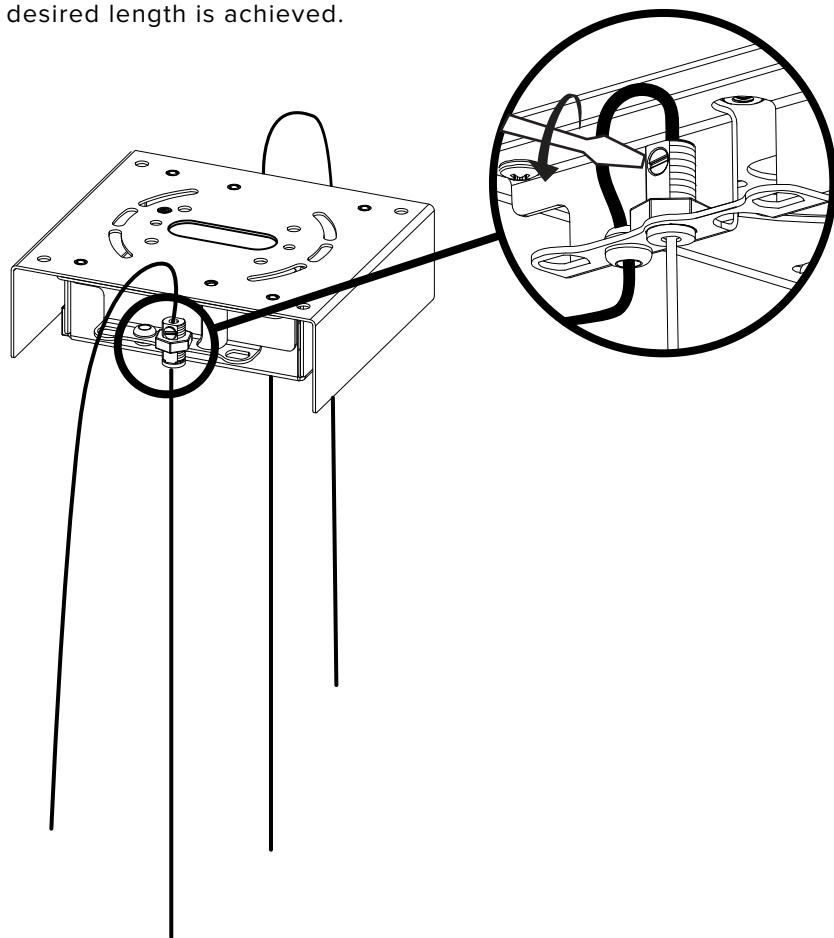

4

Trim extra wires leaving a  
minimum of 10" (254mm) of wire  
after the strain relief. Then feed wire  
back through grommet  
when finished.

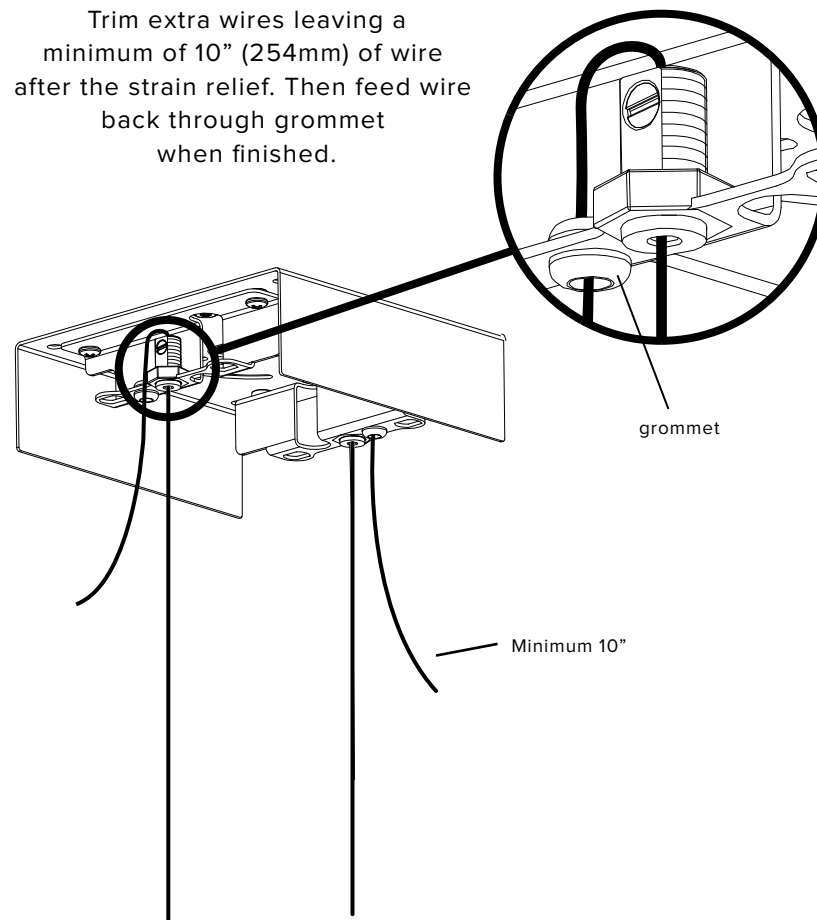


# INSTALL EXTENSION HARNESS


## STEPS 5-6

5


Connect the extension harness to the electrical box wires

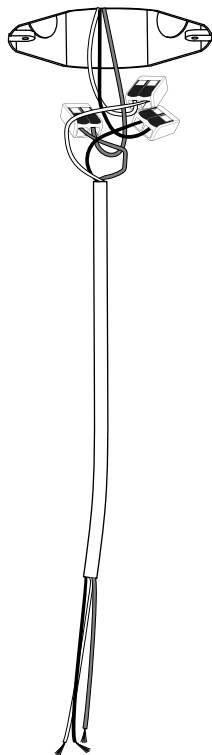

for 120 V wiring

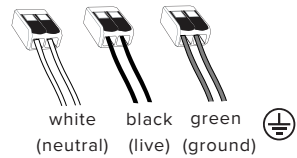


for 220-240 V wiring

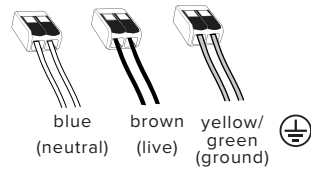

6



Pass the extension harness through center hole of canopy.

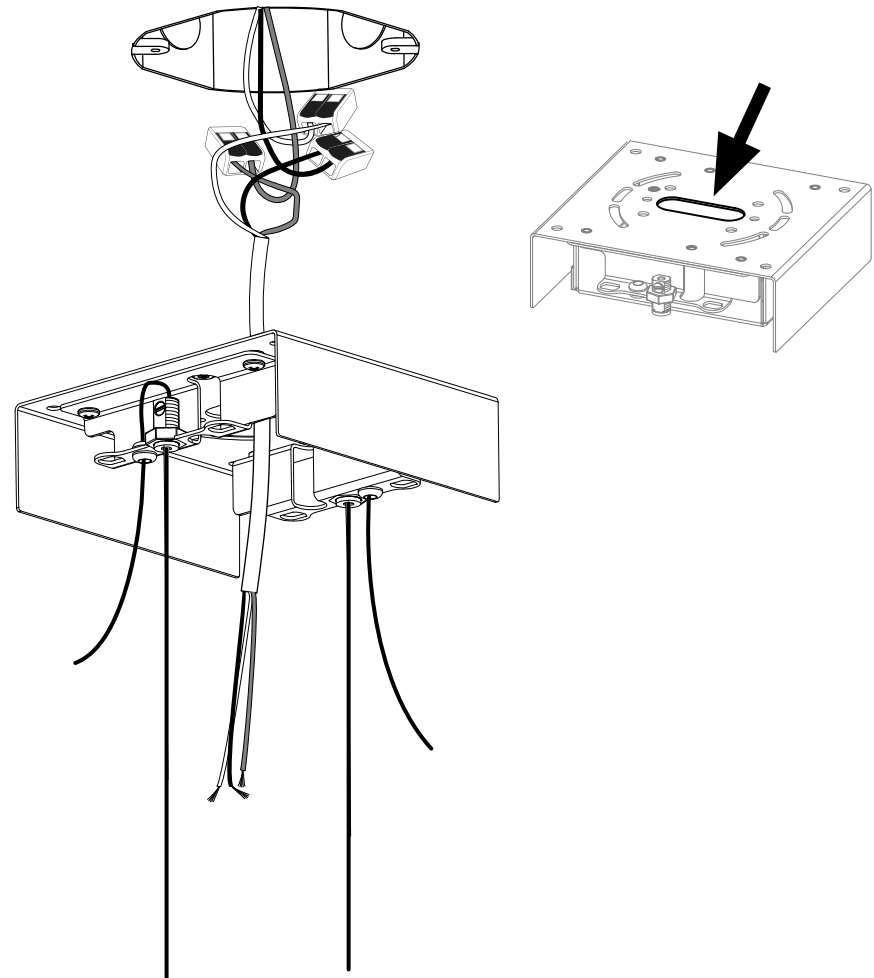

## MOUNT CANOPY BRACKET


7

The luminaire can either be mounted to the junction box or directly to the ceiling using appropriate holes.

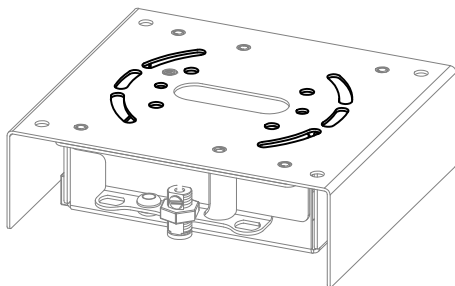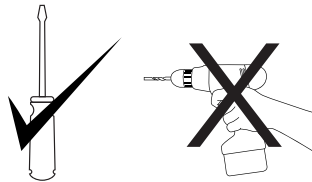


To junction box

OR

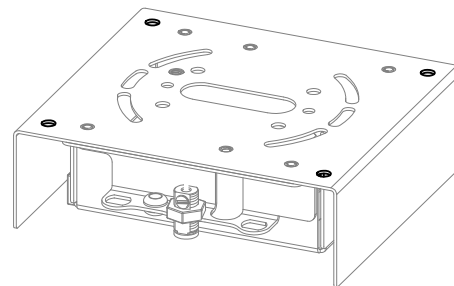

directly to the ceiling  
\*use appropriate anchors

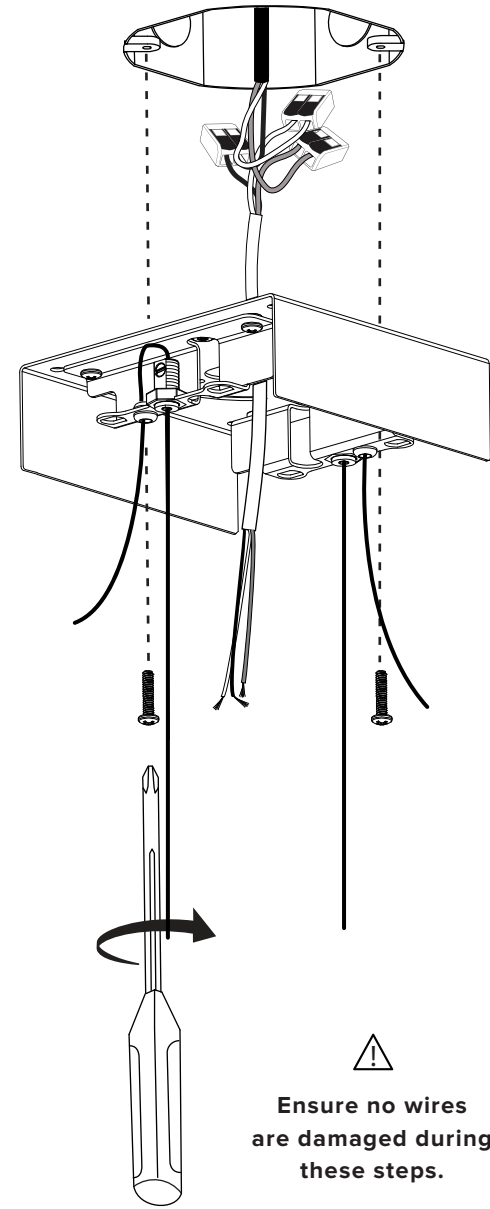


Ensure no wires  
are damaged during  
these steps.

# MAKE LINE/MAIN VOLTAGE CONNECTION TO ELECTRICAL BOX (AC)


STEPS 8-9

8


Connect the extension harness  
to AC input wires of the driver and  
connect ground from bracket to the harness.

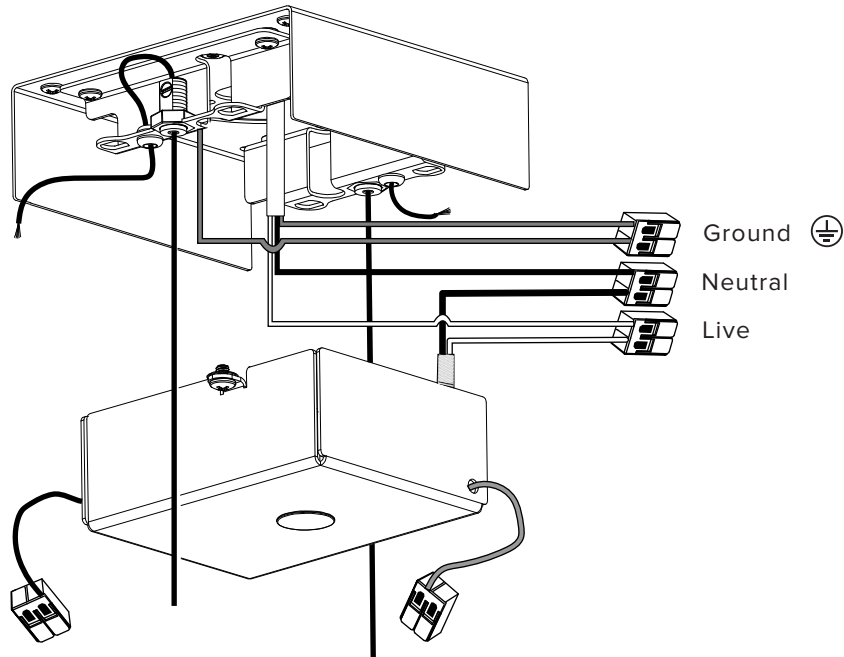

for 120 V wiring

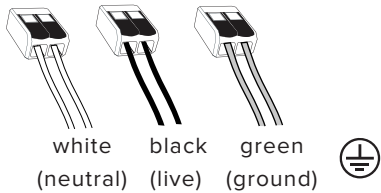


for 220-240 V wiring

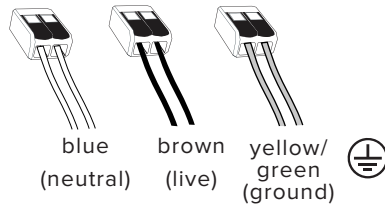

9

Screw in place the driver  
housing.

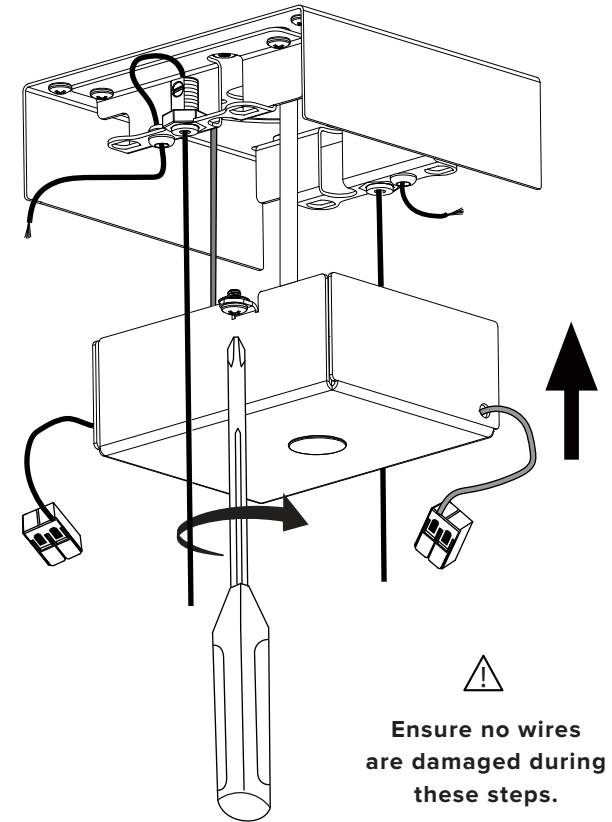

Ensure no wires  
are damaged during  
these steps.


If applicable, use  
grey and purple wires for 0-10V  
dimming circuit before closing  
the driver housing.

## CONNECT DC WIRES ON BOTH SIDE OF HOUSING AS BEFORE

10

One side is marked positive, the other is marked negative.

**Red to grey (+)**  
**Black to black (-)**

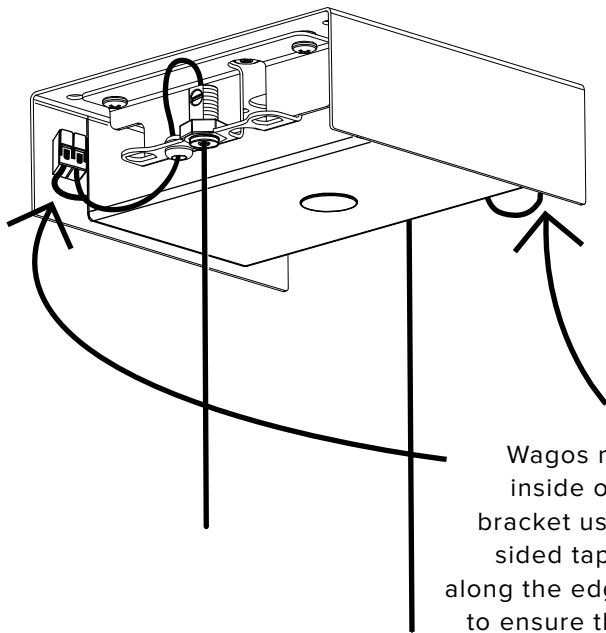


Wagos may be taped inside of the canopy bracket using the double sided tape. Keep wires along the edge of the housing to ensure that they are out of the way.

## MAKE MICRO ADJUSTMENTS

11

To level the luminaire, push up on the strain relief, then turn the brass nut to make any necessary adjustments.

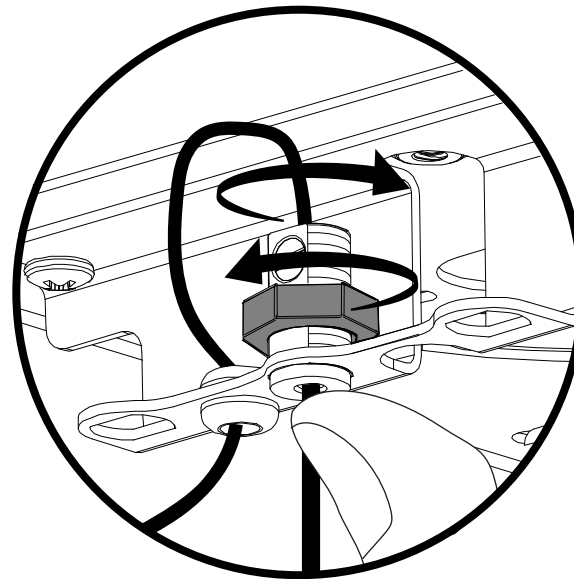


The brass nut must never exceed the top of the strain relief.

On the Hut 03 and Hut 04 versions adjust the four corner wires before the central wires

12

Replace canopy cover.  
It is held in place by a magnet.

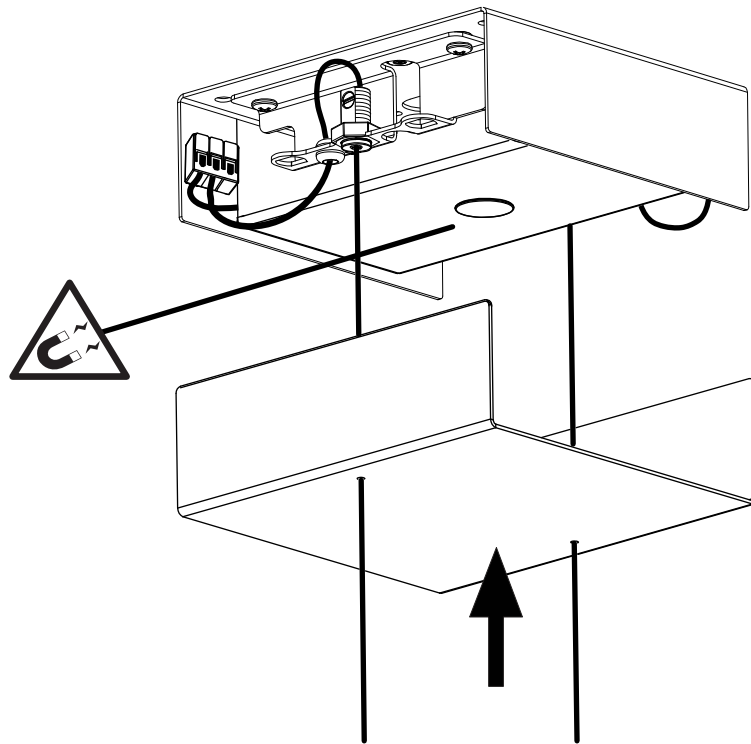

Ensure no wires  
are damaged during  
this steps.