


LAURENT ATELIER - SUSPENDED

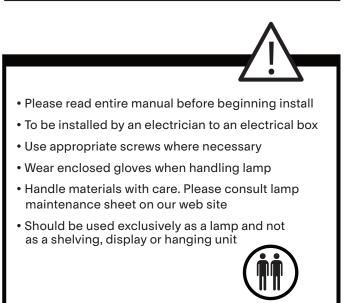

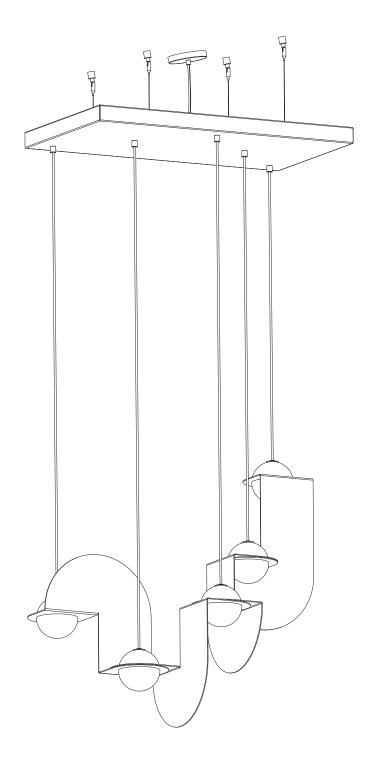



lambert&fils

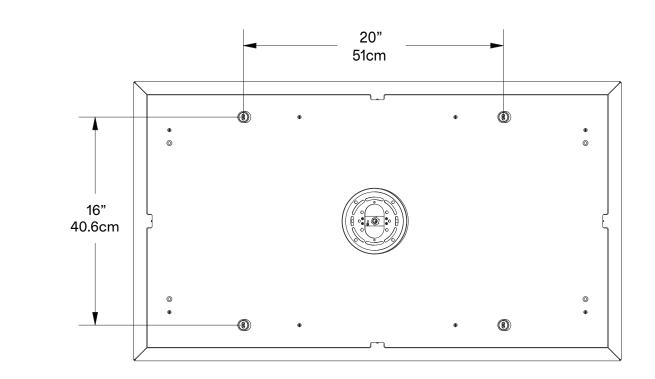


Mark anchor locations using electrical box and canopy as a guide.

1

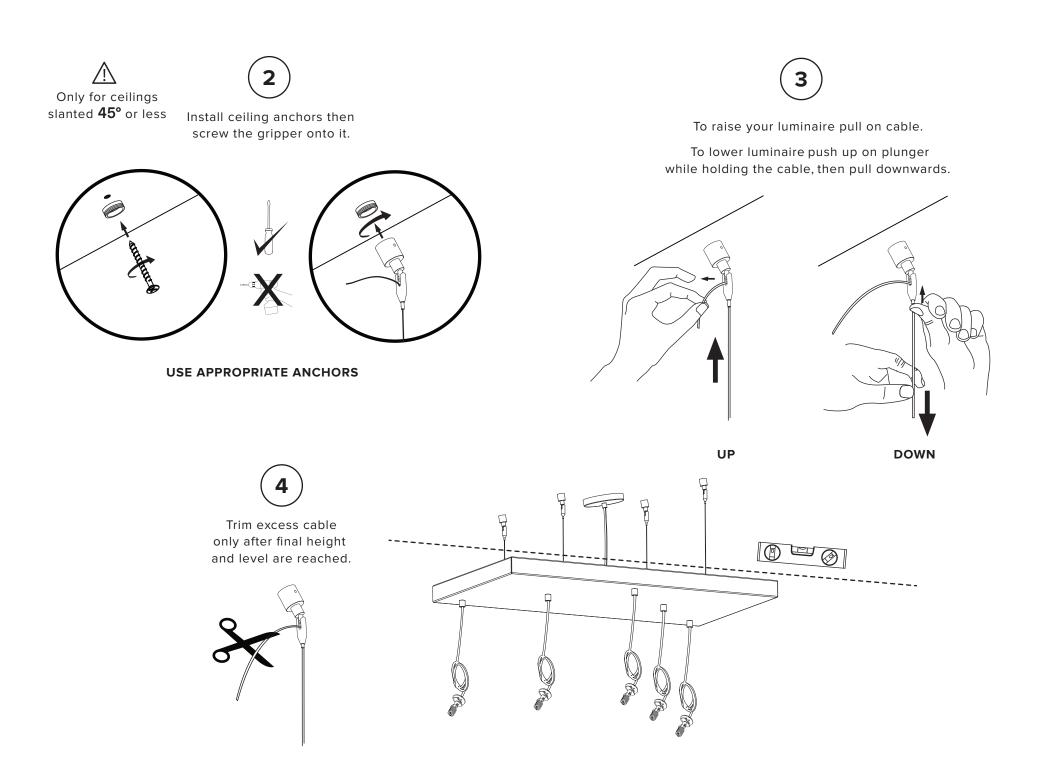

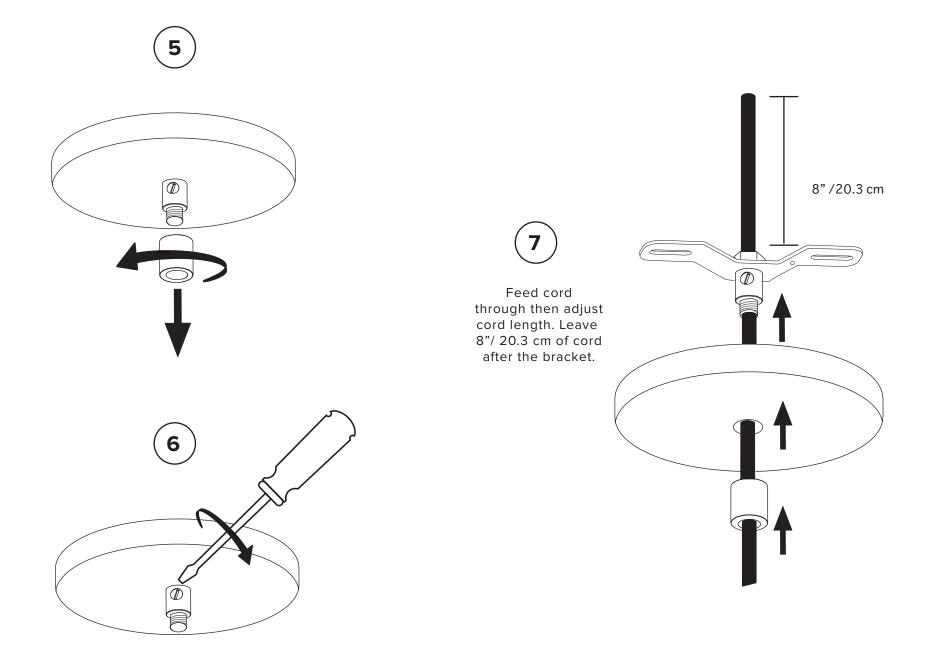

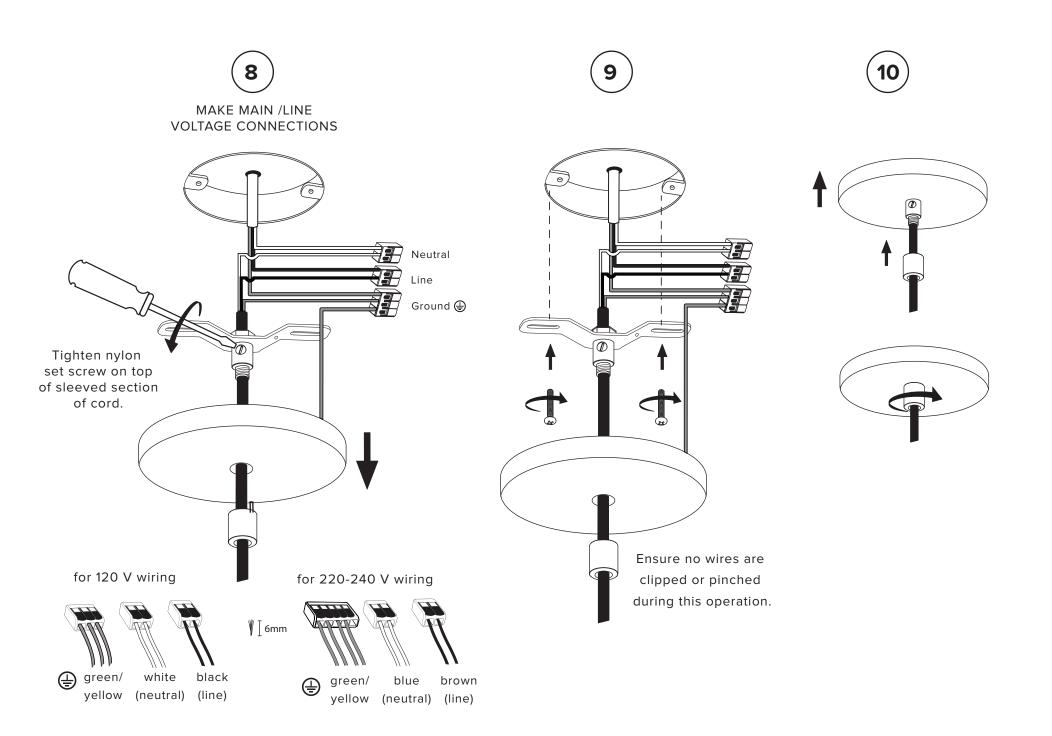


(11)


The globes and shades need to be installed in order as presented. There are aluminium and steel shades that need to be layered correctly.


The shades are clearly labeled.

After each step (1 to 5) screw on the globes by following the steps on next page.

- 1. Pass wire for globe **1** trough shade **A**
- 2. Pass wire for globe 2 trough shade B, then A
- 3. Pass wire for globe **3** trough shade **C**, then **B**
- 4. Pass wire for globe ${\bf 4}$ trough shade ${\bf C},$ then ${\bf D}$
- 5. Pass wire for globe $\mathbf{5}$ trough shade \mathbf{D}

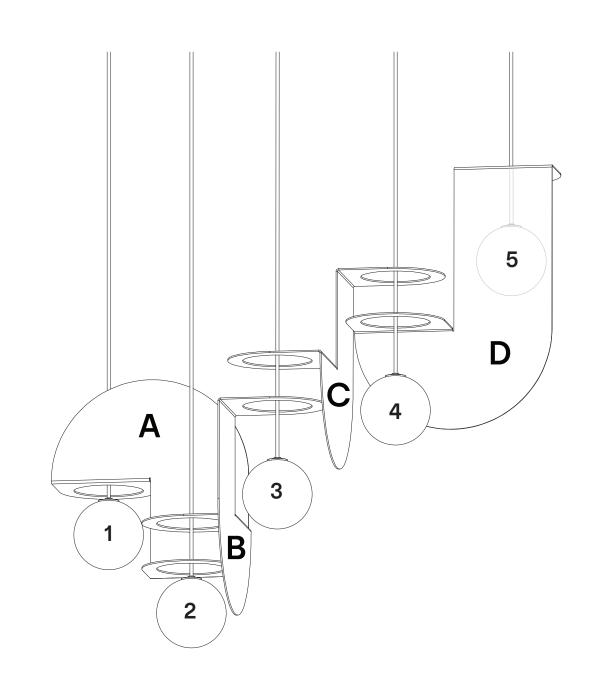

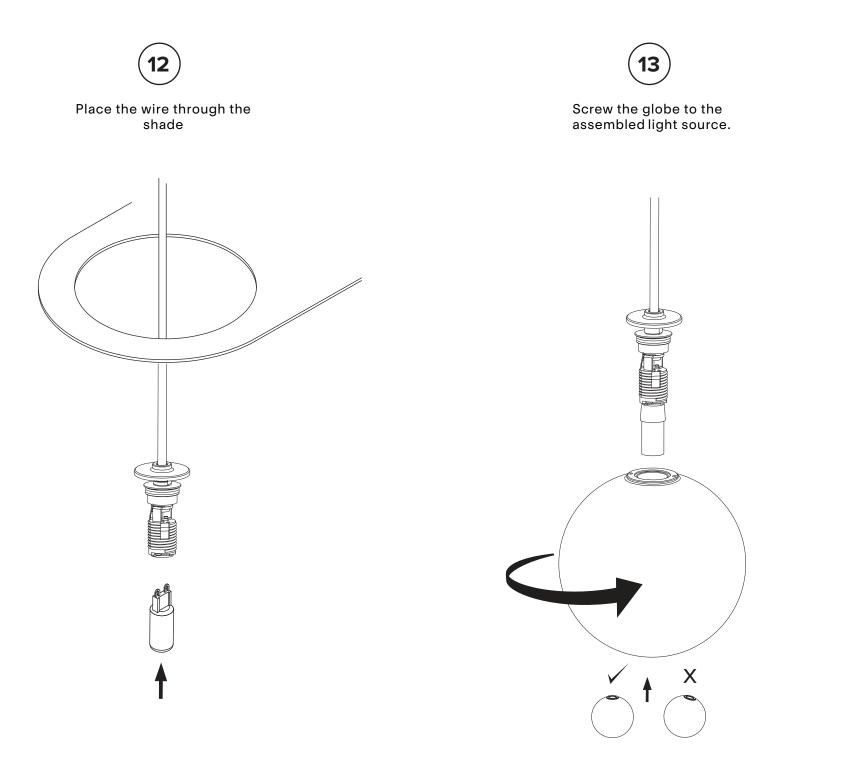


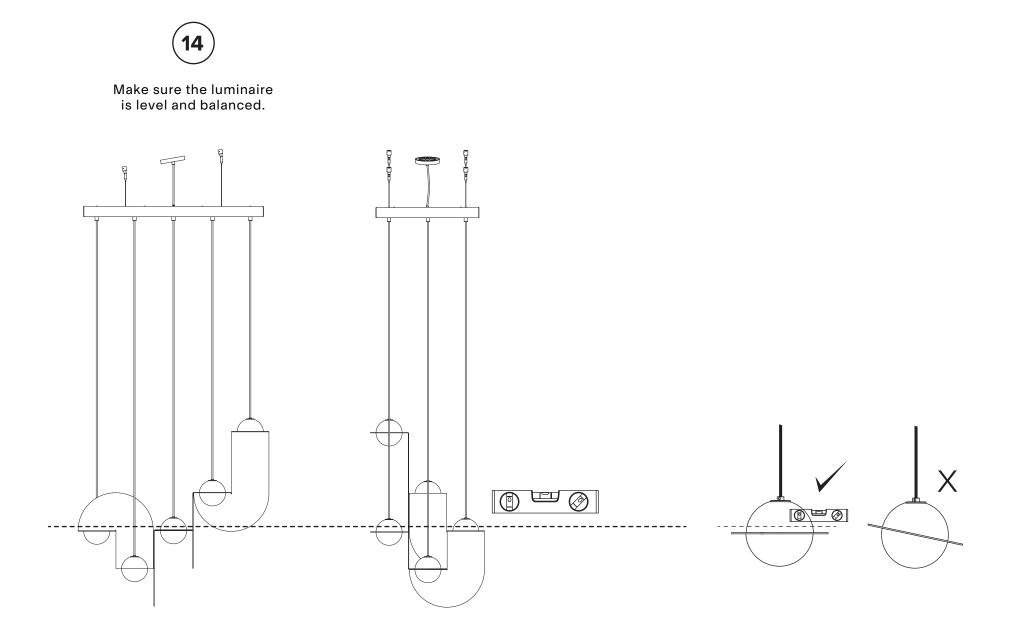





If micro adjustements to wire length are needed, open canopy cover by rotating the 5 caps.

The lower part of the canopy is temporarily held in place with stainless steel cables to facilitate adjustments.

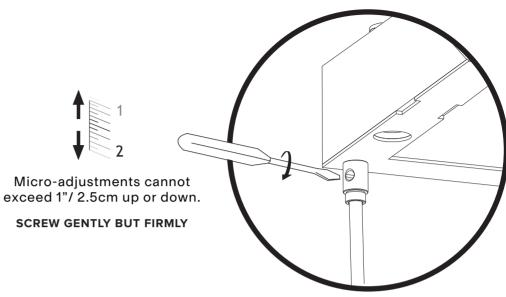

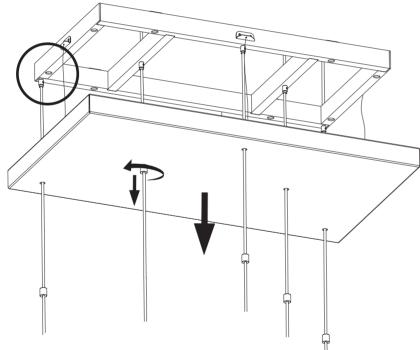

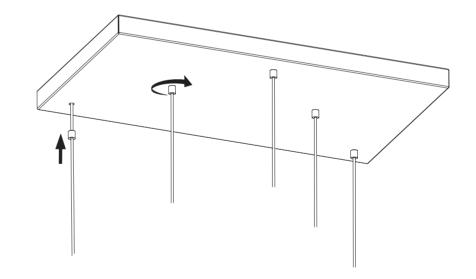

When adjustements are complete, raise the canopy cover and secure it in place by screwing the caps back into place.

Make sure the stainless steel cable is tucked inside of the canopy cover when raising it.