
### SILO ATELIER 01 - SURFACE MOUNTING

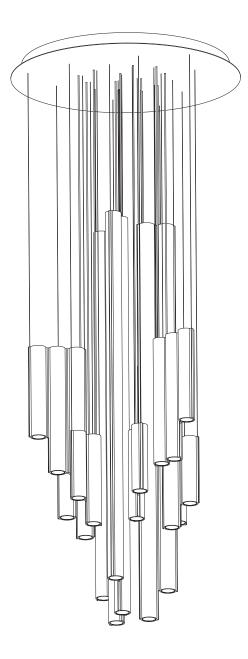



- Please read entire manual before beginning installation
- To be installed by an electrician to an electrical box
- Use appropriate screws where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site





Never turn on power supply until installation is completed


 $\underline{\mathbb{N}}$ 

Keep luminaires wrapped until the end of the installation


# 1

### Chose the orientation of the fixture

Make sure you have the desired orientation before proceeding. The luminaire is not symetric.

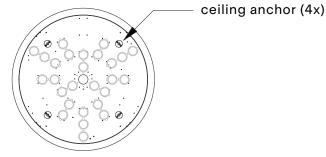


top view

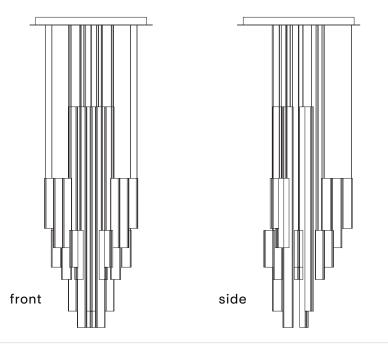



### Mark ceiling mounting points

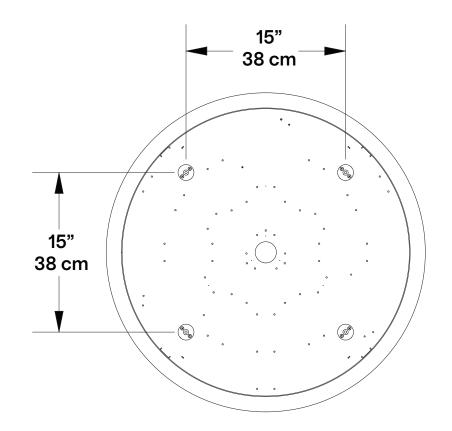


3

Connect the extension harness to the junction box (if provided)




Open canopy cover by untying luminaire's wires. It is held in place by magnets and suspended by stainless steel cables in order to facilitate assembly.

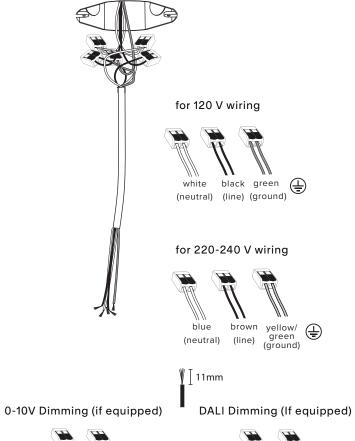






Orange Orange DALI 1 DALI 2

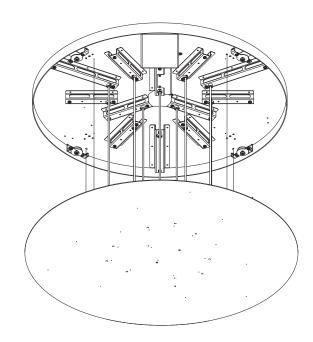


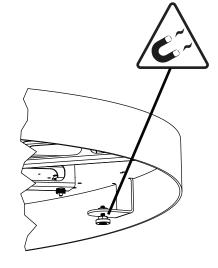




Mount the canopy using 4 screws (not provided). Use proper anchors for ceiling material.


Carefully feed extension harness through central opening.

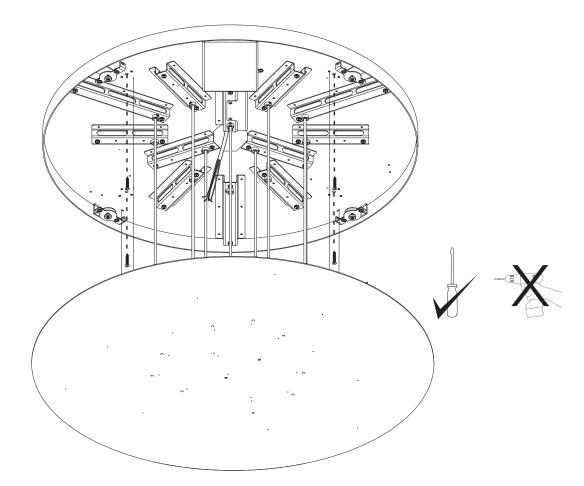


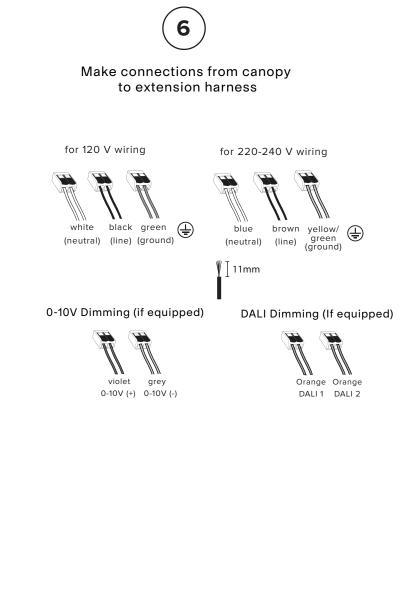





Enclose the wiring using the provided mini junction box. It is shipped lose from the canopy.

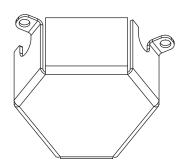

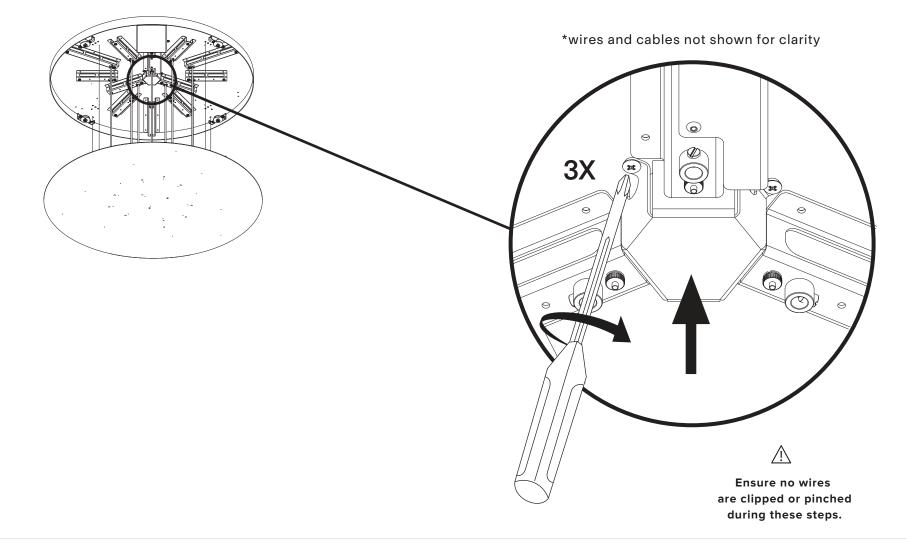

#### INSTALL LUMINAIRES

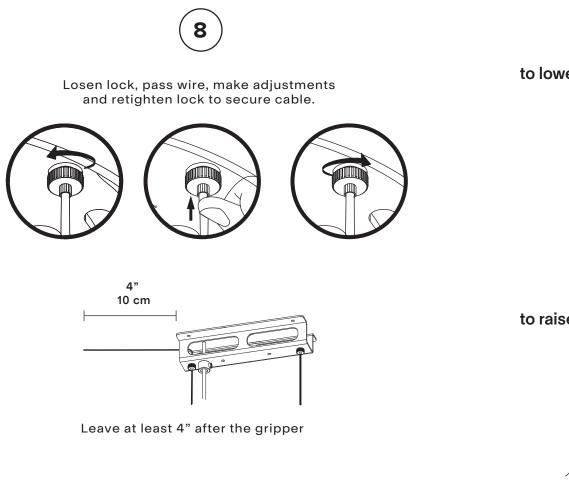

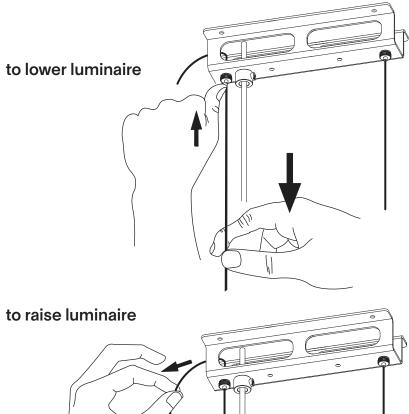


## 9

Make sure the first luminaire is level and adjusted at the right height before installing the others.


The other luminaires will be adjusted in relation to the first one. Use height guide on the following page to achieve the correct height and configuration.


Repeat these steps for the remaining luminaires working your way outwards from the center of the canopy.

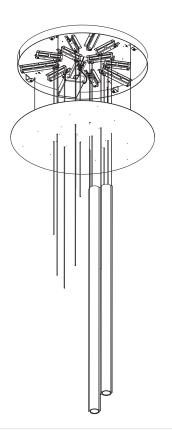



18" minimum  $\odot$ Ø Keep luminaires wrapped until the end of the installation

### Height reference guide

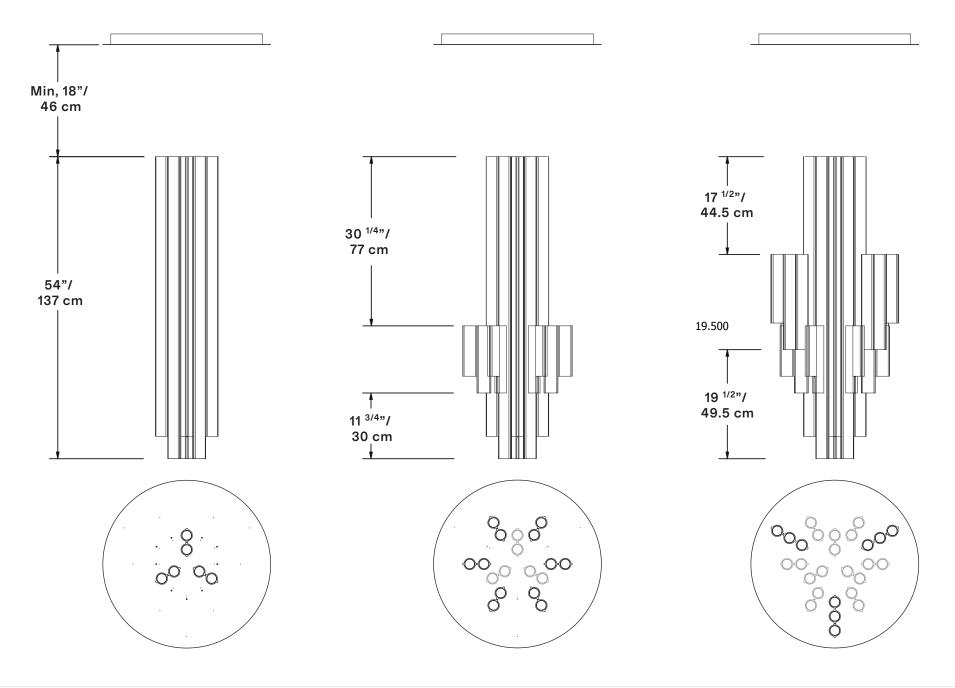

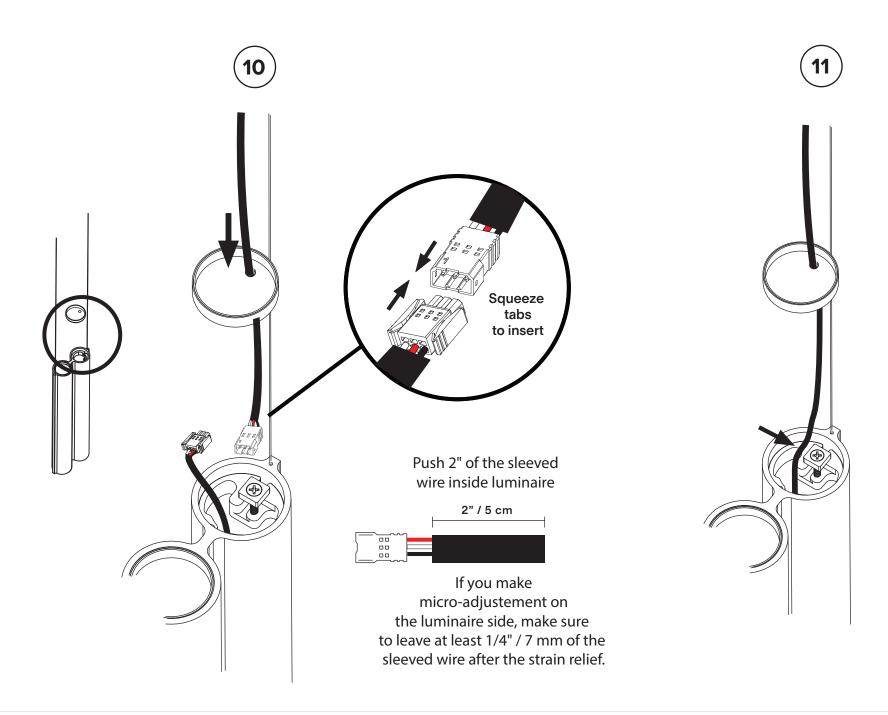

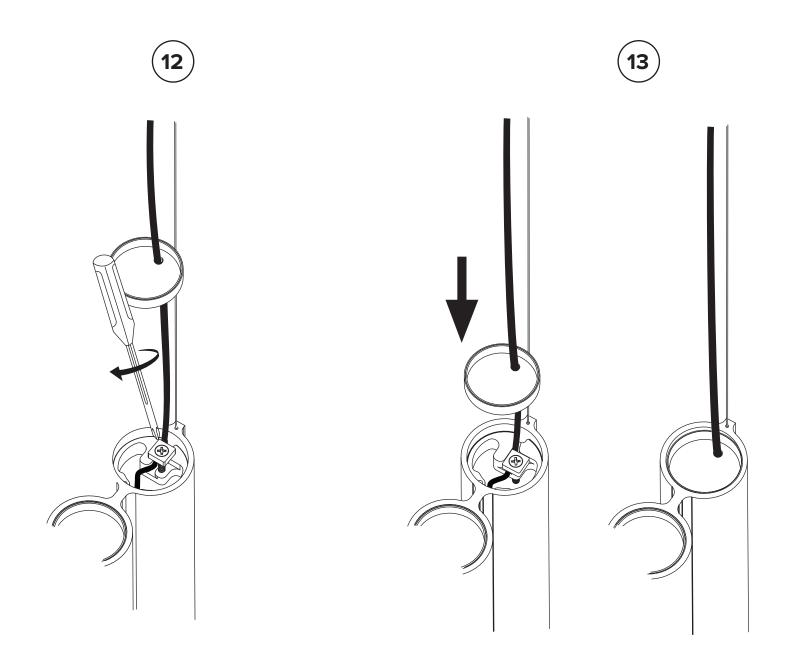

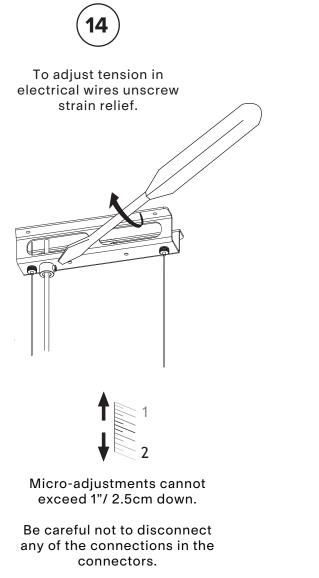


SCREW GENTLY BUT FIRMLY



Ensure all luminaires are balanced and level before closing the canopy.


Make adjustments to the wire and stainless steel cable - refer to previous steps.

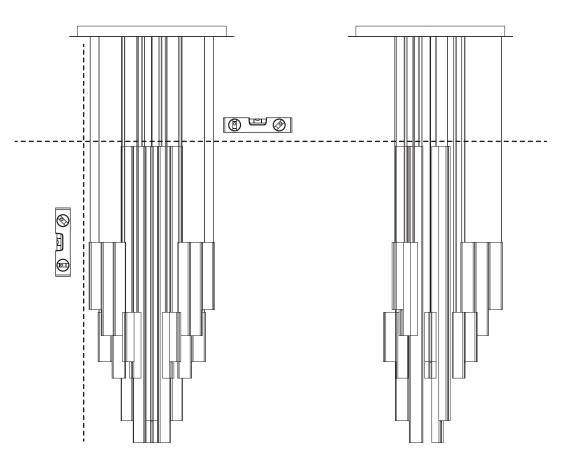




Raise the canopy cover. It is held in place with magnets.

Be careful not to pinch the wires and stainless steel cables.

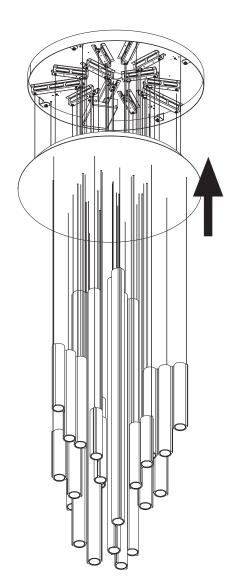

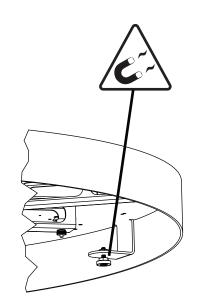



Make sure no wires are under the magnet when closing the cover.