# LAURENT ATELIER

⚠️

- Please read entire manual before beginning install
- To be installed by an electrician to an electrical box
- Use appropriate screws where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site
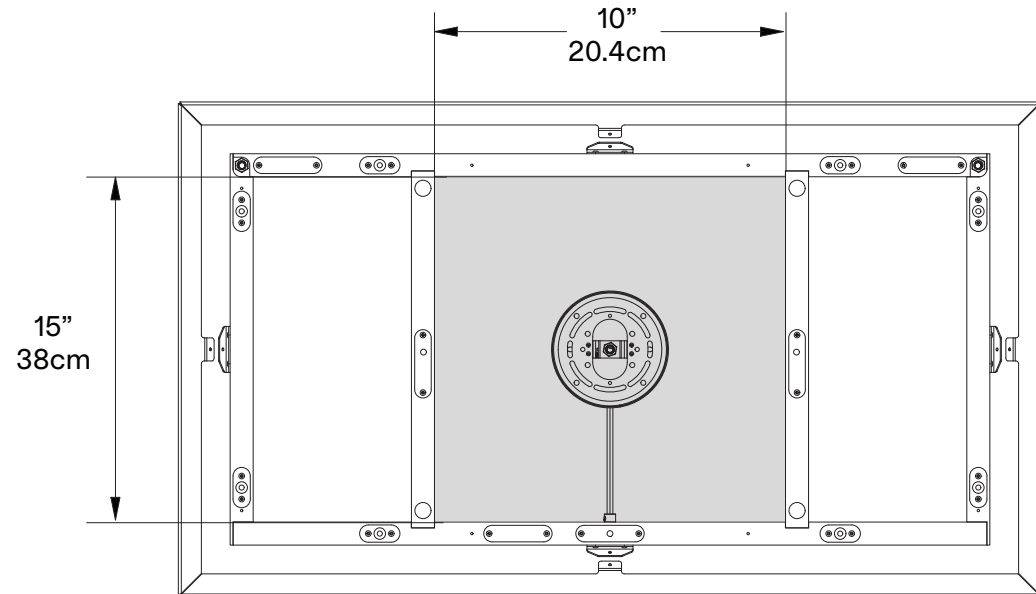- Should be used exclusively as a lamp and not as a shelving, display or hanging unit

lambert&fils
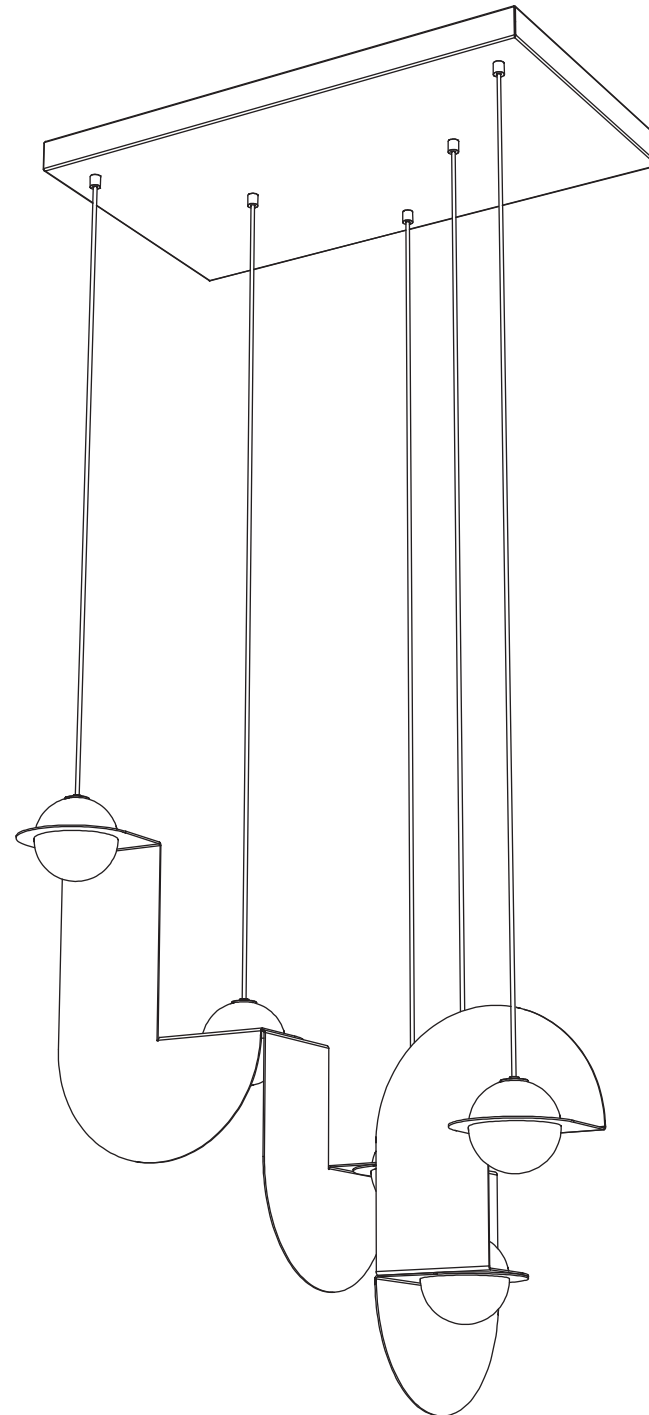
1

Ceiling mounting points

Mark mounting locations using electrical box and canopy as a guide.

32"
81.3cm

12"
30.5cm
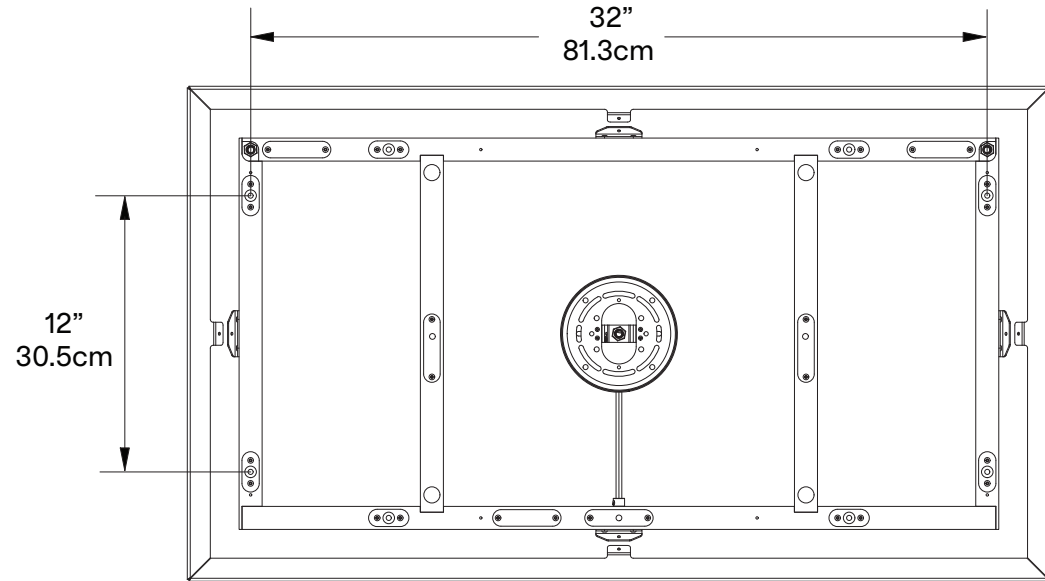
Junction box limits

The junction box extents must be placed within the grey area.
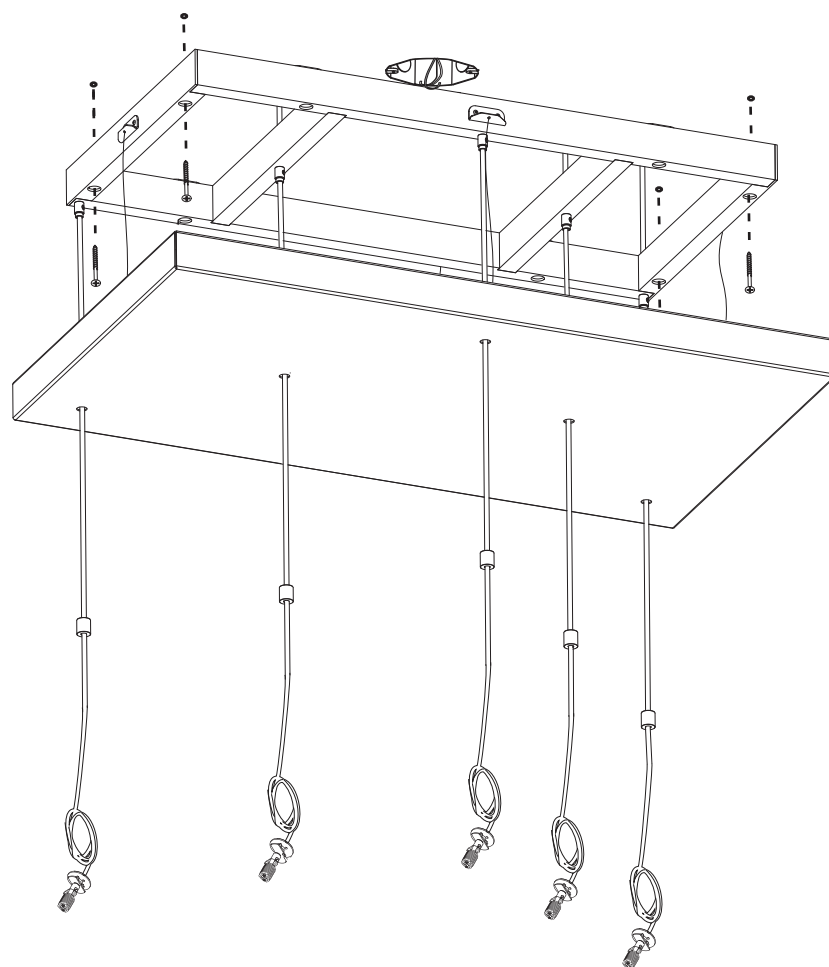
10"
20.4cm

15"
38cm

2

Open canopy cover by unscrewing the brass caps

The lower part of the canopy is temporarily held in place with stainless steel cables to facilitate assembly.
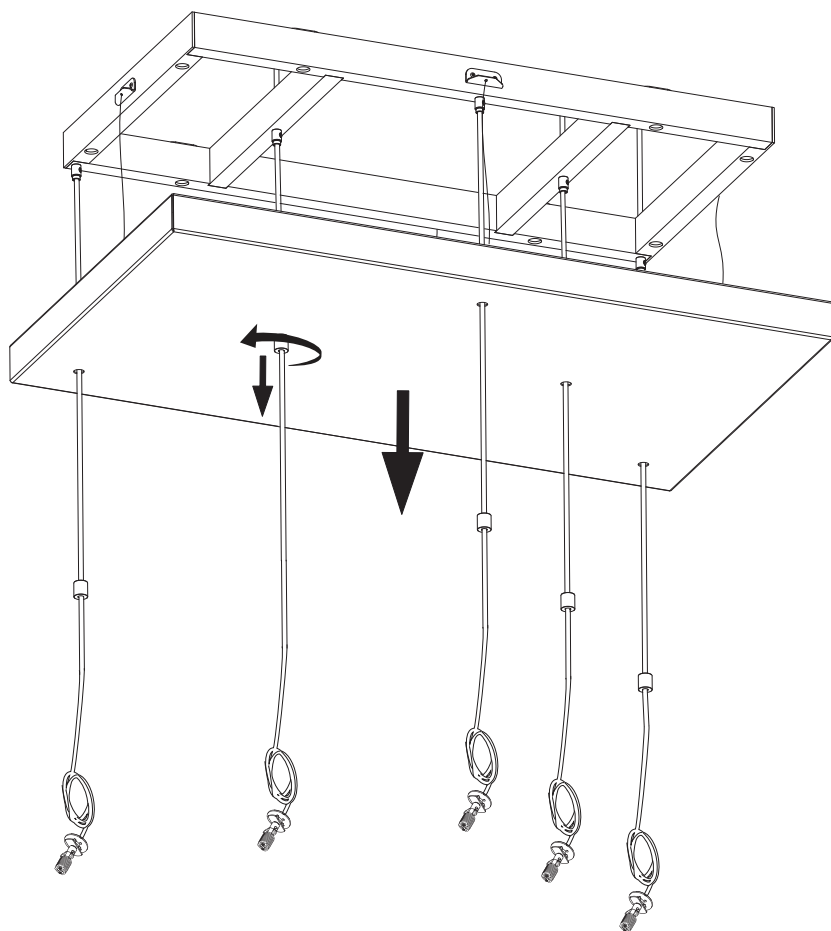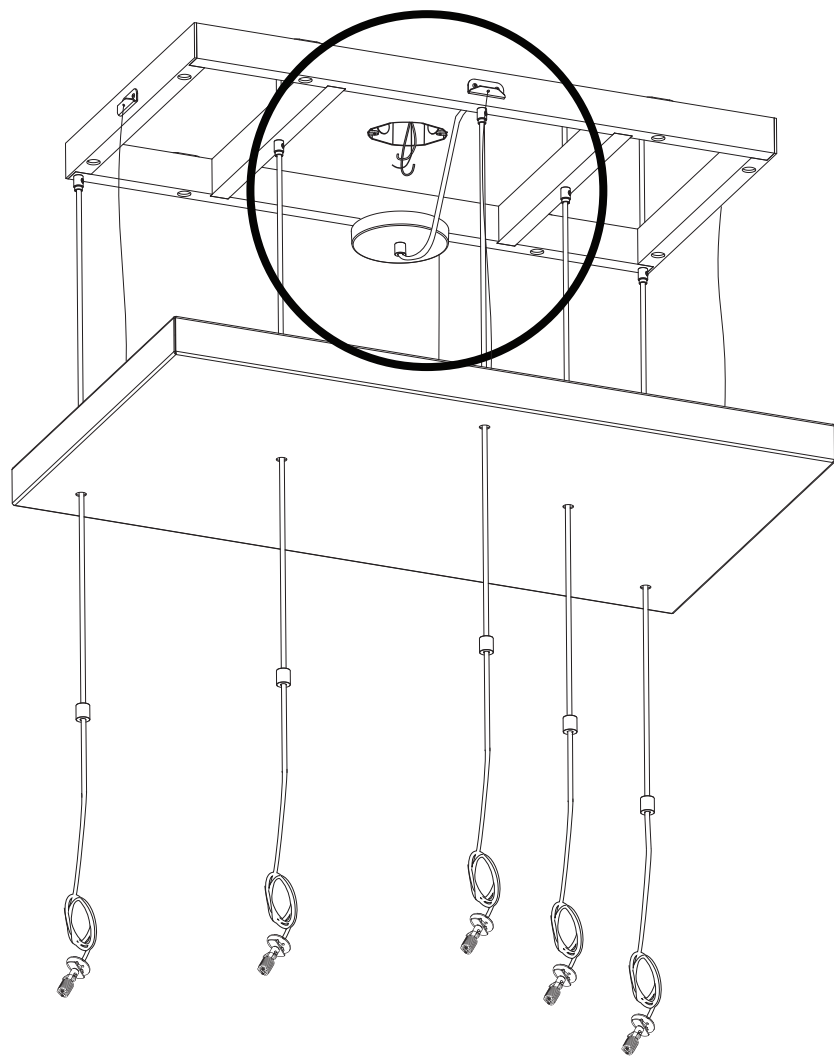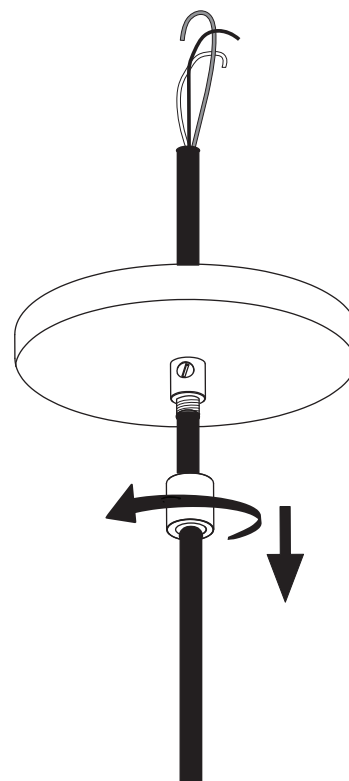
3

Mount the canopy using 4 screws (not provided). Use proper anchors for ceiling material.
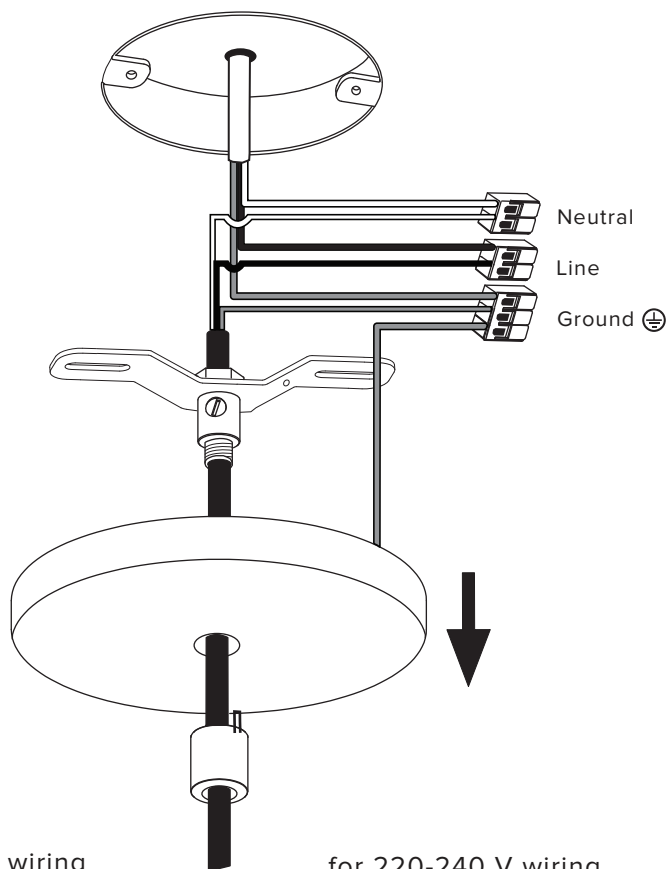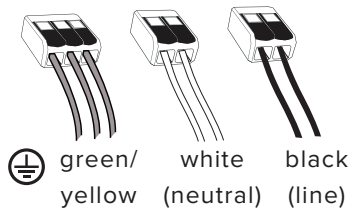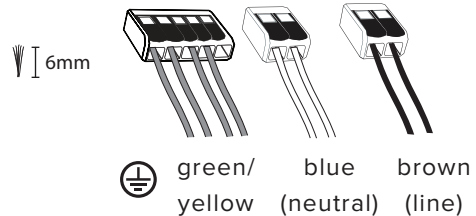
Install canopy and
make connections

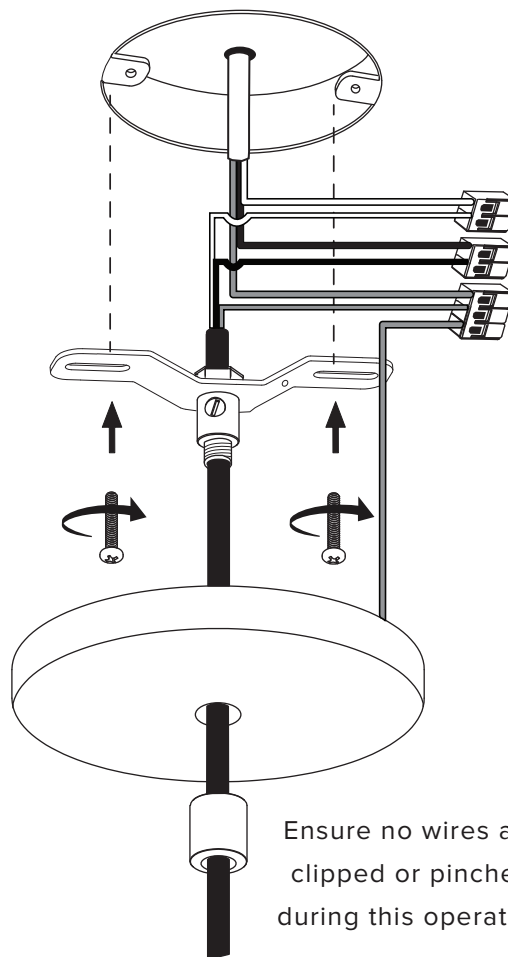
4

5

MAKE MAIN /LINE
VOLTAGE CONNECTIONS

Neutral

Line

Ground

for 120 V wiring

for 220-240 V wiring

6mm

green/
yellow

white
(neutral)

black
(line)

green/
yellow

blue
(neutral)

brown
(line)
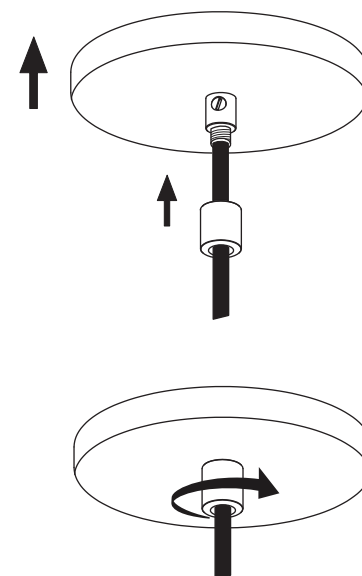
6

Ensure no wires are
clipped or pinched
during this operation.

7

8

The globes and shades need to be
installed in order as presented.
There are aluminium and steel shades
that need to be layered correctly.

The shades are clearly labeled.

After each step (1 to 5) screw on the globes
by following the steps on next page.

1. Pass wire for globe **1** trough shade **A**

2. Pass wire for globe **2** trough shade **B**, then **A**

3. Pass wire for globe **3** trough shade **C**, then **B**

4. Pass wire for globe **4** trough shade **C**, then **D**

5. Pass wire for globe **5** trough shade **D**
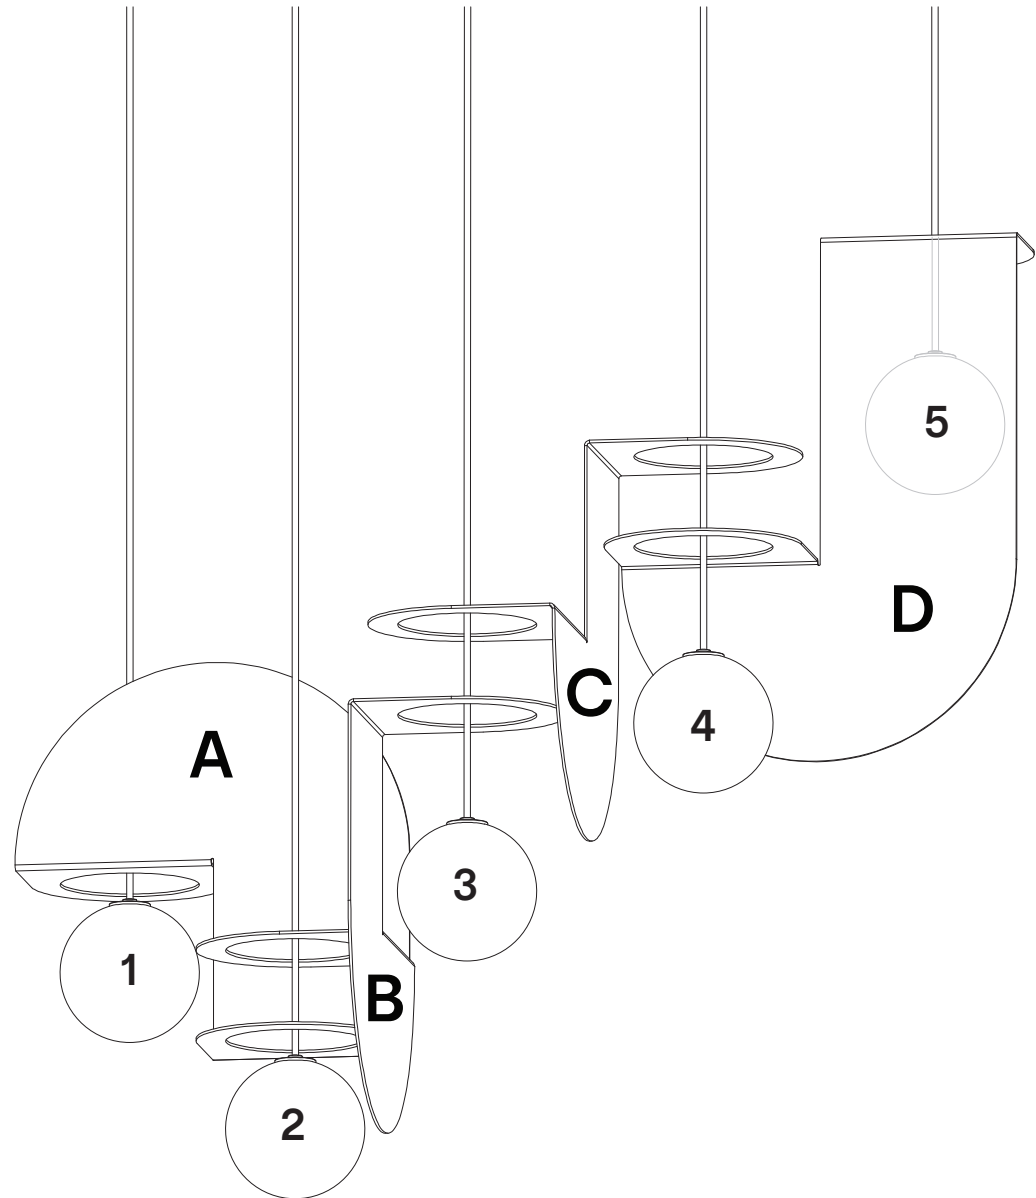
9

Place the wire through the shade then unthread the top cap counter-clockwise.
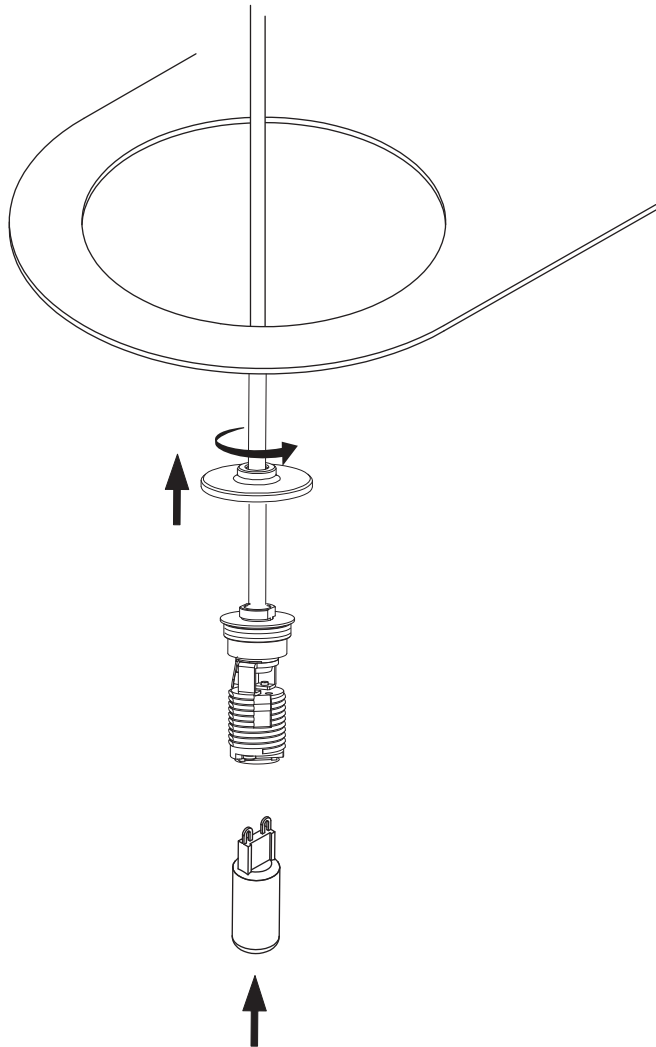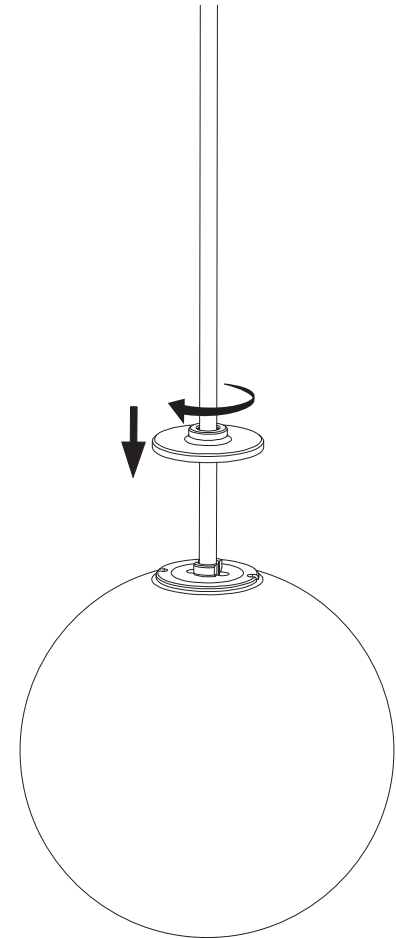
10

Screw the globe to the assembled light source.
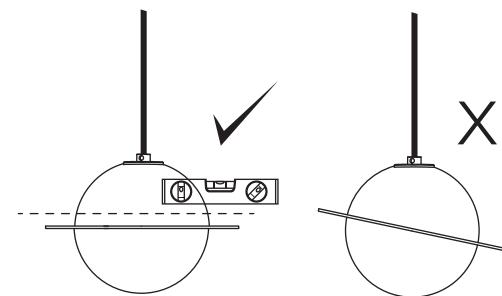
✓   X
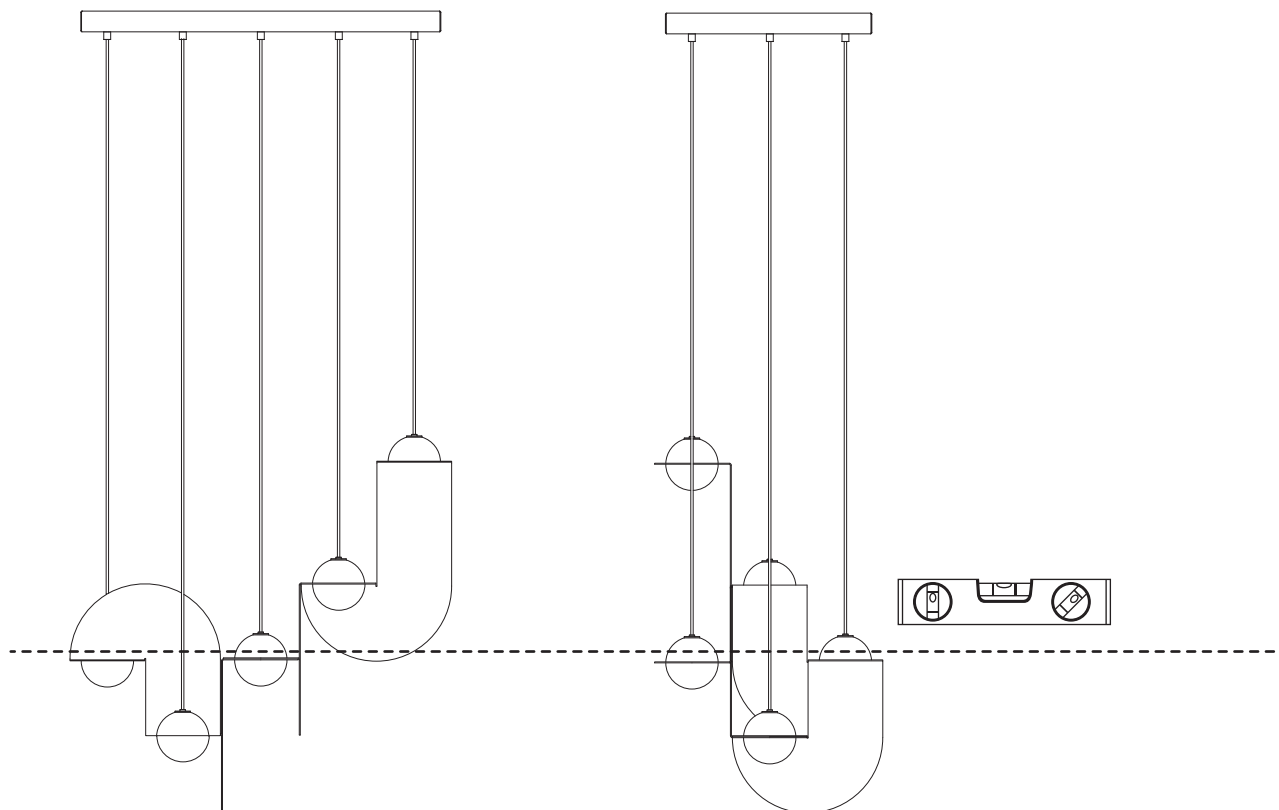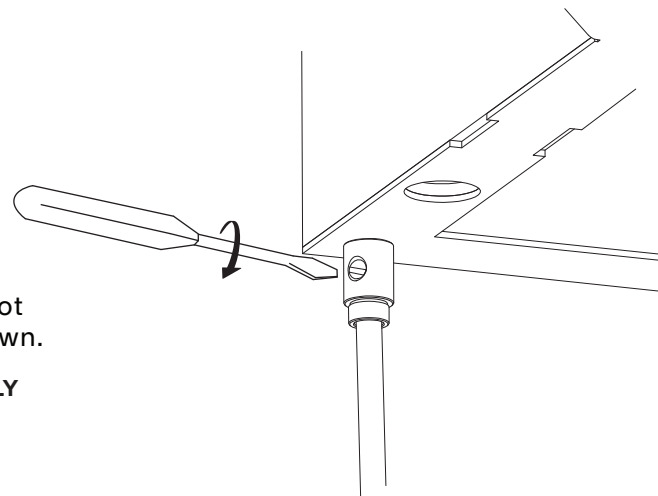
11

Screw the cap on the globe.

12

Make sure the luminaire
is level and balanced.

Micro-adjustments cannot
exceed 1"/ 2.5cm up or down.

SCREW GENTLY BUT FIRMLY

13

Raise the canopy cover
and secure it in place by screwing
the brass caps back into place.

Make sure the stainless steel cable is
tucked inside the canopy cover.