

## MILE 01, 02, 03



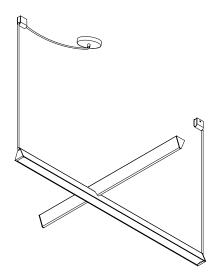




- Use appropriate screws and anchors where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site
- Should be used exclusively as a lamp and not as a shelving, display or hanging unit


lamp weights 4-9 lbs.



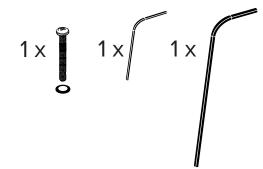





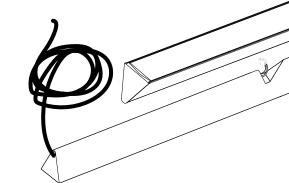





**PLEASE NOTE** 

THIS IS AN EXAMPLE OF THE MILE 01.

HOWEVER, THE MILE 02 AND 03 FOLLOW

THE SAME INSTALLATION PROCESS.

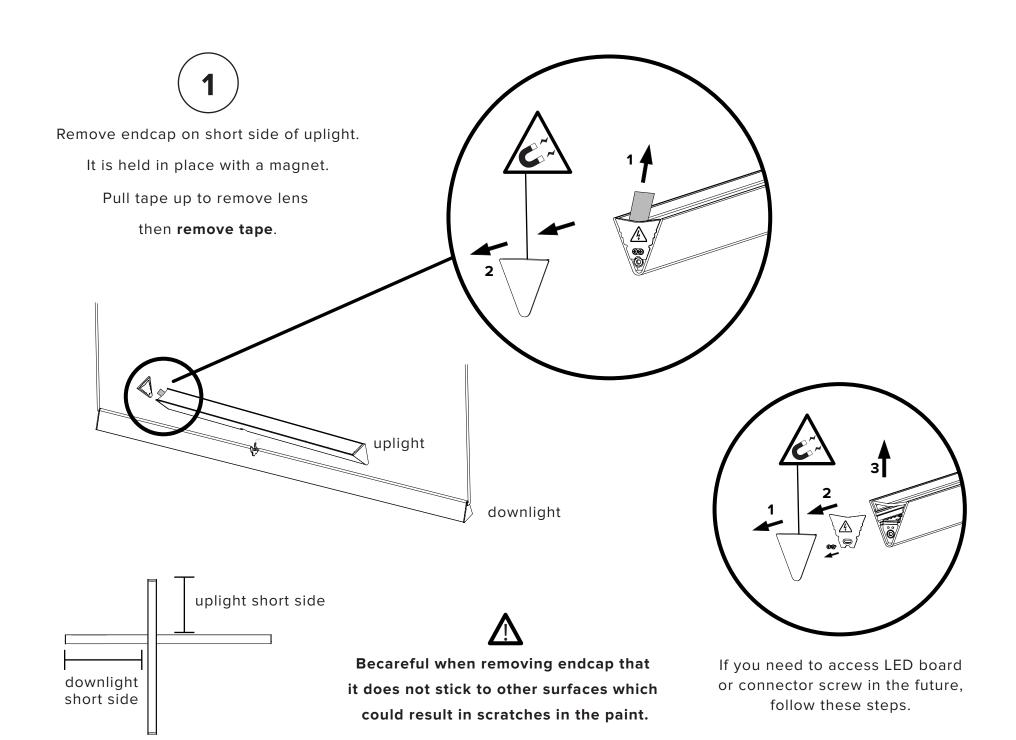

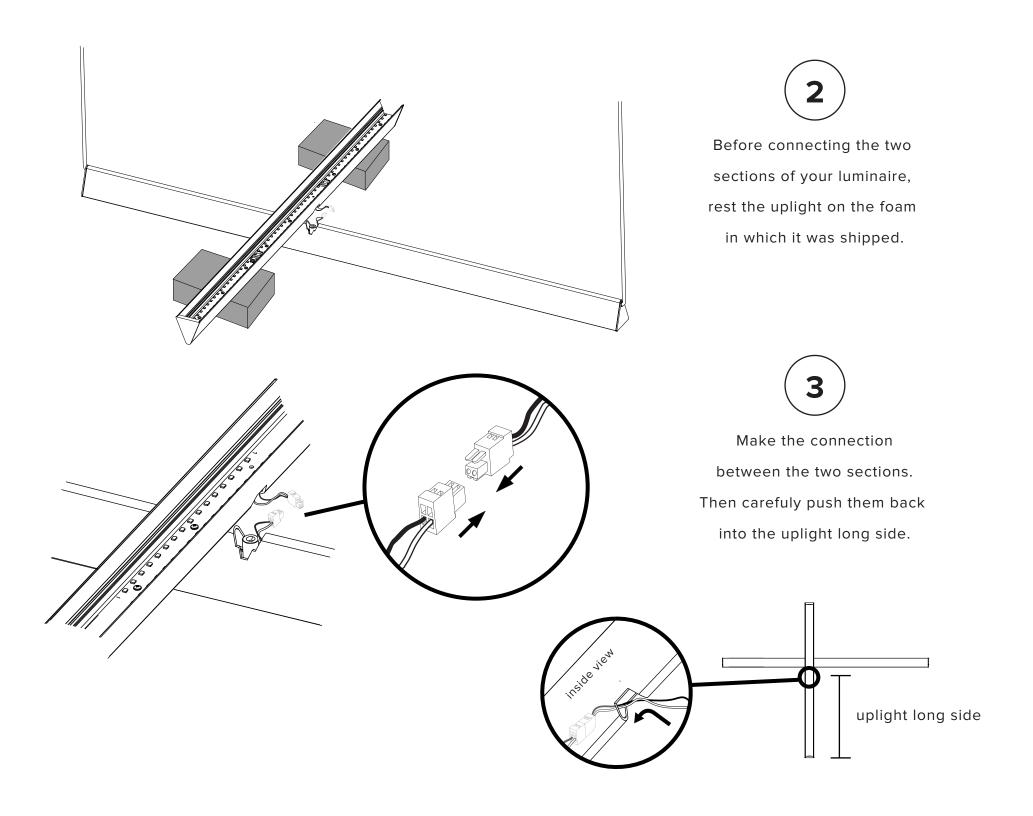



Reorientate uplight into the slot of the downlight.

Screw it into place with provided screw and washer

## Ŵ


Make sure the wire connection is not in the way of the screw.


Do not pinch or scuff wires.

5

Slide lens into opposite endcap (1) then snap lens back into slots (2).

Replace endcap (3).

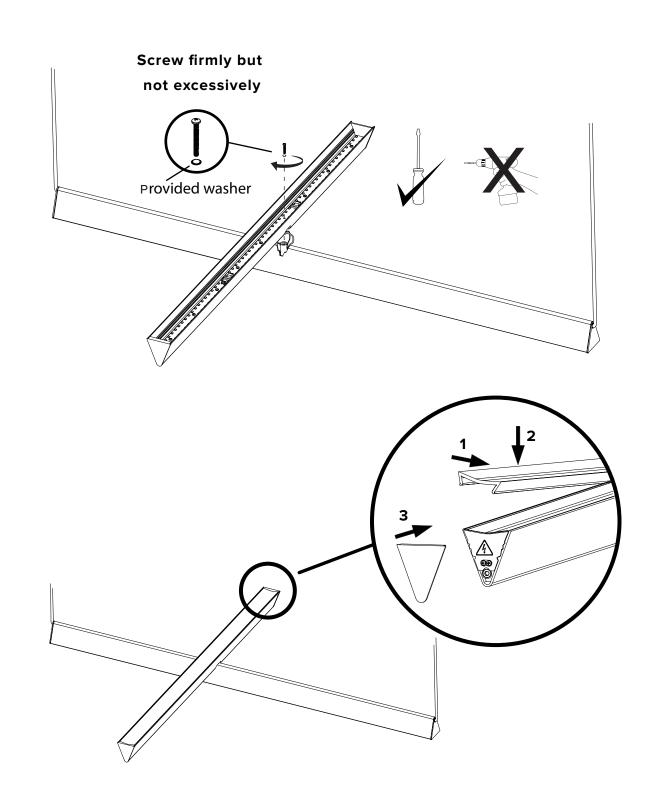


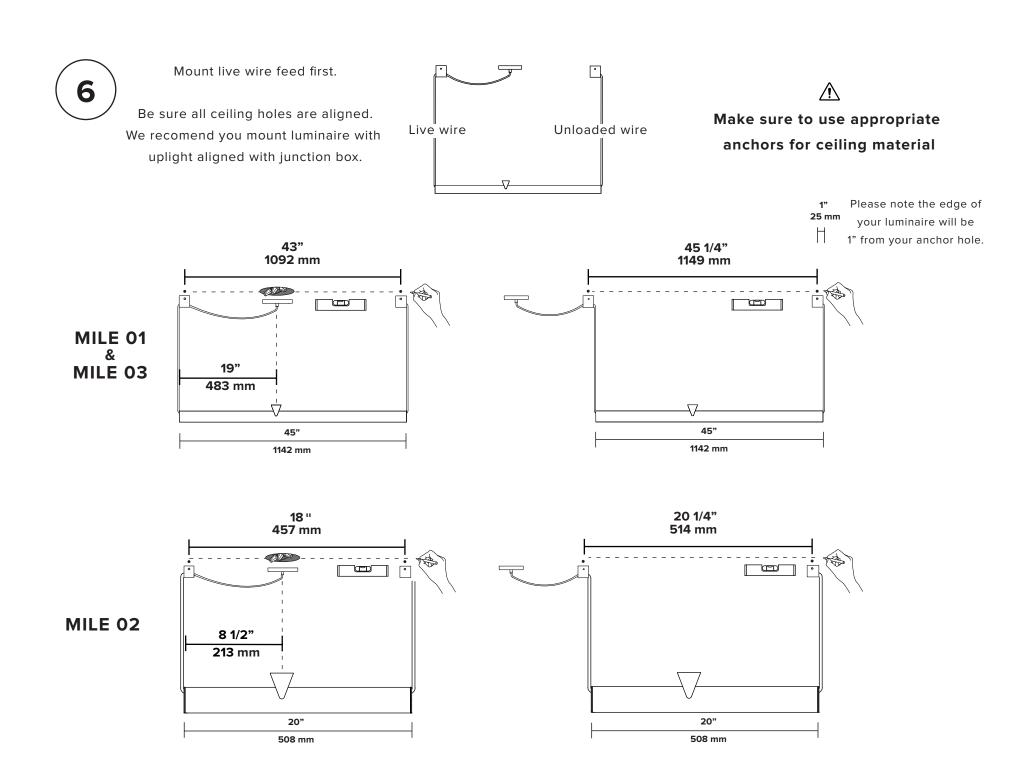




Mount live wire feed.

Pull wires to straighten them before mounting them.

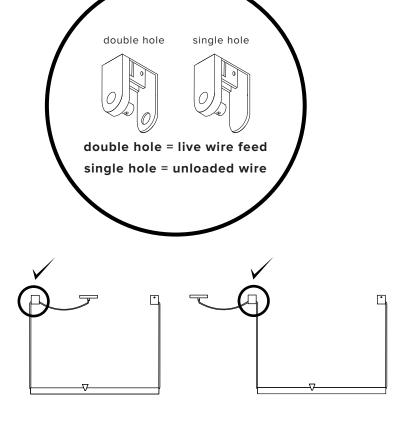


## $\underline{\Lambda}$


## Make sure to use appropriate anchors for ceiling material





Remove or install cover by screwing and unscrewing set screw.

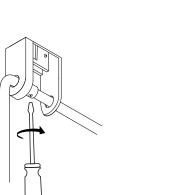


Screw gently, but firmly



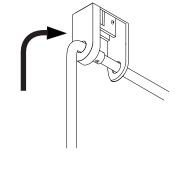




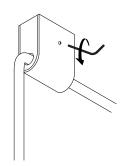

Screw gently, but firmly





after live wire.

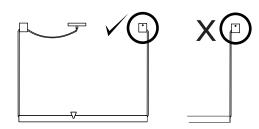






Remove or install cover by screwing and unscrewing set screw.



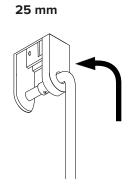








Screw gently, but firmly


Screw gently, but firmly

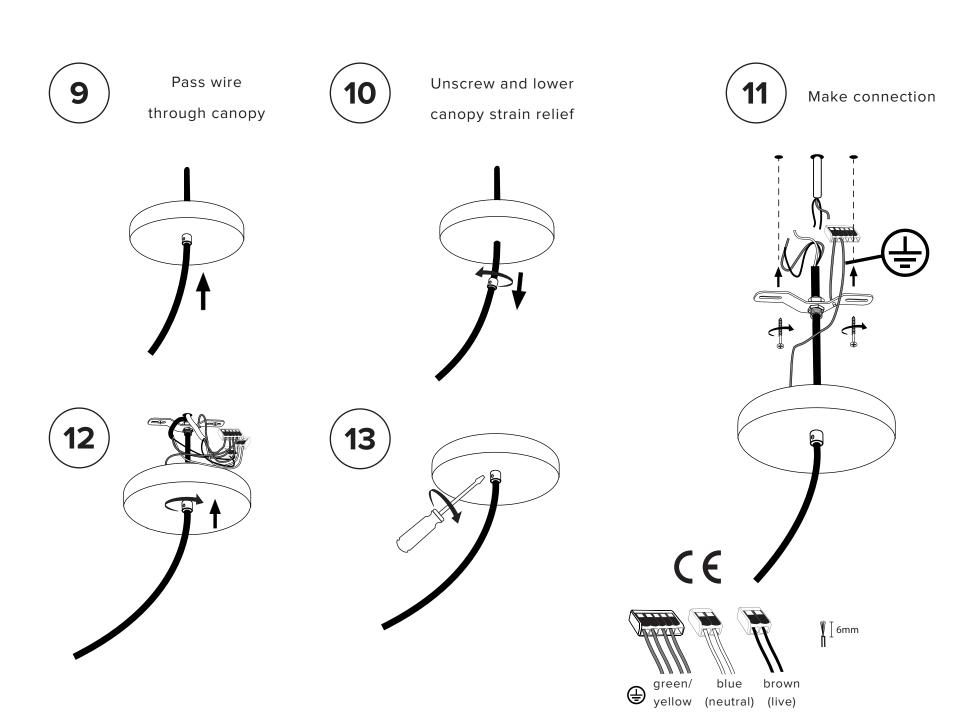




Adjust balance of downlight by adjusting length of wires if necessary.

Adjust balance of uplight by adjusting inner balance if necessary.

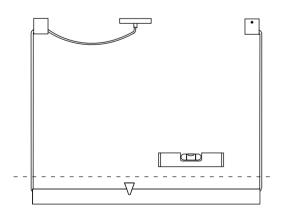



Before adjusting wire length or interior weight, carefully attempt to balance the luminaire by hand. The wire's flex can allow micro adjustments of their own.

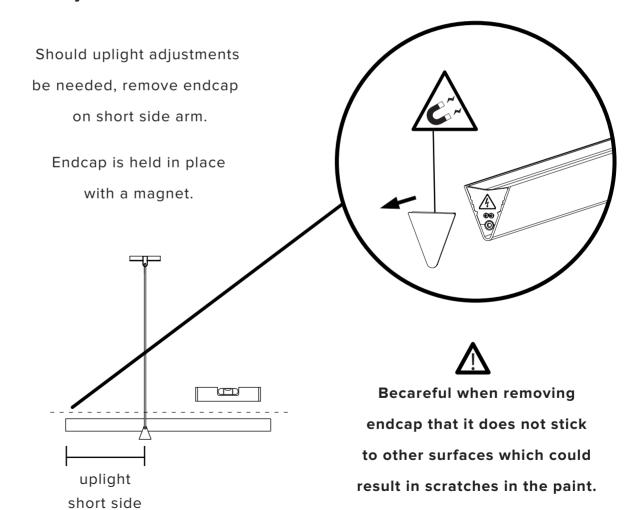


The adjustment screw holding the balance weight is now visible.


Use supplied allen key to screw weight in or out depending on balance.




Note that the endcap affects final balance of luminaire!

Luminaire will not appear balanced until the cap is in place.

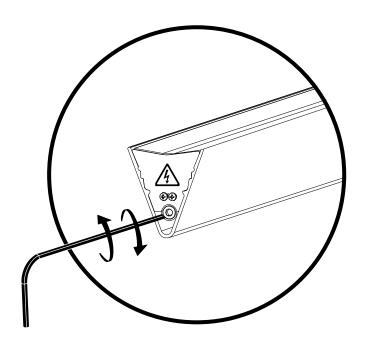

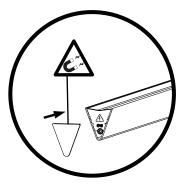

Replace endcap
when adjustments
are complete

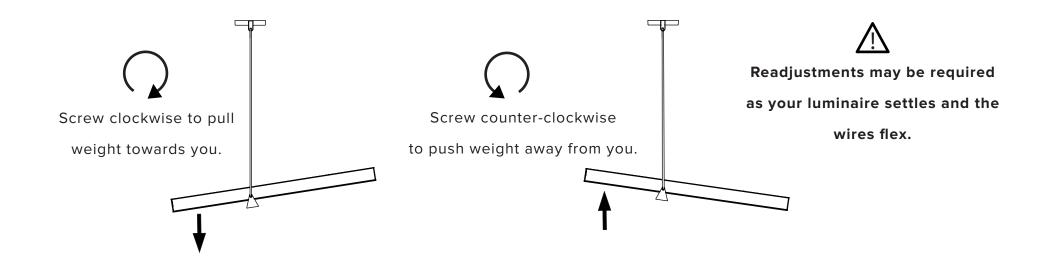


The adjustment screw holding the balance weight is now visible.


Use supplied allen key to screw weight in or out depending on balance.



Note that the endcap affects final balance of luminaire!

Luminaire will not appear balanced until the cap is in place.

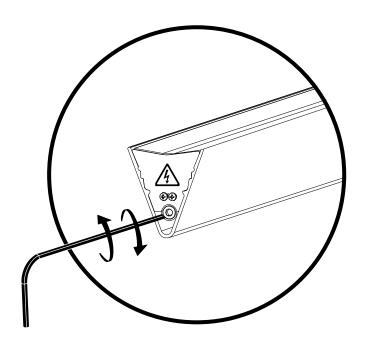

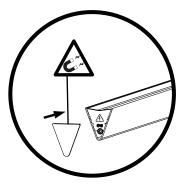

Replace endcap
when adjustments
are complete

