
## **BEAUBIEN 06**





- To be installed by an electrician to an electrical box
- Use appropriate screws where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site




12 lbs. / 5 kg In need of background nailing






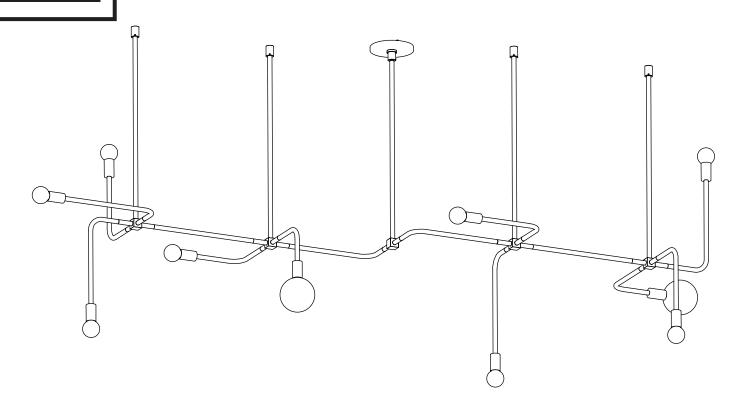



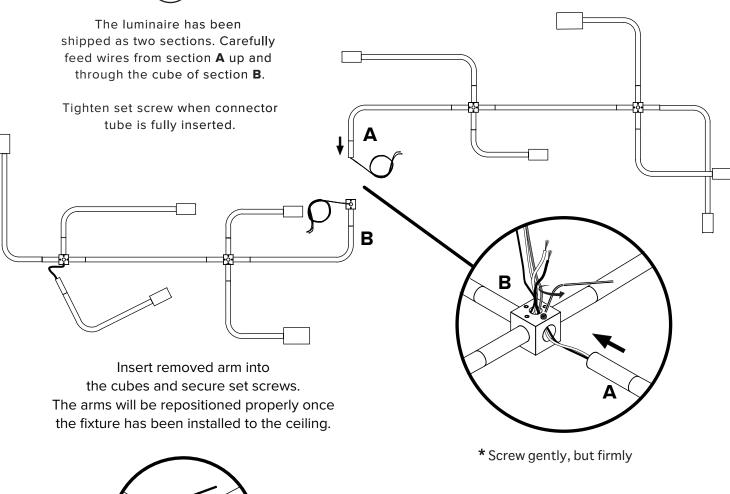

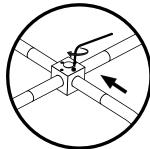


Insert arms then tighten set screw gently, but firmly.




Rotate arms shortest distance possible.


Do not rotate 3/4 turn.

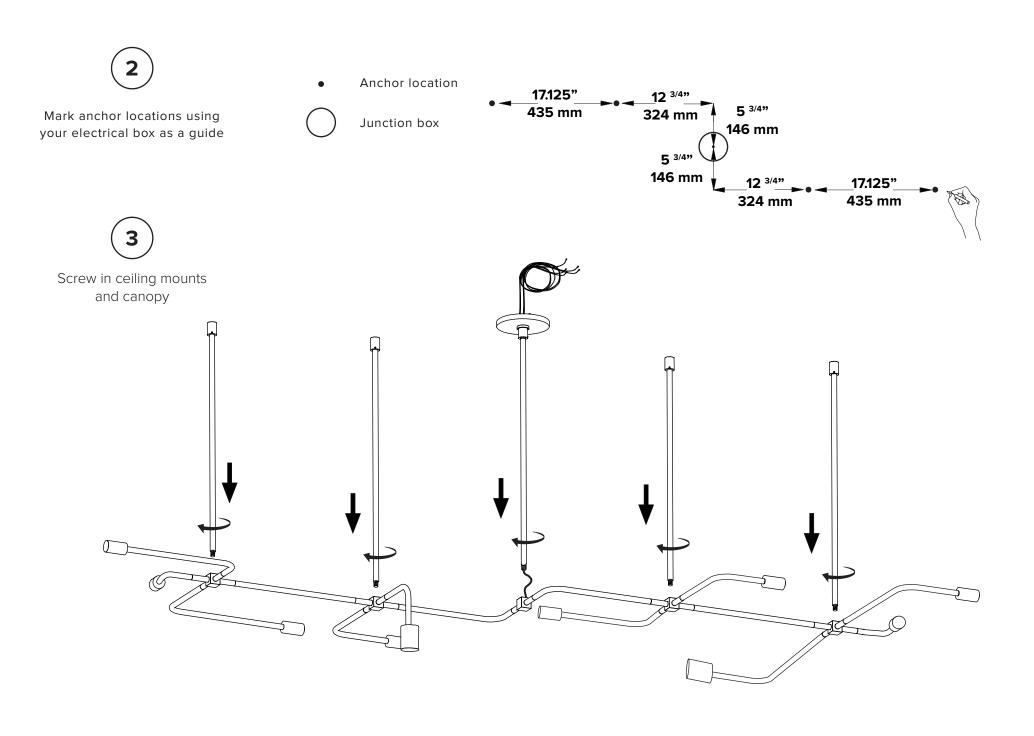




After having marked anchor location on the ceiling, screw in ceiling anchors using appropriate screws

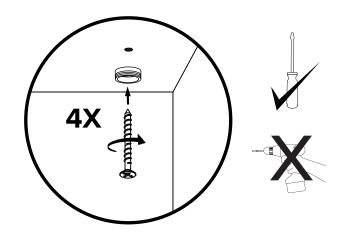

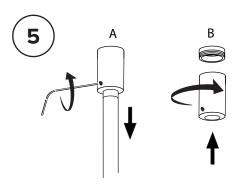

Loosen set screw and lower celing rod to allow mount to be screwed into the ceiling anchor

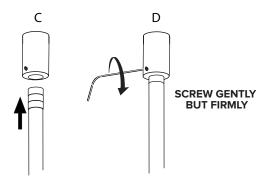


Raise ceiling stems into the anchored ceiling mount and tighten the set screw



Make connection






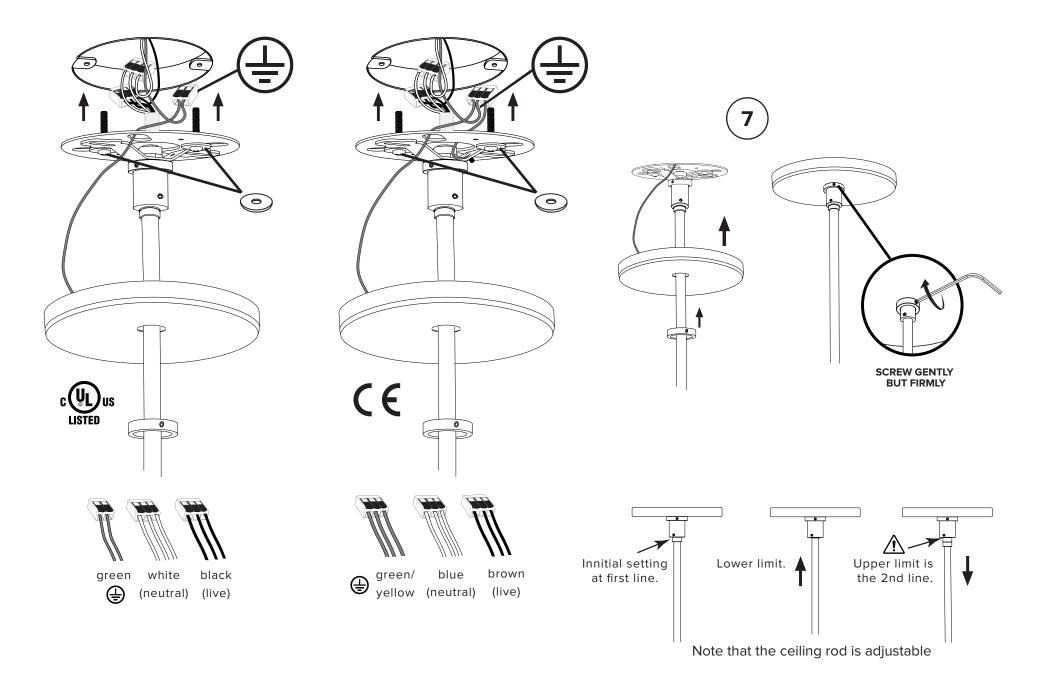







Reposition arms into their proper final positions.
These arms were turned to facilitate shipping

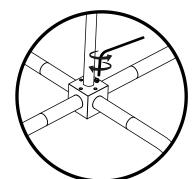


Losen set screw, resposition arm then tighten set screw gently, but firmly.

## Rotate arms shortest distance possible. Do not rotate 3/4 turn.

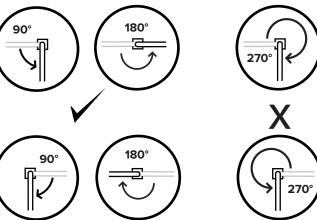

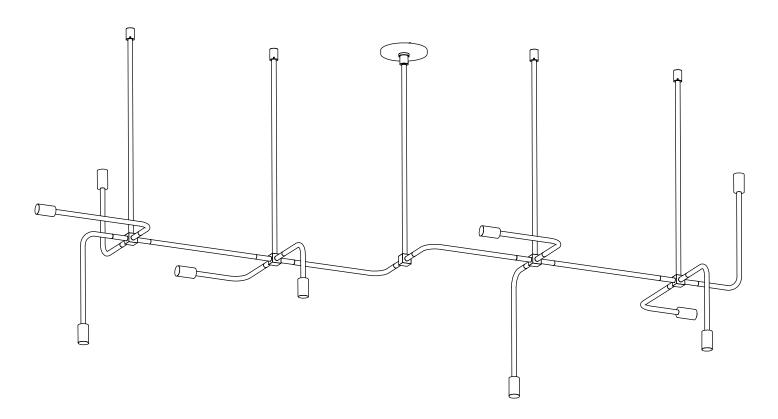

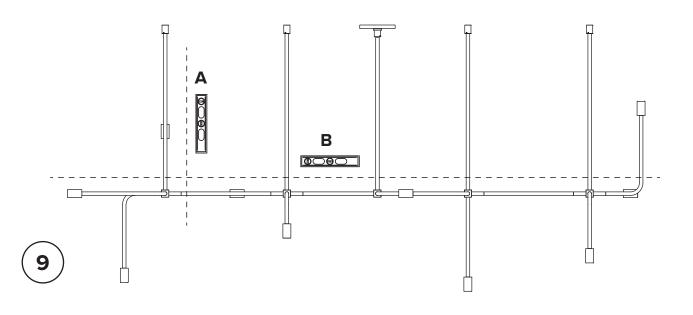



Cubes may have shifted during shipping so assure that all cubes are straight and parallel with one another



Horizontal level is adjusted by tightening and losening the ceiling mount screws.

Be sure that screws are sufficiently secured for safety

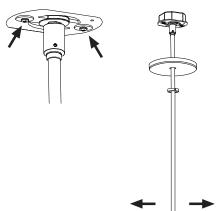

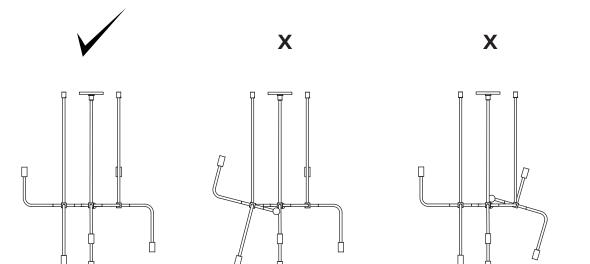

В

Vertical level is adjusted by moving the stem up and down between the two segmented lines

